

# Entering the vehicle

- The Smart key tailgate release button.

After the tailgate has opened to its set height, it can be manually raised or lowered. If the tailgate fails to open or close correctly, close it manually and then press the tailgate release switch again.

As the closing tailgate approaches the closed position, it 'soft closes' to the fully closed position. If the vehicle was previously locked, the alarm re-arms. The hazard warning lamps flash to confirm the alarm status. An audible confirmation may also be given.

**Note:** If a tailgate switch is pressed while the tailgate is opening or closing, all movement stops. However, if a switch is pressed during the 'soft close' stage, it will be ignored.

Object detection while opening: If an object is detected that would interfere with the tailgate opening, tailgate movement stops. Remove any obstructions and press the tailgate switch again to open.

Object detection while closing: If an object is detected that would interfere with a tailgate closing, tailgate movement stops and then reverses to the fully open position, if able to do so. An audible warning will be given to indicate a mislock. Remove any obstructions and if the tailgate is open, press the tailgate switch again to close the tailgate. If the tailgate is not open, press a tailgate release switch to open the tailgate, remove any obstructions. Once the obstructions have been removed, press the tailgate close switch to close the tailgate.

**Note:** If a valid Smart key cannot be detected within 1 m of the rear of the vehicle, the tailgate will not power close. An audible warning sounds to indicate a mislock.

**Note:** If the tailgate is closed manually, the vehicle searches for a valid Smart key. If no Smart key is detected within 1m of the rear of the vehicle, or a Smart key remains inside the vehicle, an audible warning sounds to indicate a mislock and the tailgate re-opens after approximately three seconds.

**Note:** If the Smart key is inadvertently left inside the loadspace and the vehicle is locked and the alarm set, an audible warning sounds to indicate a mislock and the tailgate re-opens after approximately three seconds. The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), games console, etc.

## GESTURE TAILGATE



Make sure there is sufficient space above and at the rear of the vehicle, before operating the tailgate. Insufficient opening space may result in damage to the vehicle.



Do not operate the tailgate if a cycle rack is fitted to the tailgate. Remove any cycles and/or racks before operating the tailgate.

Sensors, positioned within the outer parts of the rear bumper, recognise movement of a foot below the bumper level, and allow automatic opening or closing of a powered tailgate.