

Pressing the recirculation button deactivates automatic recirculation.

AIR QUALITY SENSOR

The sensitivity of the air quality sensor can be adjusted using the Touch screen:

1. Select **Settings** from the **Front climate** menu.
2. Touch the **LOW**, **MEDIUM** or **HIGH** soft keys on the Touch screen to select the desired sensitivity.
3. To switch Air quality sensing off, touch the **OFF** soft key.



The Auto recirculation icon appears on the Touch screen when the air quality sensor is switched on.

CLIMATE SEATS

Note: The Climate seats will only operate when the engine is running.

Climate seats are controlled from the **Home menu** or **Climate menu** on the Touch screen.

Note: Alternatively, the front Climate seats can be controlled via the rotary dials located below the Touch screen, see **88**, **CLIMATE CONTROL**.

Note: The **Front seats** menu will be displayed. If fitted, the **Rear seats** menu is also accessible.

Heated ventilation:

- Touch the UP arrow icon to switch heated ventilation on at the maximum setting (3 red bars).
- Touch the DOWN arrow icon once or twice to reduce the heated ventilation setting (2 and 1 red bars).
- Touch the DOWN arrow a third time to switch off the seat's ventilation.

Cooled ventilation:

- Touch the DOWN arrow icon to switch cooled ventilation on at the maximum setting (3 blue bars).
- Touch the UP arrow icon once or twice to reduce the cooled ventilation setting (2 and 1 blue bars).
- Touch the UP arrow a third time to switch off the seat's ventilation.

Seat zone selection:

- If fitted with Climate seats, constant selection of the **Seat zone** soft key will scroll through the three choices of seat zone; full seat, cushion, or seatback only.