


## VIDEO MEDIA PLAYER CONTROLS

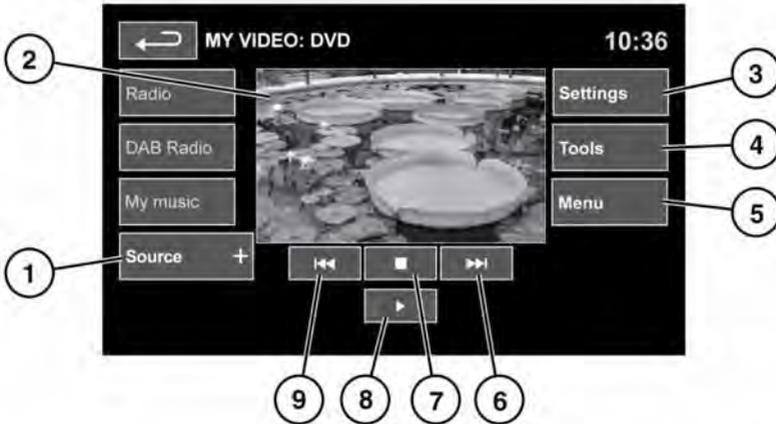

E155711

**⚠** In the interest of safety, only operate, adjust, or view the system when it is safe to do so.

**⚠** Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

**Note:** Some electronic equipment being used within the vehicle, or within close proximity to the vehicle, may affect the performance of this system (e.g., charging a device, etc.).

Press the Media menu button, or touch the Media menu soft key from the Touch screen **Home** menu and then select the **TV/My video** soft key. See **84, TOUCH SCREEN HOME MENU**.

**1. Source:** TV band/video input selection. Touch to view and select DVD, or other forms of video media (CD/USB), provided that the relevant media is present. The selected option will be displayed.

**Note:** After 5 seconds without use, the **TV/My video** menu will close.

**2.** Preview screen for video media information: Touch to select full screen mode.

Short touch the screen again to view the controls at any time.

To return to preview mode, touch and hold the full screen view.

**3. Settings:** Depending on the video media specification, there are 3 sub-menus within settings: **Options**, **VOD** (Video On Demand) and **Audio settings**.

**VOD** allows playing of DivX VOD content from a video media. The 8 digit registration code will be displayed when the VOD soft key is touched.

The player must also be registered with DivX. See **178, LICENSING**.

**4. Tools:** The following options can be selected: