

# Interior lights

**Note:** To complete the operation, move your finger at least 20 mm from the lens.

8. Rear courtesy lamps: Controlled by the settings of the front interior lamp.
9. Loadspace lamps: Automatically illuminate when the tailgate is opened.

**Note:** The interior illumination control will not operate while Stealth mode is active. See **376, DRIVER CONTROLS**.

## INTERIOR LIGHTS INTENSITY

Use the rotary control to adjust the intensity of the instrument illumination. The exterior lamps must be switched on while changes are being made. See **376, DRIVER CONTROLS**.

## AMBIENT LIGHTING

The LED ambient lighting can be adjusted for colour and intensity via the Touch screen extra features menu. The exterior lamps must be switched on while changes are being made via the Touch screen. See **84, TOUCH SCREEN HOME MENU**.

## STEALTH MODE

Stealth mode lowers the level of interior illumination to aid night time driving. Stealth mode can be enabled through the Touch screen extra features menu. See **84, TOUCH SCREEN HOME MENU**.

Once enabled, Stealth mode is activated by switching the Touch screen off, using the on/off button. See **84, TOUCH SCREEN HOME MENU**. If night time conditions exist when the Touch screen is switched off, interior switch illumination, and Instrument panel back-lighting will automatically reduce to their minimum light levels. Stealth mode will be deactivated if night time conditions no longer exist, or if the Touch screen is switched back on.