

DEACTIVATING INTELLIGENT STOP/START



To switch the Intelligent stop/start system off, press the Intelligent stop/start button. For more information, see **376, DRIVER CONTROLS**.

To confirm that the system has been switched off, the button LED will extinguish, and the message **Auto Stop/Start Off** is momentarily displayed in the Message centre.

If the Intelligent stop/start button is pressed while there is a fault with the system, or the system is inhibited by the selection of a Terrain response mode, the message **Auto stop/start Not Available** is momentarily displayed in the Message centre.

Note: *If the Intelligent stop/start button is pressed while an automatic engine stop is in progress, the engine will restart.*

Note: *The Intelligent stop/start system will automatically reactivate the next time the vehicle's ignition is switched on.*

Hybrid vehicles



To switch the Intelligent stop/start system off, press the Intelligent stop/start button. For more information, see **376, DRIVER CONTROLS**.

To confirm that the system has been switched off, the button LED will extinguish, and the message **Auto Stop/Start Off** is momentarily displayed in the Message centre. In this condition, the Hybrid system will still be available, but the engine will run continuously.

The following will prevent an engine stop:

- Low range is selected.

- The Wade sensing feature has detected that the vehicle is wading.
- The suspension is set to Off-road height.
- When certain Terrain response special programs are selected (e.g., Sand).

These scenarios are in addition to those mentioned in the Intelligent stop/start section of this handbook. See **124, INTELLIGENT STOP/START**.

Note: *The Intelligent stop/start system will automatically reactivate the next time the vehicle's ignition is switched on.*

DRIVER EXIT

Note: *The Driver exit feature is only available when Intelligent stop/start is enabled.*

To prevent the vehicle from being inadvertently left in a driveable condition, the vehicle will detect when a driver is not present, and automatically switch off the ignition system.

If Drive (**D**), Sport (**S**) or Neutral (**N**) is selected, the Driver exit feature will switch the vehicle's ignition off if the following conditions exist:

- The driver's seat belt is unbuckled, and:
- The brake pedal is released.

If Park (**P**) is selected, the Driver exit feature will switch the vehicle's ignition off, if the driver's seat belt is unbuckled.

Once the vehicle's ignition has been switched off, the vehicle can be locked, if required. See **16, SINGLE LOCKING**.