When Limousine mode is switched on, the rear passengers will have control of the total cabin's Media system, and any shared sources via the remote control.

- **6.** Lock: Touch to lock or unlock the Rear media remote control.
- **7. System**: Touch to switch the selected Rear media system on or off.
- 8. Forward/Skip for the selected screen.
- **9.** Touch to play the right rear screen's audio through the vehicle's speaker system.

**Note:** Only available when the Rear media system is in **Limo mode**.

- **10. Source**: Touch to select the Rear media source selection menu.
- **11.** Play/Pause for the selected screen.
- **12.** Touch to play the left rear screen's audio through the vehicle's speaker system.

**Note:** Only available when the Rear media system is in **Limo mode**.

- 13. Rewind/Skip for the selected screen.
- **14.** Rear media source selection menu: Touch the required media button.
- **15. Source**: Touch to return to the **Rear media** control screen.

## REAR MEDIA REMOTE CONTROL





E 151273

1. Press and release to switch off the screen.