






## LOAD CARRYING

-  Never allow passengers to travel in the loadspace under any circumstances. All vehicle occupants should be seated correctly and wear a seat belt at all times when the vehicle is in motion.
-  Always make sure objects carried within the vehicle are secured properly.

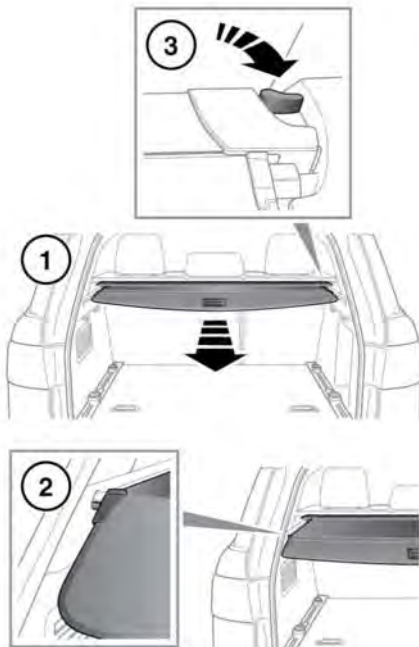


## LOADSPACE COVER



E150871

-  Do not leave the loadspace cover loose in the vehicle. During an accident or sudden manoeuvre, the loadspace cover could cause serious injury or death.
-  Never place objects on top of the loadspace cover. During an accident or sudden manoeuvre, loose objects could cause serious injury or death.

1. Pull the rigid portion of the cover to unroll.
2. Engage the end pieces into the recessed areas moulded into the loadspace sides.  
To retract the loadspace cover, disengage the ends from the recessed areas and allow the soft portion of the cover to retract into its housing.
3. To remove the cover, turn the release lever to unlock the assembly and disengage the pins from the sockets.

-  **To avoid injury, the loadspace cover must not be left in the installed position when the third row seats are occupied.**
-  Remove the stowed loadspace cover before moving the seats.
-  Do not attempt to raise the second row seats into the upright position or tip them forward for third row access. While the loadspace cover is stowed behind the second row seats, damage could result.

To refit the cover, engage the left side of the assembly into the recessed area. Engage the right side and then push down into place until an audible click is heard.