


AIRBAGS

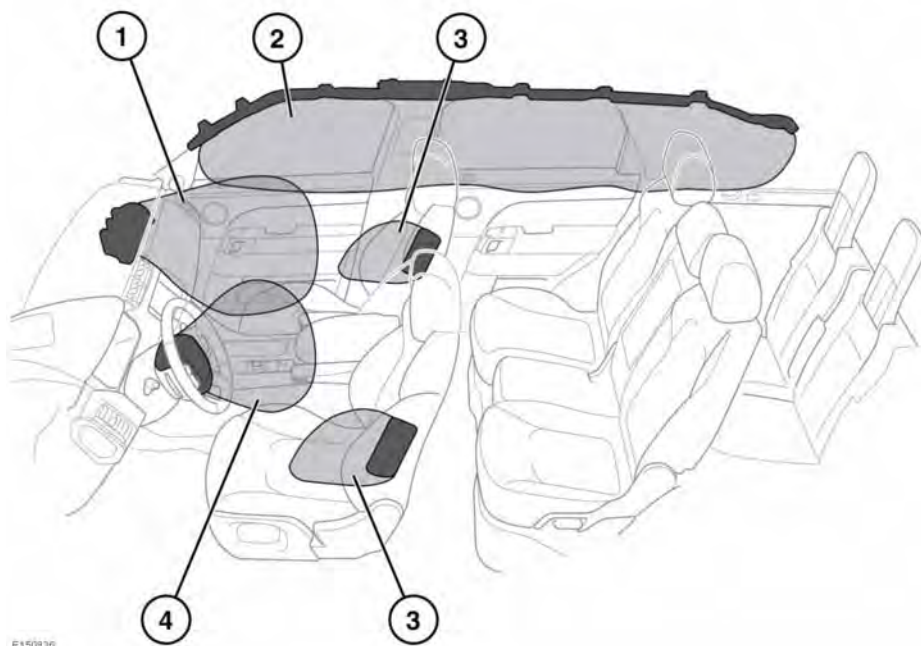

1. Passenger airbag.
2. Curtain airbag.
3. Side airbags.
4. Driver's airbag.

Note: The general location of airbags fitted to the vehicle are marked by the word AIRBAG.

Always contact your Retailer/Authorised Repairer if:

- An airbag inflates.
- The front or sides of the vehicle are damaged.
- Any part of the airbag system shows signs of cracking or damage, including trim covering the airbags.
- The amber airbag warning lamp illuminates.

AIRBAG OPERATION

Airbags provide additional protection in certain types of collision only - they do not replace the need to wear a seat belt. All occupants, in all seating positions, should always wear their seat belt, whether or not an airbag is present in that seating position.