



E176239

With the ignition off, approach the rear of the vehicle and perform a smooth upward kick movement, taking between one and two seconds, beneath one of the rear sensor areas. When a valid upward kick movement is recognised by the vehicle, the direction indicators flash and the tailgate operates. If an audible warning is given, the tailgate will not operate.

- ⚠ Make sure that the standing area is stable and not slippery, before performing the kick movement.
- ⚠ Do not make contact with the vehicle exhaust. It may be hot and cause injury.

**Note:** A valid Smart key must be within 1.2 m of the tailgate. The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smartphone, laptop (including when inside a laptop bag), games console, etc. Keep the Smart key clear of such devices when attempting hands-free tailgate operation of the powered tailgate.

**Note:** Certain conditions may affect the performance of the sensors, and movement beneath the bumper may not be detected. If this should happen, use the interior tailgate release switch or the Smart key tailgate release button. Check the operation of the Gesture tailgate when the vehicle is in a new location.

Unintentional opening: In exceptional circumstances, and if the Smart key is within 1.2 m of the tailgate, the powered tailgate may open unintentionally due to the following:

- Car washing / high pressure cleaning.
- Moving objects beneath the rear bumper sensors.
- While changing a rear road wheel.
- While fitting snow chains to the rear wheels.

## TAILGATE OPENING HEIGHT

Set the maximum opening height as required:

1. Open the tailgate to the position required as the maximum height. Press any tailgate control to stop movement at the required position. The final position can be achieved manually, if required.
2. Make sure the tailgate is stationary for at least three seconds.