


Wheel changing

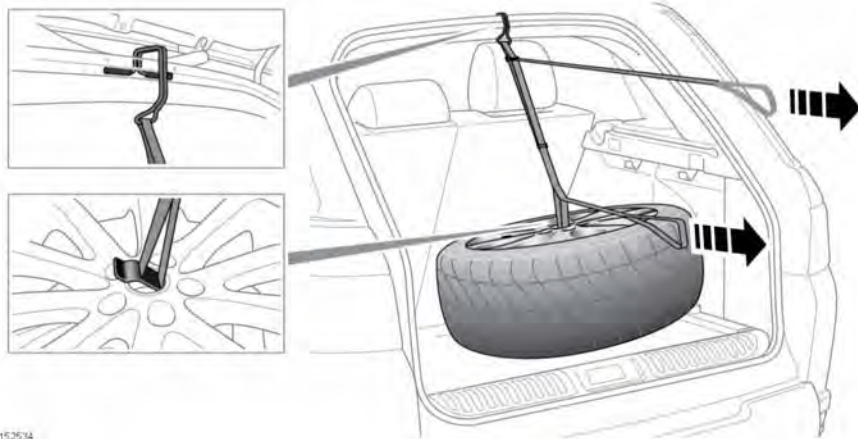

E152534

Always remove the spare wheel before jacking the vehicle.

Note: Before removing the spare wheel, take note of its stowage position. The wheel to be changed must be correctly stowed and secured in its place.

Note: The spare wheel lift assist tool is not fitted to all vehicles. For more information, contact your Retailer/ Authorised Repairer.


1. Open the tailgate. See **9, OPENING AND CLOSING THE TAILGATE/11, OPENING AND CLOSING THE POWERED TAILGATE.**
2. Remove the loadspace floor panel.
3. Remove the spare wheel retaining bolt.
4. Remove the vehicle's jack and the spare wheel lift assist tool. See **313, TOOL KIT**
5. Attach the lift assist tool, as shown.
 - Pull the upper strap to lift the spare wheel up.


- Pull the lower strap, to place the spare wheel onto the tailgate.


6. Remove the tool and carefully lift the spare wheel from the vehicle.


Note: Reverse the order to stow the changed wheel.

IMPORTANT – USE OF SPARE TYRE

 Adhere to the instructions on the temporary-use spare warning label, affixed to the wheel. Failure to do so may cause vehicle instability and/or tyre failure.

 Where fitted, the temporary-use spare wheel is **FOR TEMPORARY USE ONLY.**

 Drive with caution while the temporary-use spare wheel is fitted.

 Make sure that an original size wheel and tyre are fitted as soon as possible.