

## Warning lamps

### FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

### FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

### GEAR SHIFT (GREEN)



The gear shift indicator illuminates briefly at the recommended gear change point (up-shift).

The shift indicator will not illuminate while Cruise control is active and not being overridden by pressing the throttle pedal.

**Note:** This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.

### AUTO HIGH BEAM (GREEN)



Illuminates when the Auto high beam feature has switched on the high beam headlamps.

### HILL DESCENT CONTROL (GREEN)



Illuminates continuously when Hill Descent Control (HDC) is selected and HDC operating conditions are met.

If the lamp flashes, HDC has been selected, but the operating conditions are not being met or HDC fade-out is occurring.

### INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent stop/start system.

**Note:** Other warnings normally associated with an engine shutdown, for example, the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent stop/start system.

### LANE DEPARTURE WARNING (GREEN)



Recognised lane markings will illuminate green, otherwise they will illuminate grey. The lamp illuminates grey to confirm the Lane Departure Warning (LDW) system is enabled.

### LOW RANGE (GREEN)



Illuminates when Low range has been selected.

### SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

### TRAILER DIRECTION INDICATORS (GREEN)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.