

## Parking aids

While the vehicle is stationary, the sensors will not detect an object/person approaching from the side. Also, at vehicle start-up, the vehicle has no sensor information about side objects/persons. In both of these situations, an X displays on the Touch screen in the vehicle's blind spots.

The front, side, and outer rear sensors monitor a 1.2 m area around the vehicle. The inner rear sensors monitor a 1.8 m area at the rear of the vehicle.

The Parking aid system automatically activates when Reverse (R) gear is selected, then the front, rear, and side sensors are activated. The sensors remain active until the vehicle's speed reaches 16 km/h (10 mph).

If a forward gear is subsequently selected, the front, rear, and side sensors remain active until the vehicle's speed reaches 16 km/h (10 mph).

By pressing and holding the Parking aid switch (1) for three seconds, the Parking aid system enters into an Auto-on mode, activating the front and side sensors when the vehicle's speed decreases to less than 10 km/h (6 mph), in a forward direction. The Parking aid switch LED lamp illuminates to confirm. Auto-on mode remains active after the ignition is switched off and on again. To disable the Auto-on mode, press and hold the Parking aid switch for three seconds. The Parking aid switch LED lamp extinguishes to confirm.

**Note:** To manually enable the front and side sensors in a forward direction, press the Parking aid switch for less than three seconds. The LED lamp illuminates to confirm. Press the switch again to disable the temporary use of this setting. The LED lamp extinguishes to confirm.

**Note:** The Parking aid system is always temporarily disabled if the vehicle's speed exceeds 16 km/h (10 mph).

When objects are detected, the system emits a warning tone, which increases in frequency as the vehicle gets closer to an object. The tone becomes constant when the object is within 300 mm of the vehicle.

**Note:** The warning tone stops when the distance between the vehicle and the object remains constant.

**Note:** If the Parking aid system does not detect an object likely to come into contact with the vehicle, it does not display any tracking information on the Touch screen.

**Note:** The sensors must be kept clean to maintain accuracy and performance. See **266, SENSORS AND CAMERAS**.

### PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone is emitted and the switch indicator flashes. Also a graphic and the message **Parking Aid is not available**.

**Please consult your dealer** is displayed on the Touch screen. Contact a Retailer/Authorised Repairer as soon as possible.