TELEPHONE SYSTEM OVERVIEW



To access the **Phone** menu: Press the Phone button, or touch the Phone menu icon from the Touch screen **Home menu**. See **84, TOUCH SCREEN HOME MENU**.

- 1. Change phone: Search for a new or change to another paired phone.
- **2.** Last 10: Access the last 10 dialled, received, and missed calls.
- **3. Phonebook**: Access the downloaded phonebook.
- 4. Digit dial: Access digit dialling mode.
- 5. Touch and hold to retrieve your voicemail.
- 6. Status display: Displays the name and/or number dialled and call duration.
- 7. Call Connect/Disconnect icons. Touch to send/accept or end a call.
- 8. Settings: Access Voice mail set up, Answer options and Phone options.

- **9.** Mute microphone: Initiate **Privacy** mode. While selected, the caller will not hear you talking.
- Auto reject: When active, any incoming calls will be rejected or diverted to voicemail (depending on the connected phone settings).
- **11.Use handset**: Switch the call to your connected phone.
- **12. Delete**: Touch to delete the last entered digit, and hold to delete the whole entered number.

BLUETOOTH® INFORMATION



Bluetooth® is the name for short-range Radio Frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.