


## DUAL VIEW CONTROLS

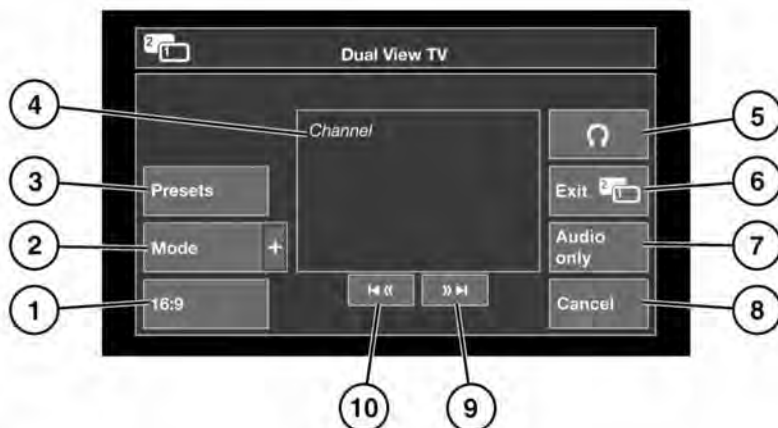

1. Select to change the picture format (4:3, Zoom, 16:9). The next available format is displayed on the soft key.

2. Select to view a list of all available video sources. Touch the relevant soft key to select an alternative source. The controls menu for that source will then be displayed.

3. Touch to select a list of preset channels.

**Note:** The preview screen will be deactivated if the vehicle is moving.

4. Information on the current video source (e.g., TV channel and programme name).

5. Select to switch wireless headphone output on or off.

6. Select to cancel Dual view: The Touch screen reverts to the menu currently in use by the driver.

7. Select to retain audio for the video source while the display reverts to the menu currently in use by the driver.

8. Select to dismiss the Dual view controls pop-up.

9. Seek up: Select to view the next channel on the channel list, or the next track on the CD or DVD.

10. Seek down: Select to view the previous channel on the channel list, or the previous track on the CD or DVD.

**Note:** If the chosen media is CD or DVD, then a play/pause soft key is displayed between the Seek soft keys.

**Note:** If the controls menu is not used for over 5 seconds, the display will revert to full screen mode. Press the Dual view button again to view the controls.

## DUAL VIEW

Dual view allows the front passenger to view TV or other video media on the Touch screen, while the driver uses an alternative system (e.g., radio or navigation).