

The vehicle can be driven, but may enter Limp-home mode with the possibility of reduced performance. Seek qualified assistance as soon as possible.

If the warning lamp flashes while the engine is running, reduce speed and seek qualified assistance urgently.

## EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

## FOLLOW MODE (AMBER)



Illuminates when the Adaptive Cruise Control (ACC) system is in Follow mode.

## GENERAL WARNING/ INFORMATION MESSAGE (AMBER)



Illuminates when a non-critical warning message or an information message is available in the Message centre.

## GLOW PLUGS (AMBER)



Illuminates when the ignition is switched on, to indicate that the glow plugs are active.

## LOW FUEL WARNING (AMBER)



Illuminates when the fuel level is low. Refuel at the earliest opportunity.

The arrow shows which side of the vehicle to locate the fuel filler flap.

## PROGRESS CONTROL SYSTEM (AMBER)



Illuminates to confirm that the Progress control system is enabled.

## REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

## TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message centre, to warn that 1 or more tyres are significantly under-inflated.

Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

## CRUISE CONTROL (GREEN)



Illuminates when Cruise control or Adaptive Cruise Control (ACC) is active.

## DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.