


RADIO CONTROLS

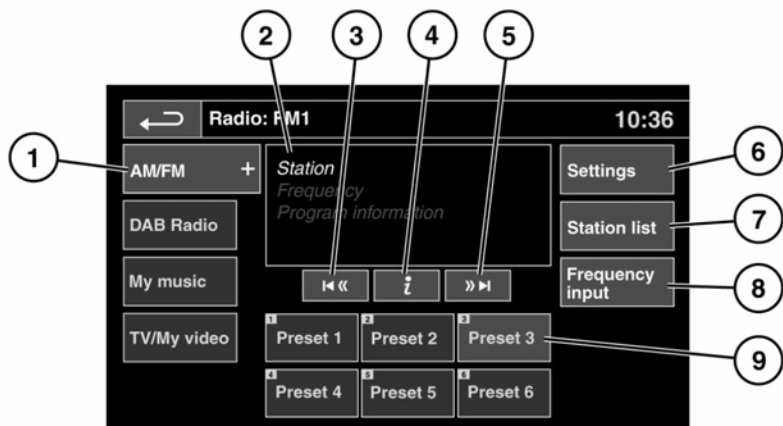

E155096



In the interest of safety, only operate or adjust the system when it is safe to do so.



Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

Note: Some electronic equipment being used within the vehicle, or within close proximity to the vehicle, may affect the performance of this system (e.g., charging a device, etc.).

Press the Media menu button, or touch the Media menu soft key from the Touch screen **Home** menu and then select the **Radio** soft key. See **84, TOUCH SCREEN HOME MENU**.

- 1. AM/FM:** Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.
- 2.** Displays information about the current station.

- 3. Seek down:**

- Short touch to auto-seek down the frequency to the next radio station.
- Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.

Note: When manual seek is selected, auto-seek cannot be selected for approximately 10 seconds.

- 4. Information:** Touch to display more information from the broadcasting station.
- 5. Seek up:**

- Short touch to auto-seek up the frequency to the next radio station.