


RADIO CONTROLS

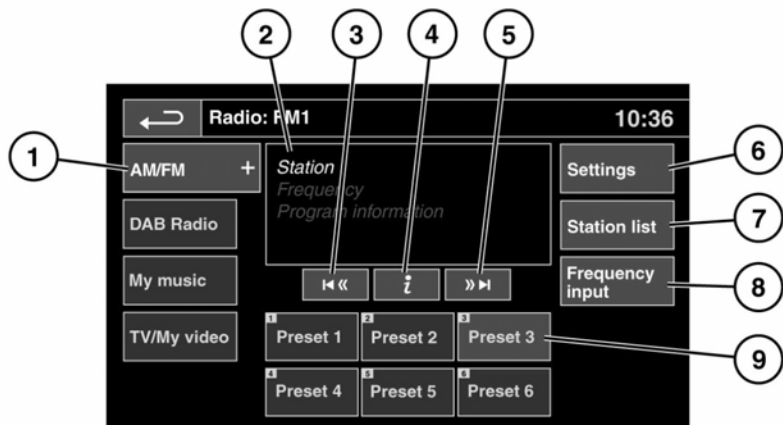

E155096

⚠ In the interest of safety, only operate or adjust the system when it is safe to do so.

⚠ Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

Note: Some electronic equipment being used within the vehicle, or within close proximity to the vehicle, may affect the performance of this system (e.g., charging a device, etc.).

Press the Media menu button, or touch the Media menu soft key from the Touch screen **Home menu** and then select the **Radio** soft key. See **84, TOUCH SCREEN HOME MENU**.

1. **AM/FM:** Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.
2. Displays information about the current station.

3. Seek down:
 - Short touch to auto-seek down the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.

Note: When manual seek is selected, auto-seek cannot be selected for approximately 10 seconds.

4. **Information:** Touch to display more information from the broadcasting station.
5. **Seek up:**
 - Short touch to auto-seek up the frequency to the next radio station.