


## Rear seats

When fully raised: Manually raise the head restraint until it latches into position.

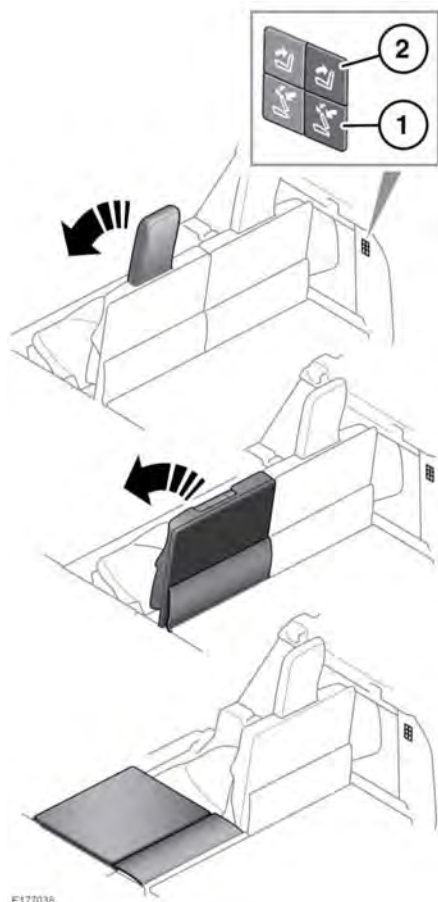

To fold and raise a third row seat from inside the loadspace:

1. To fold: Press the button once to fold the head restraint fully downwards. Press the button once again, and the seatback will fold.

2. To raise: Press to raise the seatback to the upright position.

When fully raised: Manually raise the head restraint until it latches into position.

**Note:** If the electric seats are operated more than 3 times through the full fold/raise sequence in quick succession, the system will be disabled for 2 minutes.



**The head restraint must always be raised when using the third row seats.**



**Make sure that when the head restraint is raised, the locking mechanism is fully engaged.**



The head restraint must always be folded down before folding the seatback.

### RESTRICTED REAR SEAT TRAVEL



If electric seat movement stops unexpectedly during folding or raising, check for and remove any obstructions.

Once any obstructions have been removed, continue the seat movement by pressing the appropriate fold/raise button.

**Note:** If no obstructions can be seen, and normal movement cannot be carried out, contact your Retailer/Authorised Repairer.

E177038