


Rear seats

When fully raised: Manually raise the head restraint until it latches into position.

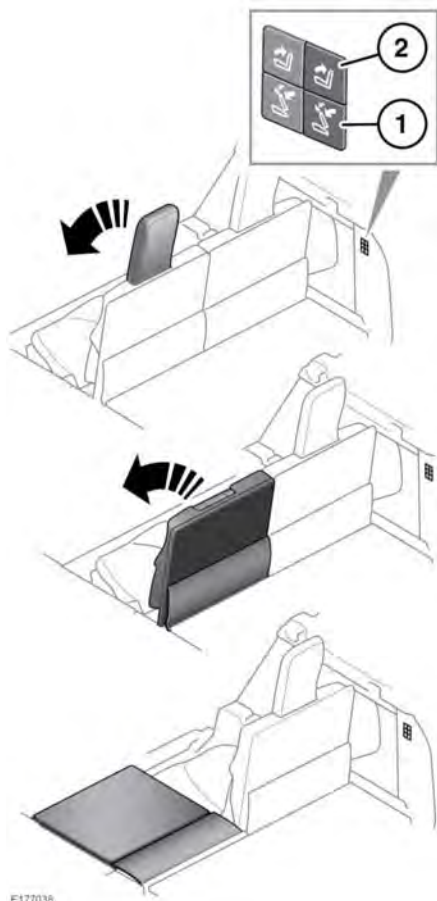

To fold and raise a third row seat from inside the loadspace:

1. To fold: Press the button once to fold the head restraint fully downwards. Press the button once again, and the seatback will fold.

2. To raise: Press to raise the seatback to the upright position.

When fully raised: Manually raise the head restraint until it latches into position.

Note: If the electric seats are operated more than 3 times through the full fold/raise sequence in quick succession, the system will be disabled for 2 minutes.

⚠ The head restraint must always be raised when using the third row seats.

⚠ Make sure that when the head restraint is raised, the locking mechanism is fully engaged.

! The head restraint must always be folded down before folding the seatback.

RESTRICTED REAR SEAT TRAVEL

! If electric seat movement stops unexpectedly during folding or raising, check for and remove any obstructions.

Once any obstructions have been removed, continue the seat movement by pressing the appropriate fold/raise button.

Note: If no obstructions can be seen, and normal movement cannot be carried out, contact your Retailer/Authorised Repairer.