

Fluid level checks

- ⚠ **If the fluid comes into contact with the skin or eyes, rinse immediately with plenty of clean water.**
- ❗ Do not start the engine if the fluid level has dropped below the **MIN** mark. Severe damage to the Dynamic response system could result.
- ❗ Seek qualified assistance immediately, if there is a noticeable drop in the fluid level.
- ❗ If fluid loss is slow, the reservoir may be topped up to the upper level mark, to enable the vehicle to be driven to a repair facility for examination. However, it is recommended that you seek qualified assistance before driving the vehicle.
- ❗ Do not attempt to drive the vehicle to a repair facility, if there is a danger that leaking fluid will come into contact with a hot surface, such as the exhaust.

Check and top up the fluid level with the engine switched off and the system cold.




E150756

The fluid level should be maintained between the **MIN** and **MAX** marks.

TOPPING UP THE DYNAMIC RESPONSE FLUID

- ❗ Dynamic response fluid will damage painted surfaces. Soak up any spillage with an absorbent cloth immediately, and wash the area with a mixture of car shampoo and water.
- ❗ Do not fill the reservoir above the **MAX** mark.

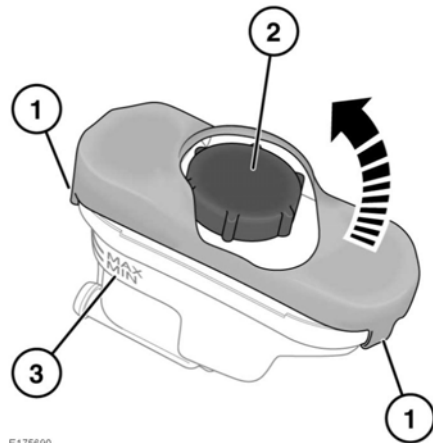

E175690

1. Release the clips and move the reservoir cover aside.
2. Before removing the filler cap, clean the immediate area to prevent dirt from entering the reservoir.
3. Using the approved fluid, top up the reservoir until the fluid level is between the **MIN** and **MAX** marks. See **330, LUBRICANTS AND FLUIDS**.

When the fluid is at the correct level, replace the filler cap and the reservoir cover.