


## RADIO CONTROLS

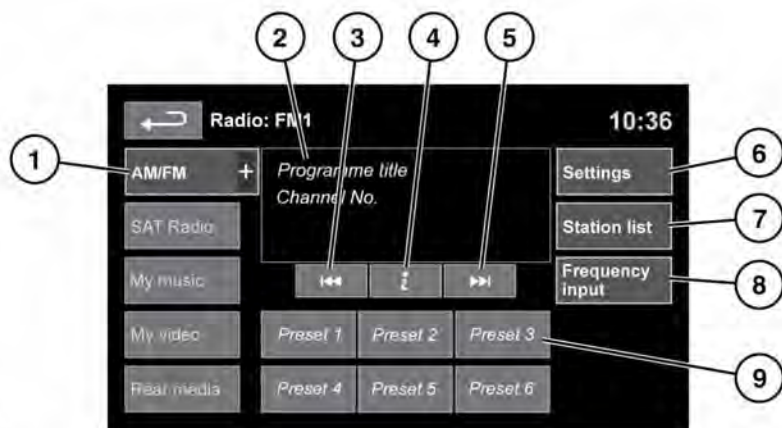

### ⚠ WARNING

Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing injury or death.

### ⚠ WARNING

**Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.**

**Note:** Some electronic equipment being used within the vehicle, or within close proximity to the vehicle, may affect the performance of this system (e.g., charging a device, etc.).

Press the Media menu button, or touch the Media menu soft key from the Touch screen **Home menu** and then select the **Radio** soft key. See **85, TOUCH SCREEN HOME MENU**.

- 1. AM/FM:** Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.
- 2.** Displays information about the current station.
- 3. Seek down:**
  - Short touch to auto-seek down the frequency to the next radio station.
  - Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.

**Note:** When manual seek is selected, auto-seek cannot be selected for approximately 10 seconds.

4. **Information:** Touch to display more information from the broadcasting station.
5. **Seek up:**
  - Short touch to auto-seek up the frequency to the next radio station.
  - Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
6. **Settings:** Touch to view and activate/deactivate the following features:  
**RBDS and HD Radio.** See **171, RADIO BROADCAST DATA SYSTEM (RBDS).**
7. **Station list (FM only):** Select to view a list of available stations on the waveband. The list can be sorted by **Frequency, Name, or Category** (pop, news, sport, etc.) by selecting the appropriate soft key. Touch to select the chosen station.  
If the stations are sorted by category, touch the chosen category to view and select a corresponding station.
8. **Frequency input:** Select to enter a known frequency of a station on the current waveband, using the numeric keypad that appears. Select **OK**, or wait for 2 seconds to tune to the entered frequency.
9. **Presets:** Each waveband has 6 preset positions.
  - Touch and release to tune to the station stored on that preset.
  - Touch and hold to store the current station on that preset (the radio will mute while the station is stored, and then beep).

- Use the seek buttons on the steering wheel to change to the next or previous preset station.

## RADIO BROADCAST DATA SYSTEM (RBDS)

The radio is equipped with an RBDS, which enables the Media system to receive extra information with normal FM radio signals.

**Note:** *Not all FM radio stations broadcast RBDS information.*

Select **Settings** from the **Radio** menu, then select **RBDS On** to view or alter the RBDS settings:

- **RBDS station name display:** The station name will not display if it is not available from the broadcaster or if RBDS is unavailable due to a loss of reception.
- **RBDS enables stations to be categorized by programme type, e.g., rock music, current affairs, news, etc.**  
The list is then available to view via the **Station list** soft key.

**Note:** *If the selected station is equipped with HD Radio™ technology and HD Radio is switched on (see **173, HD RADIO TECHNOLOGY**), the HD Radio service name and programme information will be displayed.*

## ALERTS

The **ALERT!** option in the **Category** section of the **Station list** will alert you to a crisis of national or international importance. Any radio broadcast, or other audio playback, will be interrupted. When such a broadcast is made, an ALERT pop-up will be displayed on the Touch screen. The pop-up can be canceled, but the audio alert will continue to broadcast until finished, or until the radio station or audio source is changed.