


## CLIMATE CONTROL

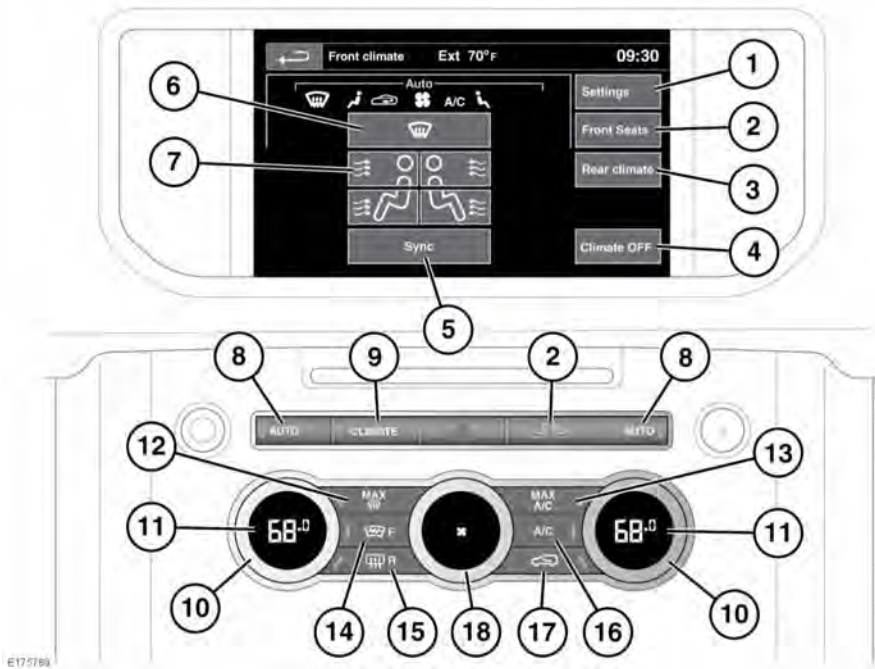

Press the **CLIMATE** button to access the Climate control Touch screen menu.

1. Climate control settings menu.
2. Climate seat menu.  
*Note: Heated/Climate seats operate only when the engine is running.*
3. **Rear climate** menu.
4. Climate control system ON/OFF.
5. Synchronizes all climate zones to the driver's settings.
6. Distributes air to the windshield.
7. Air distribution.

**Note:** More than one setting may be selected at a time, to achieve the desired distribution.

8. **AUTO**: Press to automatically maintain the cabin's comfort based on the selected temperature.
9. **CLIMATE** button: Shortcut to the Touch screen Front climate menu.
10. Temperature controls: For individual driver/passenger settings.
11. Press to switch between seat temperature control and cabin temperature control.

# Heating and ventilation

**Note:** The Climate seats can also be controlled on the Touch screen, see **91, CLIMATE SEATS**.

- Vehicles with Heated seats: Rotate the temperature control dial (11) clockwise to increase the seat temperature. Rotate the dial counter-clockwise to reduce the seat temperature or switch off the Heated seat.
- Vehicles with Climate seats: Rotate the temperature control dial (11) clockwise to increase the seat temperature. Rotate the dial counter-clockwise to reduce the seat temperature.

**Note:** The Climate seat can be switched off by selecting the central temperature setting.

12. Maximum defrost program.
13. Maximum Air Conditioning (A/C) program.
14. Heated windshield: The heated windshield activates for a predetermined length of time.
15. Heated rear screen: The heated rear screen activates for a predetermined length of time.

## **NOTICE**

*Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the rear screen.*

16. Air Conditioning (A/C).
17. Air recirculation: Press for timed air recirculation. Press and hold for latched (continuous) air recirculation. To cancel air recirculation, press the button again.

**Note:** Prolonged use at low temperatures may cause the windows to fog.

18. Blower speed control: In manual mode, the current speed selection is indicated in the integrated screen on the blower speed control. To switch Climate control off, rotate fully counter-clockwise, stop and then rotate counter-clockwise again.

**Note:** An indicator lamp in the switch illuminates when the function is selected.

**Note:** To help keep the windows clear of ice, close the center face-level vent and direct air flow from the outer face-level vents towards the side windows.

**Note:** The Climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form but this is normal and no cause for concern.

## **AUTOMATIC RECIRCULATION**

If an air quality sensor is fitted, the Climate control system monitors exterior air pollution and selects recirculation if it reaches a predetermined level. This feature only operates when selected from the **Settings** menu. Recirculation sensitivity can also be changed in the **Settings** menu. See **90, AIR QUALITY SENSOR**.

Pressing the recirculation button deactivates automatic recirculation.

## **AIR QUALITY SENSOR**

The sensitivity of the air quality sensor can be adjusted using the Touch screen:

1. Select **Settings** from the **Front climate** menu.

2. Touch the **LOW**, **MEDIUM** or **HIGH** soft keys on the Touch screen to select the desired sensitivity.
3. To switch Air quality sensing off, touch the **OFF** soft key.



The Auto recirculation icon appears on the Touch screen when the air quality sensor is switched on.

## CLIMATE SEATS

**Note:** The Climate seats will only operate when the engine is running.

Climate seats are controlled from the **Home menu** or **Climate menu** on the Touch screen.

**Note:** Alternatively, the front Climate seats can be controlled via the rotary dials located below the Touch screen, see **89**, **CLIMATE CONTROL**.

**Note:** The **Front seats** menu will be displayed. If fitted, the **Rear seats** menu is also accessible.

### Heated ventilation:

- Touch the UP arrow icon to switch heated ventilation on at the maximum setting (3 red bars).
- Touch the DOWN arrow icon once or twice to reduce the heated ventilation setting (2 and 1 red bars).
- Touch the DOWN arrow a third time to switch off the seat's ventilation.


### Cooled ventilation:

- Touch the DOWN arrow icon to switch cooled ventilation on at the maximum setting (3 blue bars).
- Touch the UP arrow icon once or twice to reduce the cooled ventilation setting (2 and 1 blue bars).
- Touch the UP arrow a third time to switch off the seat's ventilation.

### Seat zone selection:

- If fitted with Climate seats, constant selection of the **Seat zone** soft key will scroll through the three choices of seat zone; full seat, cushion, or seatback only.

## SEAT MASSAGE

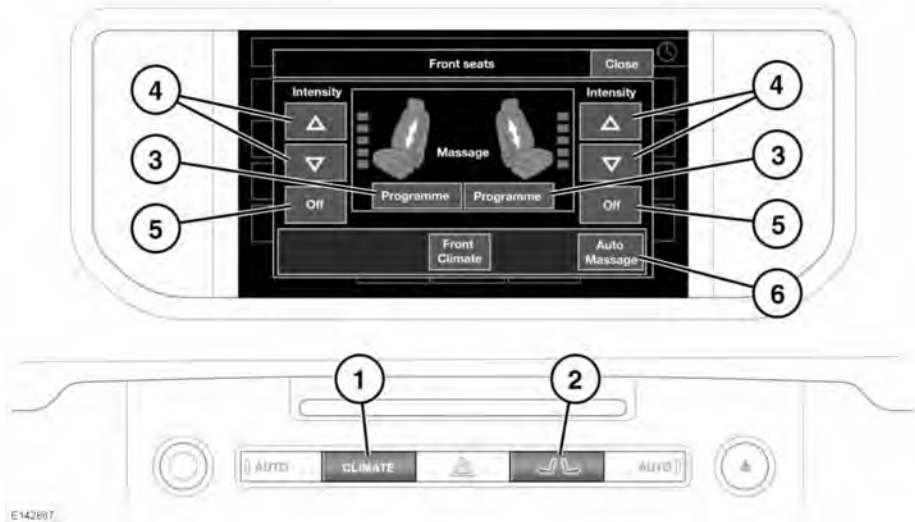

**Note:** Seat massage may not operate when the vehicle's interior temperature is below 32°F or above 122°F (0°C or 50°C respectively).


Seat massage is controlled through the Touch screen. Either:

1. Press to display the **Front Climate** menu. Touch the **Front Seats** soft key, then touch the **Massage** soft key or;
2. Press to display the Front seats pop-up menu, and then touch the **Massage** soft key.
  - The pop-up menu screens will overlay the current screen. They will time-out after a short period and the previous menu screen will be displayed.
3. Touch to display the desired Seat massage program. Constant selection will scroll through the 5 different programs.

4. Touch to vary the intensity of the selected program.
5. Touch to end the program.
6. Touch to display a menu which allows the driver's seat auto massage to be switched **On** or **Off** and to set the time delay from the start of the trip to **5, 15, 30** or **60** minute intervals.

After 10 minutes, Seat massage will stop automatically.

## REAR CLIMATE CONTROL

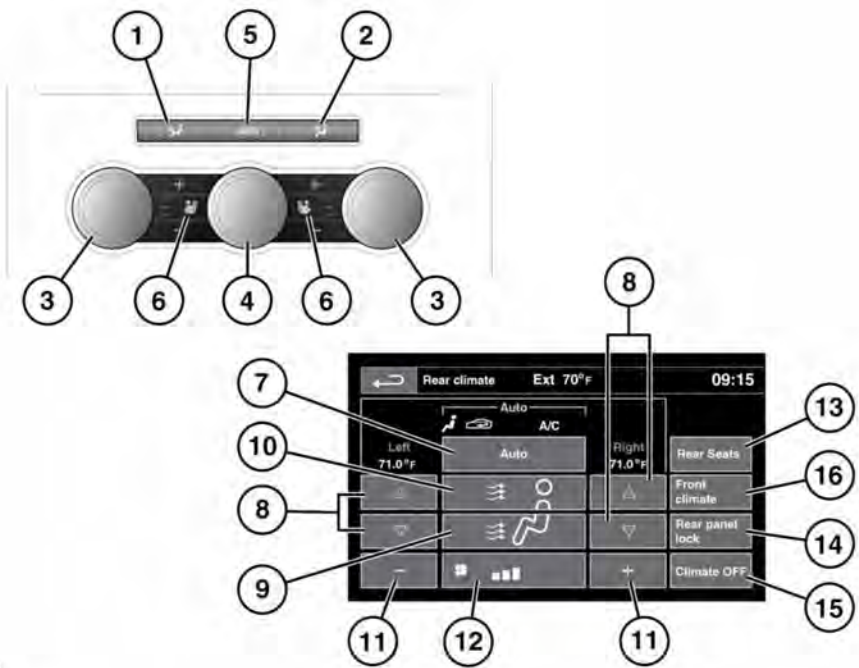

E153919

There are two types of Rear climate control: 3 Zone and 4 Zone. All of the 3 Zone controls will affect the whole of the rear passenger compartment. 4 Zone allows independent control of each side.

To access the Rear climate Touch screen menu, select **Rear climate** from the **Front climate** menu.

**Note:** When **DEFROST** is selected at the front, rear control is suspended until the defrost program ends.

**Note:** When the **SYNC** button is selected on the **Front climate** screen, the rear zones are controlled by the driver's settings.

**Note:** More than one setting may be selected at a time, to achieve the desired air distribution.

1. Air distribution to the feet: Press to switch on/off. The button LED indicator lamp will illuminate when ON.
2. Air distribution to the face: Press to switch on/off. The button LED indicator lamp will illuminate when ON.
3. Temperature controls: Rotate to adjust between 61°F - 82°F (16°C - 28°C). The temperature selection is displayed on the Touch screen's **Rear climate** menu.

# Heating and ventilation

4. Blower speed control: Rotate to adjust.
5. Press **AUTO** to select fully automatic operation. The system adjusts the heat output, blower speed, air intake and airflow distribution, to maintain the selected temperature(s) without further adjustments. The air distribution and blower controls may be operated independently, to override the automatic mode. If you do this, the indicator lamp on the switch goes out. Press again to return to fully automatic operation.
6. Heated/Climate seats temperature controls. Select the upper button to increase and the lower button to decrease the temperature. The 3 bar light display shows the temperature status.
7. Touch to select **AUTO** mode on/off.
8. Temperature controls: Select the red arrow to increase and the blue arrow to decrease the temperature. The temperature settings are displayed above the arrows.
9. Air distribution to the feet: Touch to switch on/off.
10. Air distribution to the face: Touch to switch on/off.
11. Blower speed control: Touch the + or the - soft key to adjust the blower speed.
12. Blower speed status indicator.
13. Touch **Rear Seats** to adjust the Heated/Climate seats temperature settings.
14. Touch **Rear panel lock** to disable the Rear climate control switches, to prevent the rear passengers from adjusting the Rear climate settings. Select again to re-enable the controls.

15. Touch **Climate OFF** to stop air flowing to the rear of the cabin.

16. Touch **Front climate** to open the **Front climate** menu.

In addition to the selectable controls, the Rear climate menu displays symbols that indicate the status of the heating and ventilation functions.

**Note:** *If the Climate control system is switched OFF, pressing a rear AUTO button will switch the Climate control system ON, unless disabled by the rear panel lock.*