


## MANUAL SEATS

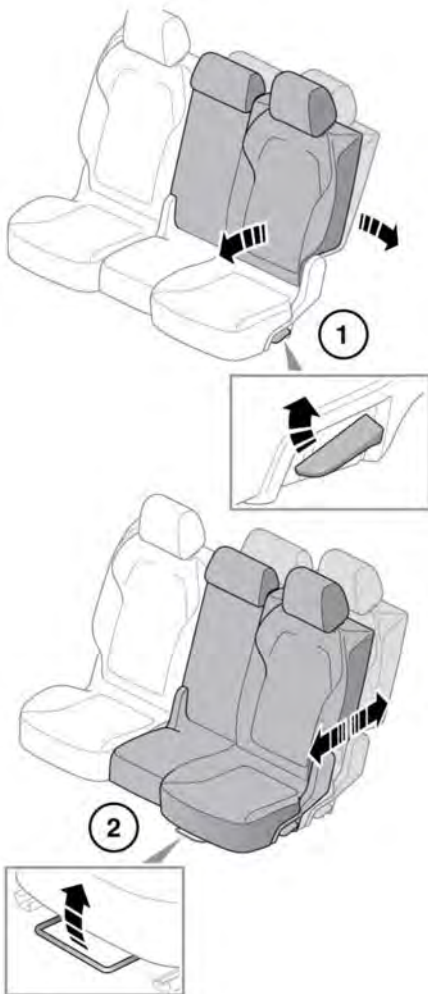

E177087

1. To adjust the seatback angle: Lift and hold the adjustment lever, and move the seatback to the desired angle. Then release the adjustment lever.

2. To move the seat forwards or backwards: Lift the bar, and move the seat to the desired position. Then release the bar.

## FOLDING AND RAISING THE REAR SEATS

### **⚠WARNING**

Never allow passengers to ride in the cargo area. In a collision, people riding in these areas are more likely to be seriously injured or killed. Do not allow anyone to ride in any area of your vehicle that is not equipped for passengers. Make sure that everyone in your vehicle is in a seat and using their seat belt properly.

### **⚠WARNING**

In a collision or sudden stop, unsecured objects could be thrown inside the vehicle striking and injuring occupants. Always properly store and secure cargo and other objects in the vehicle.

The split-fold rear seat can be folded to accommodate large loads, or partially folded to accommodate large loads and still retain seating for passengers.

## Rear seats



E149769

To fold the seatback: Raise the release lever, the seatback will fold down against the seat cushion.

To raise the seatback: Lift the seatback, and raise it to the upright position, making sure the seatback is locked firmly into the upright position.

### **⚠WARNING**

Make sure that when the seatback is raised, the locking mechanism is fully engaged.

### **⚠WARNING**

When raising the seatback, make sure the seat belts are correctly routed into the seat belt guides and not trapped behind the seats.

### **⚠WARNING**

Make sure the head restraints are raised to the correct position before the seats are used by a passenger.

## REAR SEAT ACCESS



E 150895

To access the third row seats:

1. Pull the seatback lever forwards.
2. Fold the seatback forward.
3. Slide the seat forwards.

To return the seat to the upright position, slide the seat rearward and raise the seatback until the latching mechanism clicks into position.

### **⚠WARNING**

Make sure that when the seatback is raised, the locking mechanism is fully engaged.

**⚠WARNING**

When raising the rear seats, make sure that the seat belts are correctly routed into the seat belt guides and not trapped behind the seats.

**⚠WARNING**

Make sure the head restraints are raised to the correct position before the seats are used by a passenger.

**FOLDING AND RAISING THE THIRD ROW SEATS****⚠WARNING**

To avoid injury, the loadspace cover must not be left in the installed position when the third row seats are occupied.

**⚠WARNING**

Beware of trapping fingers when raising and lowering the third row seat.

**⚠WARNING**

When raising the rear seats, make sure the seat belts are correctly routed into the seat belt guides and not trapped behind the seats.

**⚠WARNING**

Make sure nothing has been left under the third row seat or in the footwell, when folding down the seat, as this could cause damage to the item or the seat.

**⚠WARNING**


Always make sure that objects carried in the vehicle are secured properly.

**⚠WARNING**

Never allow passengers to travel in the loadspace, under any circumstances.

The third row seats can be folded or raised individually using the buttons located behind the second row seats, or inside the loadspace.

**Note:** The loadspace cover must be removed before folding or raising the third row seats. This can be stored in the loadspace.

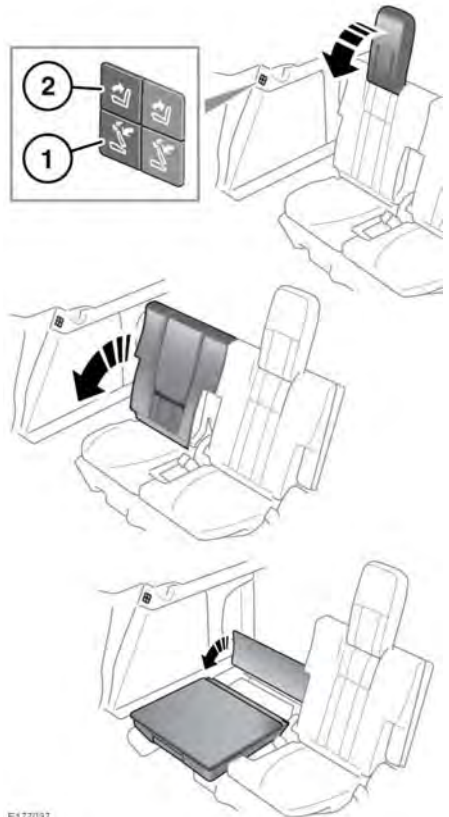


E117037

## Rear seats

To fold and raise a third row seat from inside the vehicle:

1. To fold: Press the button once to fold the head restraint fully downwards. Press the button once again, and the seatback will fold.
2. To raise: Press to raise the seatback to the upright position. When fully raised: Manually raise the head restraint until it latches into position.

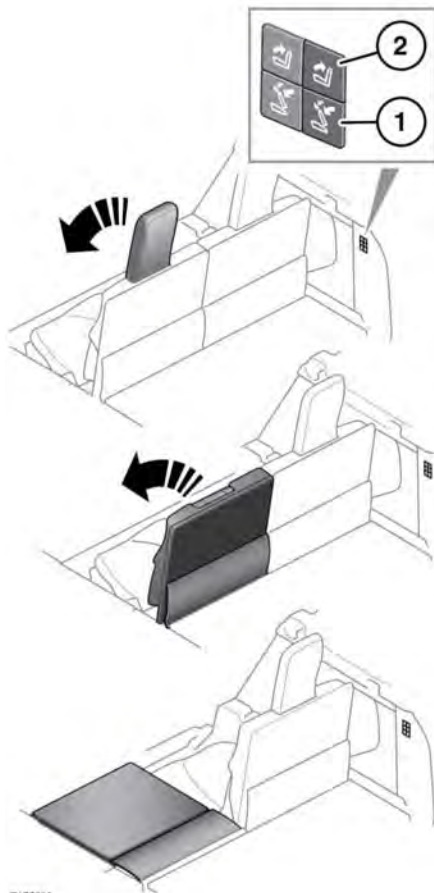

E177038

To fold and raise a third row seat from inside the loadspace:

1. To fold: Press the button once to fold the head restraint fully downwards. Press the button once again, and the seatback will fold.
2. To raise: Press to raise the seatback to the upright position. When fully raised: Manually raise the head restraint until it latches into position.

**Note:** If the electric seats are operated more than 3 times through the full fold/raise sequence in quick succession, the system will be disabled for 2 minutes.

### **⚠ WARNING**

The head restraint must always be raised when using the third row seats.

### **⚠ WARNING**

Make sure that when the head restraint is raised, the locking mechanism is fully engaged.

### **NOTICE**

The head restraint must always be folded down before folding the seatback.

## RESTRICTED REAR SEAT TRAVEL

### **NOTICE**

If electric seat movement stops unexpectedly during folding or raising, check for and remove any obstructions.

Once any obstructions have been removed, continue the seat movement by pressing the appropriate fold/raise button.

**Note:** If no obstructions can be seen, and normal movement cannot be carried out, contact your Retailer/Authorized Repairer.