


TIRE MARKINGS

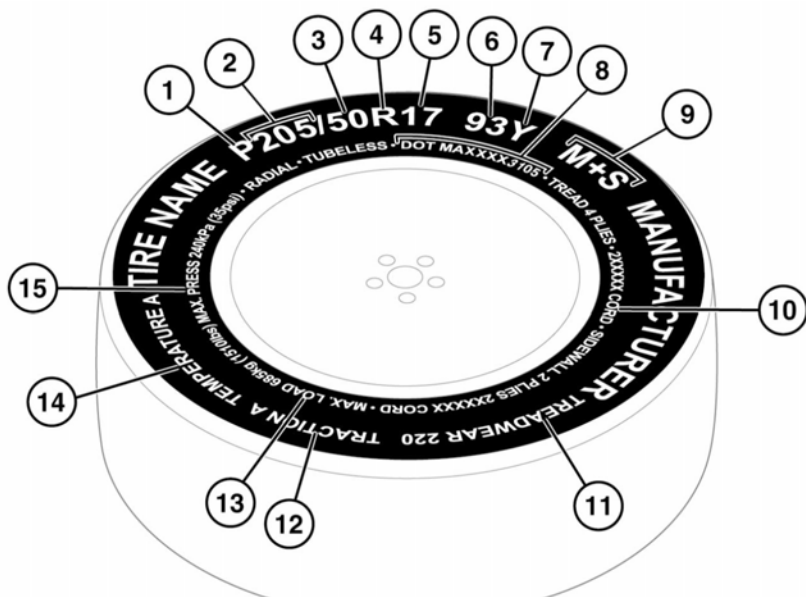

E135318

1. **P** indicates that the tire is for passenger vehicle use. This index is not always shown.
2. The width of the tire from sidewall edge to sidewall edge in millimeters.
3. The aspect ratio, also known as the profile, gives the sidewall height as a percentage of the tread width. So, if the tread width is 205 mm and the aspect ratio is 50, the sidewall height will be 102 mm.
4. **R** indicates that the tire is of Radial ply construction.
5. The diameter of the wheel rim given in inches.
6. The load index for the tire. This index is not always shown.

⚠ WARNING

The load index and speed rating on all replacement tires should be, at least, the same specification as the original equipment. If in doubt consult a Land Rover Retailer/Authorized Repairer.

7. The speed rating denotes the maximum speed at which the tire should be used for extended periods. See **283, SPEED RATINGS**.

8. U.S. DOT Tire Identification Number (TIN). This begins with the letters DOT and indicates that the tire meets all federal standards. The next 2 numbers or letters are the plant code where the tire was manufactured, the last 4 numbers are the date of manufacture. For example, if the number was 3109, the tire was made in the 31st week of 2009. The other numbers are marketing codes used at the manufacturer's discretion. This information can be used to contact consumers if a tire defect requires a recall.
9. **M+S** or **M/S** indicates that the tire has been designed with some capability for mud and snow.
10. The number of plies in both the tread area, and the sidewall area, indicates how many layers of rubber coated material make up the structure of the tire. Information is also provided on the type of materials used.
11. Wear rate indicator. A tire rated at 400 for example, will last longer than a tire rated at 200.
12. The traction rating grades a tire's performance when stopping on a wet road surface. The higher the grade, the better the braking performance. The grades, from highest to lowest are; **AA, A, B** and **C**.
13. The maximum load which can be carried by the tire.
14. Heat resistance grading. The tire's resistance to heat is grade **A, B** or **C**, with **A** indicating the greatest resistance to heat. This grading is provided for a correctly inflated tire, which is being used within its speed and loading limits.
15. The maximum inflation pressure for the tire. This pressure should not be used for normal driving. See **289, AVOIDING FLAT SPOTS**.

SPEED RATINGS

Rating	Speed mph (km/h)
Q	99 (160)
R	106 (170)
S	112 (180)
T	118 (190)
U	124 (200)
H	130 (210)
V	149 (240)
W	168 (270)
Y	186 (300)

NOTICE

Ultra High Performance Tires: This vehicle may be equipped with Ultra High Performance (UHP) tire and wheel combinations designed to provide maximum dry road performance with consideration for hydroplaning resistance. These low profile high speed rated tires may be more susceptible to damage from road hazards. UHP tires have performance enhancing soft rubber tread compounds, which when driven aggressively experience rapid tread wear and shorter life than less performance oriented tires. These tires are not recommended for driving on snow or ice, and should be replaced with winter tires when weather conditions dictate.

TIRE CARE

WARNING

Do not drive the vehicle if a tire is damaged, excessively worn, or incorrectly inflated. A tire in such a condition may catastrophically fail and cause an accident.

WARNING

Avoid contaminating the tires with vehicle fluids as they may damage the tire and cause a tire failure, which can result in an accident.

WARNING

Avoid spinning the wheels. The forces released can damage the structure of the tire, and cause it to fail.

WARNING

If wheel spin is unavoidable due to a loss of traction (in deep snow for example), do not exceed the 30 mph (50 km/h) point on the speedometer. Do not allow anyone to stand near or directly behind a tire that might spin.

WARNING

Do not exceed the maximum pressure stated on the sidewall of the tire.

Note: Tire condition should be checked after the vehicle has been used off-road. As soon as the vehicle returns to a normal, hard, road surface, stop and check for tire damage.

All of the vehicle's tires (including the spare) should be checked regularly for damage, wear and distortion. If you are in any doubt about the condition of a tire, have it checked immediately by a tire repair center or your Retailer/Authorized Repairer.

TIRE PRESSURE LABEL



The recommended tire pressures are listed on a label located in the driver's door opening.

These pressures provide optimum ride and handling characteristics for all normal operating conditions.

- The label contains the following information:
 - The maximum number of occupants, divided between the front and rear of the vehicle.
 - The vehicle capacity weight, which includes the weight of the driver, passengers and cargo.
 - Cold inflation pressures for the front, rear and spare tires.
 - The size of the tires with which the vehicle was originally equipped.

Note: The labels must not be changed, even if different wheels and tires are fitted at a later stage.

TIRE PRESSURES

WARNING

All tire pressures, including the spare, should be checked regularly using an accurate pressure gauge, when the tires are cold. Failure to properly maintain your tire pressures could increase the risk of tire failure, resulting in a loss of vehicle control and potential personal injury.

⚠ WARNING

Pressure checks should be carried out only when the tires are cold, and when the vehicle has been stationary for more than three hours. A hot tire, at or below recommended cold inflation pressure is dangerously under-inflated.

⚠ WARNING

Never drive your vehicle if the tire pressures are incorrect. Under-inflation causes excessive flexing and uneven tire wear. This can lead to sudden tire failure. Over-inflation causes harsh ride, uneven tire wear and poor handling.

⚠ WARNING

Do not drive the vehicle with a punctured tire. Even if the punctured tire has not deflated, it is unsafe to use, as the tire may deflate suddenly at any time.

⚠ WARNING

Under-inflation also reduces fuel efficiency and tire tread life and may affect the vehicle's handling and stopping ability.

⚠ WARNING

If the vehicle has been parked in strong sunlight, or used in high ambient temperatures, do not reduce the tire pressures. Move the vehicle into the shade and allow the tires to cool before rechecking the pressures.

Check the tires, including the spare, for condition and pressure on a weekly basis and before long trips.

If tire pressures are checked while the vehicle is inside a protected covered area (e.g. a garage) and subsequently driven in lower outdoor temperatures, tire under-inflation could occur.

A slight pressure loss occurs naturally with time. If this exceeds 2 psi (0.14 bar) per week, have the cause investigated and rectified by qualified personnel.

If it is necessary to check tire pressures when the tires are warm, you should expect the pressures to have increased by up to 4 - 6 psi (0.3 - 0.4 bar). Do not reduce the tire pressures to the cold inflation pressure under these circumstances. Allow the tires to cool fully before adjusting the pressures.

Normal tire pressures up to Gross Vehicle Weight(GVW)

Tire size	Front pressures psi (bar)	Rear pressures psi (bar)
235/65 R19 109 V	38 (2.6)	45 (3.1)
255/55 R20 110 Y	37 (2.5)	44 (3.0)
275/45 R21 110 Y	37 (2.5)	44 (3.0)
275/45 R21 110 Y (SVR only)	40 (2.7)	47 (3.2)
275/40 R22 108 Y	37 (2.5)	44 (3.0)

Normal tire pressures up to Gross Vehicle Weight(GVW)		
Tire size	Front pressures psi (bar)	Rear pressures psi (bar)
295/40 R22 112 Y (SVR only)	40 (2.7)	47 (3.2)
T195/70 R20 116 M Temporary use	61 (4.2)	61 (4.2)

Light load (Comfort) tire pressures Up to 4 passengers at 150 lb each plus 33 lb of luggage each (68 kg plus 15 kg)		
Tire size	Front pressures psi (bar)	Rear pressures psi (bar)
235/65 R19 109 V	34 (2.3)	37 (2.5)
255 55 R20 110 Y	34 (2.3)	37 (2.5)
275/45 R21 110 Y	34 (2.3)	37 (2.5)
275/45 R21 110 Y (SVR only)	34 (2.3)	37 (2.5)
275/40 R22 108 Y	34 (2.3)	37 (2.5)
295/40 R22 112 Y (SVR only)	34 (2.3)	37 (2.5)
T195/70 R20 116 M Temporary use	61 (4.2)	61 (4.2)
Never exceed the total weight of passengers and luggage while using the Comfort setting.		

WARNING

If the tires are deflated to the light load (Comfort) setting or inflated to the heavier normal load setting, then the TPMS will have to be adjusted to suit the vehicle load and tire pressures. See 299, VEHICLE LOADING.

WARNING

The loading of the vehicle should always be considered when checking and adjusting tire pressures.

The following procedure should be used to check and adjust the tire pressures.

NOTICE

To avoid damaging the valves do not apply excessive force or side ways force on the gauge/inflator.

NOTICE

To avoid damage to TPMS valves, it is recommended not to use rigid tire inflation wands. This is to avoid the risk of excess leverage and sideways pressure on the valve.

1. Remove the valve cap.
2. Firmly attach a tire pressure gauge/inflator to the valve.
3. Read the tire pressure from the gauge and add air if required.
4. If air is added to the tire, remove the gauge and re-attach it before reading the pressure. Failure to do so may result in an inaccurate reading.
5. If the tire pressure is too high, remove the gauge and allow air out of the tire by pressing the center of the valve. Refit the gauge to the valve and check the pressure.
6. Repeat the process, adding or removing air as required, until the correct tire pressure is reached.
7. Refit the valve cap.

TIRE VALVES

Keep the valve caps screwed down firmly to prevent water or dirt entering the valve. Check the valves for leaks when checking the tire pressures. For TPMS tire valves, see **297, TIRE PRESSURE MONITORING SYSTEM**.

REPLACEMENT TIRES

WARNING

Always fit replacement tires of the same type, and wherever possible, of the same make and tread pattern. Failure to fit the same tire type, make and tread pattern may reduce vehicle stability.

WARNING

The load and speed index ratings on all replacement tires must be, at least, the same specification as the Original Equipment (OE). If in doubt, consult your Retailer/Authorized Repairer.

WARNING

Do not rotate tires around the vehicle.

WARNING

If lower speed rated specialist tires are fitted (e.g. winter tires or off road tires) then the vehicle must be driven within the speed limitation of the tires. Consult your Land Rover Retailer for further information.

WARNING

If the use of tires not recommended by Land Rover is unavoidable, make sure you read, and fully comply with, the tire manufacturer's instructions. Failure to do so may lead to tire failure, due to incorrect fitment or use.

WARNING

For vehicles fitted with a Tire Pressure Monitoring System (TPMS), replacement tires should be fitted by your Retailer/Authorized Repairer, to avoid any potential damage to the TPMS sensors.

Note: 19 and 22 inch wheels are not available for, and should not be fitted to, 5+2 seat vehicles.

When the tread has worn down to approximately 2 mm, wear indicators start to appear at the surface of the tread pattern. This produces a continuous band of rubber across the tread as a visual reminder.

Ideally, tires should be replaced in sets of 4. If this is not possible, replace the tires in pairs (both front or both rear). When tires are replaced, the wheels should always be re-balanced and alignment checked.

The correct tire specification and pressures see or **288, REPLACEMENT TIRES**.

AVOIDING FLAT SPOTS

In areas of extended high ambient temperature, vehicle tires can be affected by a softening of the tire sidewall. If the vehicle is stationary for long periods, the effect is to slightly deform the tire at the point where the tire meets the standing surface. This is known as a flat spot.

This is normal tire behavior. However, when the vehicle is subsequently driven, vibration may be experienced from the flat spot. The condition will steadily improve with additional mileage.

In order to minimize flat spotting, the tire pressures can be increased to the maximum as stated on the tire sidewall. Tires must be returned to the specified running pressures before driving (see **285, TIRE PRESSURES**).

TIRE DEGRADATION

Tires degrade over time due to the effects of ultraviolet light, extreme temperatures, high loads, and environmental conditions. It is recommended that all tires, including the spare, are replaced at least every six years from the date of manufacture, but they may require replacement more frequently.

USING WINTER TIRES

M+S (mud and snow) tires have a recognized level of winter performance and need not be replaced. The **M+S** marking on the tire sidewall indicates an 'all season' tire designed for use all year round, including cold temperatures, snow and ice.



This symbol identifies dedicated winter tires, which can be fitted if optimum winter traction is required, or the vehicle is to be used in more extreme winter conditions.

Note: *Dedicated winter tires often have a lower speed rating than the original equipment tires, and the vehicle must therefore be driven within the speed limitation of the winter tire.*

The tire pressures indicated on the tire pressure label are for use in all conditions on the original equipment tires. If a reduced speed rating tire is fitted, the recommended pressures are only suitable for use below 100 mph (160 km/h).

Tires

For optimum traction, tires should be run in for at least 100 miles (160 kilometers) on dry roads prior to driving on snow or ice.

Approved winter tires			
Wheel size	Tire size	Brand	Pattern
19 inch wheels	235/65 R19 109V	Pirelli	Scorpion Winter (2-ply)
20 inch wheels	255/55 R20 110V	Michelin	Latitude Alpin 2
	255/55 R20 110V	Pirelli	Scorpion Winter
	265/50 R20 111T*	Nokian	Hakkapeliitta 7 SUV
	255/55 R20 110T*	Michelin	Latitude X-Ice North 2

Approved winter tires			
Wheel size	Tire size	Brand	Pattern
21 inch wheels	275/45 R21 110V	Continental	Cross Contact Winter
	275/45 R21 110T*	Nokian	Hakkapeliitta 7 SUV
	275/45 R21 110V	Michelin	Latitude Alpin 2
	275/45 R21 110T*	Michelin	Latitude X-Ice North 2
22 inch wheels	275/40 R22 108V	Continental	Cross Contact Winter

Note: *. Studded and non-studded tires available. Studded tires are market dependent. Consult a Retailer/Authorized Repairer.

Approved winter tires - SVR vehicles only			
Wheel size	Tire size	Brand	Pattern
21 inch wheels	275/45 R21 110V	Continental	Cross Contact Winter
22 inch wheels	275/40 R22 108V	Continental	Cross Contact Winter

Winter tire pressures (Normal load) up to Gross Vehicle Weight (GVW) - SVR vehicles only		
Tire size	Front pressures psi (bar)	Rear pressures psi (bar)
275/45 R21 110 V (SVR only)	37 (2.5)	44 (3.0)
275/40 R22 108 V (SVR only)	37 (2.5)	44 (3.0)

Winter tire pressures (Light load (Comfort)) - SVR vehicles only Up to 4 passengers at 150 lb each plus 33 lb of luggage each (68 kg plus 15 kg)		
Tire size	Front pressures psi (bar)	Rear pressures psi (bar)
275/45 R21 110 V (SVR only)	34 (2.3)	37 (2.5)
275/40 R22 108 V (SVR only)	34 (2.3)	37 (2.5)
Never exceed the total weight of passengers and luggage while using the Comfort setting.		

Note: For more information on winter tires for SVR vehicles, consult your Retailer/Authorized Repairer.

Note: The vehicle's speed should be limited to a maximum of 100 mph (160 km/h) normal load, and 125 mph (200 km/h) light load, when recommended winter tires are fitted. Failure to comply with this speed restriction will mean that the tires are underinflated for the vehicle's speed. In addition the TPMS will fail to warn of underinflation at the correct pressure thresholds for these higher speeds.

Use of dedicated winter tires may require a change of wheel size, depending on original choice of wheel. All 4 wheels must be changed.

If fitted with standard rubber valves, the Tire pressure monitoring system (TPMS) telltale will flash for 75 seconds and then remain illuminated. The Message center will also display **TIRE PRESSURE MONITORING SYSTEM FAULT**.

When the original wheels and tires are refitted, the vehicle will need to travel a short distance to reset the TPMS and extinguish the telltale.

For more information on winter tires, contact your Retailer/Authorized Repairer.

ULTRA HIGH PERFORMANCE (UHP) TIRES

High performance low profile wheel and tire combinations

Your vehicle may be equipped with high performance low profile wheel and tire combinations. These low profile high speed rated tires may be more susceptible to damage from road hazards, and may not give optimum performance on snow and ice; for improved performance winter tires should be fitted when conditions dictate.

Ultra high performance summer tires (SVR vehicles only)

Your vehicle may be equipped with the optional high performance 295/40 R22 112Y summer tires, which offer improved on-road performance.

These tires have limited off-road and winter performance, and where conditions dictate should be replaced with the standard all terrain 275/45 R21 110Y M&S tires or an approved winter tire.

WARNING

295/40 R22 112Y summer tires are only approved for fitment to the specified optional fit SVR vehicle derivative, and must not be fitted to other vehicle derivatives. Do not fit these tires, in any combination, with other 22" standard all terrain M&S marked tires or winter tires.

USING SNOW CHAINS

WARNING

Only use traction devices in heavy snow conditions, on compacted snow.

WARNING

Never exceed 30 mph (50 km/h) when traction devices are fitted.

WARNING

Never fit traction devices to a temporary use spare wheel.

Land Rover approved traction devices may be used to improve traction on compacted snow in heavy snow conditions. They should not be used in off-road conditions where there is no compacted snow.

If it becomes necessary to fit traction devices where there is no compacted snow, the following points must be observed:

- Only Land Rover approved traction devices should be used on the vehicle. Only Land Rover approved traction devices have been tested to make sure they do not cause damage to the vehicle. Contact your Retailer/ Authorized Repairer for information.
- The wheels and tires fitted must conform to the specifications of the original equipment.
- Full chain traction devices can be fitted to the rear wheels of vehicles fitted with 19 and 20 inch diameter wheels.
- Half chain traction devices can be fitted to the rear wheels of vehicles fitted with 21 and 22 inch diameter wheels.
- Fit traction devices in pairs on the same axle.
- Always read, understand and follow the traction device manufacturer's instructions. Pay particular attention to the maximum speed and fitting instructions.

- Avoid tire/vehicle damage, by removing the traction devices as soon as the conditions allow.

UNITED STATES DEPARTMENT OF TRANSPORTATION

The following information relates to the tire grading system developed by the National Highway Safety Administration which will grade tires by treadwear, traction and temperature performance.

Note: Tires that have deep tread and winter tires, are exempt from these markings requirements.

UNIFORM TIRE QUALITY GRADING

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width. For example:

Treadwear 200 Traction AA Temperature A.

In addition to the markings requirements, passenger care tires must conform to Federal Safety Requirements.

TREADWEAR

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half (1½) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

NOTICE

If treadwear is uneven across the tire, or a tire wears excessively, the vehicle should be checked by your Land Rover Retailer/ Authorized Repairer as soon as possible.



When the tread has worn down to approximately 2 mm, wear indicators start to appear at the surface of the tread pattern. This produces a continuous band of rubber across the tread as a visual indicator.

WARNING

Wear indicators show the minimum tread depth recommended by the manufacturers. Tires which have worn to this point will have reduced grip and poor water displacement characteristics.

Note: Local legislation may determine a greater tread depth to that shown by the tire wear indicators. It remains the driver's responsibility to make sure the tread depth meets the local legal requirements. Do not rely on the tread depth indicators alone.

TRACTION

The traction grades, from highest to lowest, are AA, A, B, and C. The grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance. **Warning:** The traction grade assigned to this tire is based on straight-ahead braking traction tests and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

WARNING

The traction grade assigned to this tire is based on straight-ahead braking traction tests and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

TEMPERATURE

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure.

The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Safety Standard No. 109.

Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

WARNING

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

TIRE GLOSSARY

lb/in² or psi. Pounds per square inch, an imperial unit of measure for pressure.

kPa. Kilo Pascal, a metric unit of measure for pressure.

Cold tire pressure. Typically the air pressure in a tire which has been standing in excess of 3 hours, or driven for less than 1 mile.

Maximum inflation pressure. The maximum pressure to which the tire should be inflated. This pressure is given on the tire side wall in lb/in² (psi) and kPa.

Note: *This pressure is the maximum allowed by the tire manufacturer. It is not the pressure recommended for use.*

Curb weight. The weight of a standard vehicle, including a full tank of fuel, any optional equipment fitted, and with the correct coolant and oil levels.

Accessory weight. The combined weight (in excess of those items replaced) of items available as factory installed equipment.

Production options weight. The combined weight of options installed which weigh in excess of 3 lb (1.4 kg) more than the standard items that they replaced, and are not already considered in curb or accessory weights. Items such as heavy duty brakes, high capacity battery, special trim etc.

Vehicle capacity weight. The number of seats multiplied by 150 lb (68 kg) plus the rated amount of load/luggage.

Maximum loaded vehicle weight. The sum of curb weight, accessory weight, vehicle capacity weight, plus any production option weights.

Rim. The metal support for a tire, or tire and tube, upon which the tire beads are seated.

Bead. The inner edge of a tire that is shaped to fit to the rim and form an air tight seal. The bead is constructed of steel wires which are wrapped, or reinforced, by the ply cords.

STEPS FOR DETERMINING CORRECT LOAD LIMIT

1. Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs" on your vehicle's placard.
2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. $(1400 - 750 (5 \times 150) = 650 \text{ lbs.})$
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

The number and weight of passengers will affect the cargo and luggage capacity. In the example above, the cargo and luggage load capacity is 650 lb. However, if fewer passengers ride in the vehicle, the luggage load capacity will increase. If this vehicle carries three 150 lb passengers, the cargo and luggage load capacity will increase to 950 lb:

$(3 \times 150 = 450 \text{ lb, and } 1400 - 450 = 950 \text{ lb}).$

If the passengers weigh more, the cargo and luggage load capacity will decrease.

WARNING

Do not exceed the vehicle capacity weight (the total weight of driver, passengers and cargo) given on the tire information label.

WARNING

The weight of accessories must also be subtracted from the cargo and luggage load capacity. If you are unsure of the weight of any accessories fitted to your vehicle, contact your Land Rover Retailer/Authorized Repairer.

WARNING

Overloading the vehicle will have an adverse effect on braking and handling characteristics, which could compromise your safety. Overloading a vehicle may also cause tire damage or failure. Never overload your vehicle.