


Steering wheel

ADJUSTING THE STEERING WHEEL

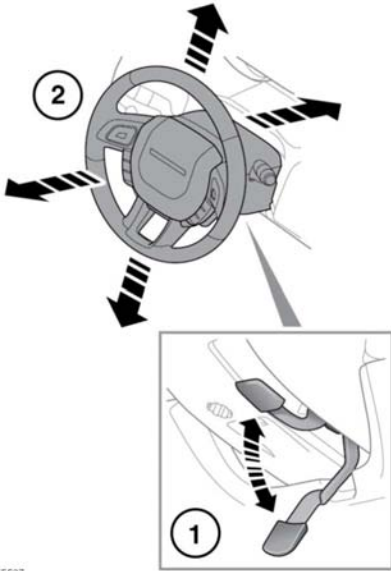

E155587

⚠ WARNING

Never adjust the steering wheel while the vehicle is in motion. Doing so may cause a loss of control, potentially resulting in an accident.

1. Move the lever fully down to unlock the column. Move the lever fully up to re-lock the column.
2. Move the steering column up, down, in or out, to the desired position.


POWER STEERING

A fault with the power steering system is indicated by a message in the Message center, accompanied by an amber warning lamp (see **56, GENERAL WARNING/ INFORMATION MESSAGE (AMBER)**).

Power assistance may be reduced to protect the system. This may be required due to overheating, caused by extensive steering inputs or high ambient temperature, or both.

Full steering assistance should return when the system has been allowed to cool. If full steering assistance does not return, consult a Retailer/Authorized Repairer.

HEATED STEERING WHEEL

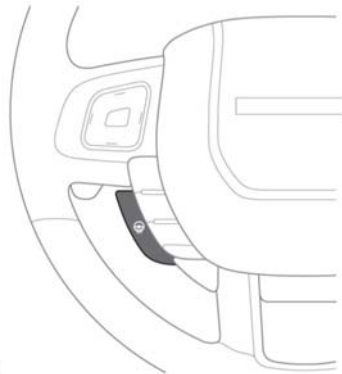

E155588

Press to switch on the steering wheel heating. Press again to switch off.