

## BLUETOOTH® INFORMATION



**Bluetooth®** is the name for short-range Radio Frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

**Note:** The **Bluetooth®** word mark and logos are owned by the Bluetooth SIG, Inc and any use of such marks by Jaguar Land Rover Limited is under licence.

The Land Rover **Bluetooth** wireless technology system supports **Bluetooth®** Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP), Audio Video Remote Control Profile (AVRCP) and Message Access Profile (MAP).

**Note:** HFP and A2DP/AVRCP profiles can be connected independently, so a phone can be connected via one, while a media device can be connected via the other, at the same time.

Before making use of the vehicle's **Bluetooth** wireless technology phone system, your **Bluetooth** wireless technology device must be paired and connected to the vehicle's system. This is done using one of two methods; via your phone to the vehicle (preferred method) or from the Touch screen to your phone. If one of these methods is not successful, try the other option.

Each time the ignition is switched on, the vehicle's system attempts to connect with the last connected phone.

As phones have a wide range of audio and echo characteristics, it may take a few seconds for the vehicle's system to adapt and deliver optimum audio performance. To achieve this, it may be necessary to reduce the media sound volume and also reduce the ventilation fan speed slightly.

## TELEPHONE COMPATIBILITY

For a list of compatible **Bluetooth®** wireless technology devices, please access the Land Rover website at:

**www.landrover.com**. In the **Ownership** section, refer to **InControl and Bluetooth**

**Note:** The **Bluetooth** wireless technology devices listed, have been tested for compatibility with Land Rover vehicles. Performance varies, based on the phone's software version, battery condition, coverage, and your network provider. Phones are warranted by their manufacturer, not Jaguar Land Rover Limited.

## PAIRING AND CONNECTING A BLUETOOTH® PHONE OR DEVICE

A paired phone or device can be connected for different uses; phone or music. Pairing is normally required only once.

When the ignition is switched on, the vehicle automatically tries to re-connect to a previously paired **Bluetooth®** phone or device, if it is within range of the vehicle.

If automatic connection is not made, or to connect a new phone or device, use one of the following pairing methods:

### Pairing using the phone or device (preferred method):

1. Switch the ignition on and make sure that the Touch screen is active.
2. Select **General settings**, then **Bluetooth**.
3. From the list, select **Make system discoverable**.
4. Switch on your phone or device's **Bluetooth** wireless technology device connection. Using your phone or device, search for and select your vehicle's **Bluetooth** connection (see your phone or device's operating instructions for more information).
5. A Passkey number is displayed on the phone or device. If this number matches the number on the Touch screen, touch **Yes**, or press **Pair** on the phone or device.

### Pairing using the Touch screen

1. Switch on your phone or device's **Bluetooth** wireless technology device connection. Make sure that your phone or device is in **Bluetooth** wireless technology device **discoverable mode**, sometimes referred to as **find me mode** (see your phone or device's operating instructions for more information).
2. Switch the ignition on and make sure that the Touch screen is active.
3. Select **General settings** then **Bluetooth**.
4. Select **Search for Bluetooth Devices**.
5. The system searches for a phone or device and, if found, the phone or device displays on the screen.
6. Select the required device. If the phone or device is not found, **NO DEVICES FOUND** displays.  
*Note: The phone/device list can store up to four entries.*
7. A Passkey number is displayed on the phone or device. If this number matches the number on the Touch screen, touch **Yes**.
8. When a phone or device is paired, it is included in the connected device's list and on the **PHONE** screen. It also appears in the **Bluetooth, List of paired devices** section.

## INSTRUCTIONAL VIDEO



E166647

## CHANGING THE CONNECTED PHONE OR DEVICE

Up to four phones or devices can be paired with the vehicle in the same way. However, only two can be connected and ready for use as a phone or device at any one time (one for phone and one for media).

**To connect a different paired phone to the vehicle:**

1. Switch the ignition on and make sure the Touch screen is active.
2. Select **General settings**, then **Bluetooth**.
3. Select **List of Paired Devices**.
4. Touch the **Phone** soft key or the phone hard key.  
From the **PHONE** menu screen, select **Change device**.
5. A menu appears. Select a paired device from the list.

## DELETING A PAIRED PHONE OR DEVICE

**To delete a phone or device from the system:**

1. In **General settings**, select **Bluetooth**.
2. From the list, select **List of paired devices**.
3. Select the phone or device to be deleted.
4. From the list, select **Delete pairing**.

The phone or device is deleted from the system.