 


MEDIA CONTROLS

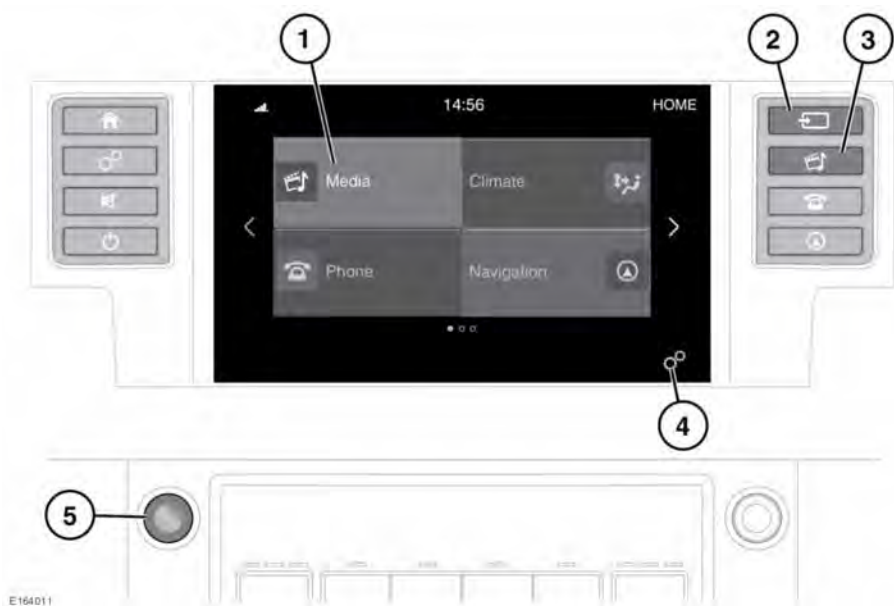

⚠ In the interest of safety, only operate, adjust or view the system when it is safe to do so.

⚠ Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

1. Touch to select the Media system; or if the Media system is already switched on, touch to select the current media source.
2. Press to select the media **SOURCE** list. Touch the required media source from the list:
 - FM Radio
 - AM Radio
 - DAB Radio
 - Bluetooth*

 
- USB*
- iPod*
- AUX

Note: *Only a connected portable media or **Bluetooth®** device will appear on the Source list. Therefore, before selecting a device, the source media device has to be connected or paired (Bluetooth) to the vehicle.

3. Press to select the Media system.
4. Touch to select the **GENERAL SETTINGS** menu, followed by **Media**, to view the **MEDIA SETTINGS** screen. See **169, MEDIA SETTINGS**.
5. Press to switch the Media system on/off; rotate to adjust the volume level.

Note: The Media system will operate with the ignition on or off, but will switch off when the ignition is switched off. Switch the Media system on again, if required.

AUDIO STEERING WHEEL CONTROLS

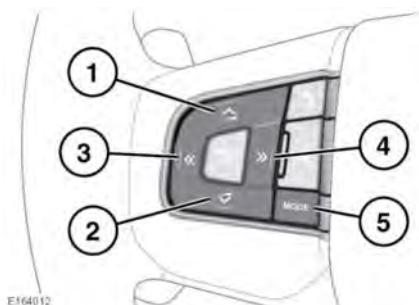

1. Press to increase the volume for any source.
2. Press to decrease the volume for any source.
3. Skip/scan backwards: Press to skip back to the beginning of the current track being played, or press and hold to scan backwards through the current track being played. Playback resumes when the button is released.
4. Skip/scan forwards: Press to skip forwards to the start of the next track, or press and hold to scan forwards through the current track being played. Playback resumes when the button is released.
5. **MODE:** Press repeatedly to scroll through all of the available, or connected, media sources.

MEDIA SETTINGS

To view the **MEDIA SETTINGS** menu, select **Media** from the **GENERAL SETTINGS** menu.

The **MEDIA SETTINGS** menu contains the following options:

- **Traffic Announcement.** Switch on/off.
- **Sound:** Select to view the **SOUND SETTINGS**.
- **Radio:** These setting options are dependent on the radio source selected. See **171, AM/FM RADIO CONTROLS** or **173, DAB RADIO CONTROLS**.

SOUND SETTINGS

To adjust the **Balance/Fader** settings:



Touch the arrows to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and drag it to the required position or touch anywhere on the vehicle graphic and release. To return to the default setting, touch the sound focal point.

To adjust the **Bass/Mid/Treble** settings:

Media

- Touch **+** or **-** to adjust the Bass, Mid or Treble levels. Alternatively, touch the slider bar and drag or touch anywhere on the bar and release.

 
To switch between **Balance/Fader** and **Bass/Mid/Treble** settings:



1. Touch the icon to move from the **Bass/Mid/Treble** screen to the **Balance/Fader** screen.
2. Touch the icon to move from the **Balance/Fader** screen to the **Bass/Mid/Treble** screen.

To adjust the **Speed dependent volume**, select from the following options: **Off**, **Low**, **Mid** or **High**.

AM/FM RADIO CONTROLS

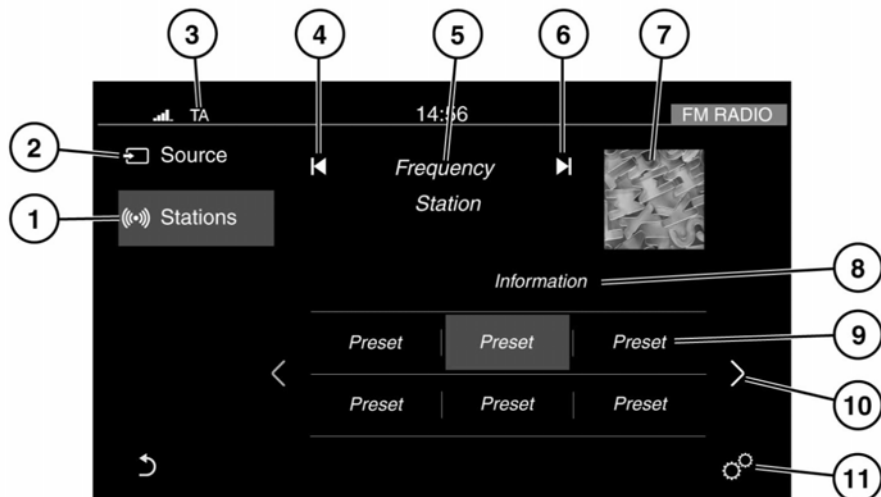


E171498

1. **Stations:** Touch to select the station list for the chosen radio source.
 2. **Source:** Touch to select the media source list. See **168, MEDIA CONTROLS**.
 3. **Status icons:** When a phone is connected, the battery level and network signal strength is displayed. Also, when selected, **TA** (Traffic announcements) is displayed.
 4. **Seek down:** Touch to auto-seek down the frequency to the next radio station.
Note: In some markets, additional buttons are available to enable manual tuning.
 5. The selected station name and frequency.
 6. **Seek up:** Touch to auto-seek up the frequency to the next radio station.
- Note:** In some markets, additional buttons are available to enable manual tuning.
7. Waveband image (if available).
 8. Information from the selected station.
 9. **Station presets:**
 - Touch to tune to the station stored on that preset.
 - Touch and hold to store the current station on that preset.
 - Use the seek buttons on the steering wheel to change to the next or previous preset station.
 10. Touch to scroll through the preset stations.
 11. Touch to select the **SETTINGS** pop-up menu. Select **Media** and then **Radio**, where the following features can be activated/deactivated:
 - **Manual tune.**

- **Radiotext** (FM only).
- **Alternative Frequency (AF)** (FM only).
- **Regionalization** (FM only).

Note: Settings options may vary, depending on the market.

 DAB RADIO CONTROLS

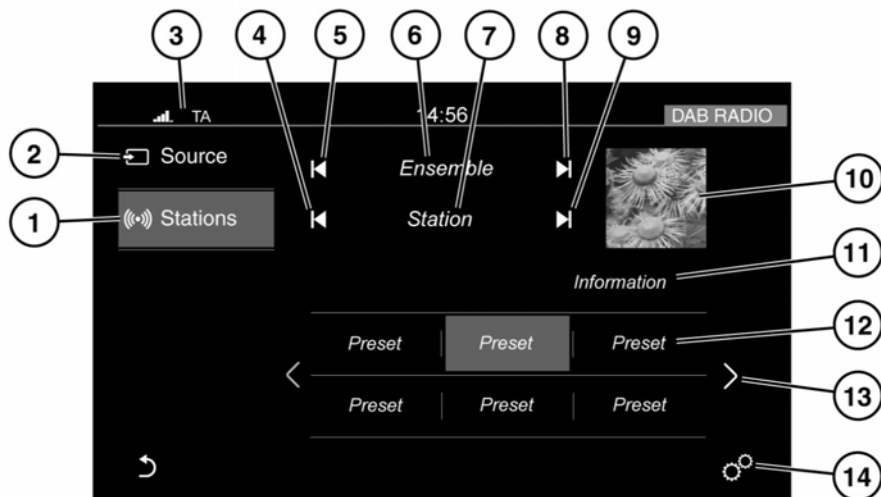

E171499

1. **Stations:** Touch to select the station list for the selected waveband.
2. **Source:** Touch to select the media source list.
3. **Status icons:** When a phone is connected, the battery level, and network signal strength is displayed. Also, when selected, **TA** (Traffic announcements).
4. **Seek down:** Touch to auto-seek down the frequency to the next radio station.
5. **Seek down:** Touch to auto-seek down the frequency to the next radio ensemble.
6. The selected radio ensemble name.
7. The selected radio station name.
8. **Seek up:** Touch to auto-seek up the frequency to the next radio ensemble.
9. **Seek up:** Touch to auto-seek up the frequency to the next radio station.
10. Waveband image (if available).
11. Information from the selected station.
12. Station presets:
 - Touch and release to tune to the radio station stored on that preset.
 - Touch and hold to store the current radio station on that preset.
 - Use the seek buttons on the steering wheel to change to the next or previous preset radio station.
13. Touch to scroll through the preset stations.
14. Touch to select the **SETTINGS** pop-up menu. Select **Media** and then **Radio**, where the following features can be activated/deactivated:
 - **Radiotext**
 - **Alternative Frequency (AF)**

- DAB L-Band

INSTRUCTIONAL VIDEO



E168652

PORTABLE MEDIA CONNECTIONS

Portable media devices can be connected to the media hub, located in the cubby box. Compatible portable devices include:

- USB mass storage devices (e.g., a memory stick). Devices must use FAT or FAT32 file format.
- iPod (iPod Classic, iPod Touch, iPhone, and iPod Nano are supported - full functionality for older devices cannot be guaranteed). iPod Shuffle functionality cannot be guaranteed.
- Auxiliary (AUX) device (personal audio, MP3 players, all iPods).

Note: Auxiliary devices have no Touch screen control.

If you are connecting an iPod, mass storage, or **Bluetooth®** wireless technology device, use the Touch screen to operate and search for the device.

- ⓘ Please disconnect your iPod when leaving the vehicle. Failure to do so may result in the iPod battery discharging.

Note: The Media system will play MP3, WMA, and AAC files.

To maximise playback quality, it is recommended that lossless compression is used for any media files on USB or iPod. Failing this, it is recommended that compressed files utilise a minimum bitrate of 192 kb/s (a higher bitrate is strongly recommended).

Note: iPod is a trademark of Apple Computer Inc., registered in the US and other countries.

 
 
Note: Some MP3 players have their own file system that is not supported by this system. To use your MP3 player, you must set it to **USB Removable Device** or **Mass Storage Device** mode. Only music that has been added to the device in this mode can be played.

For a list of compatible **Bluetooth®** wireless technology devices, please refer to the Land Rover website at: www.landrover.com.

The **Bluetooth®** wireless technology devices listed have been tested for compatibility with Land Rover vehicles. Performance will vary, based on the device's software version and the battery's condition. Devices are warranted by their manufacturer, not Land Rover.

CONNECTING A MEDIA DEVICE

- !** Read the manufacturer's instructions for any device, before it is connected to the Audio system. Make sure the device is suitable and complies with any instructions regarding connection and operation. Failure to do so may result in damage to the vehicle's Audio system or the auxiliary device.

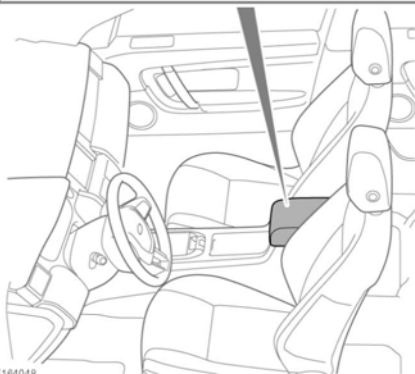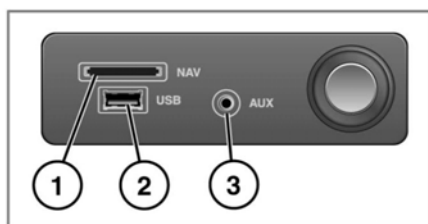

E104048

Connect the device into the appropriate socket:

1. SD card slot: Insert the SD card, until it clicks into place.
2. USB socket.
3. 3.5 mm AUX socket.

Note: The Navigation system, Voice and various telephone features will not function if the SD card is not correctly inserted into the slot.

The SD card slot should only be used for the SD card supplied for the vehicle to support Navigation, Voice and various telephone features. No other SD cards should be used, because the Media system will not play music, or display saved images from an SD card.

Note: The installation of any additional content, or the modification of existing content of the SD card supplied for the vehicle, may render the SD card unusable in the Media system.

There is a USB socket or sockets (depending on vehicle specification), located in the loadspace if third row seats are fitted. These sockets are not connected to the Media system and should only be used for charging a phone or device.

- !** Do not plug non-audio devices into the USB port.

Note: Use the cable supplied with your media device to connect to the USB socket.

Note: A USB hub cannot be used to connect more than one USB device to the audio unit.

Note: Devices connected to the USB ports will be charged, but devices that are fully discharged will not play.

Note: In some cases, if an iPhone is connected via a USB cable for music and also to a **Bluetooth®** wireless technology device for other phone functions, the audio will stream through only the last connected port. For example, if a **Bluetooth®** wireless technology device is the last connection made to the iPhone and the USB (iPod) lead is connected, no audio will be heard through the speakers via the USB (iPod) lead. Track title and time information will still be shown on the display. Audio output from the speakers will only be obtained if the user chooses **audio mode** on the **Bluetooth®** wireless technology device. To address this issue, disconnect and reconnect your device's USB cable or open the iPod application on the iPhone, select the **Bluetooth** icon and select **Dock Connector** on the pop-up.


When an iPod is connected, playback will continue from the point at which it was last playing, provided the iPod battery is in a good state of charge.

Note: Options, such as **Repeat** and **Shuffle**, relate to the device currently playing; they will not apply to any subsequent device.

The 3.5 mm AUX socket allows extra equipment (e.g., personal stereos MP3 player, hand-held navigation unit, etc.) to be connected to the Audio system.

Note: iPod shuffle may be connected via the AUX socket.

 PORTABLE MEDIA CONTROLS

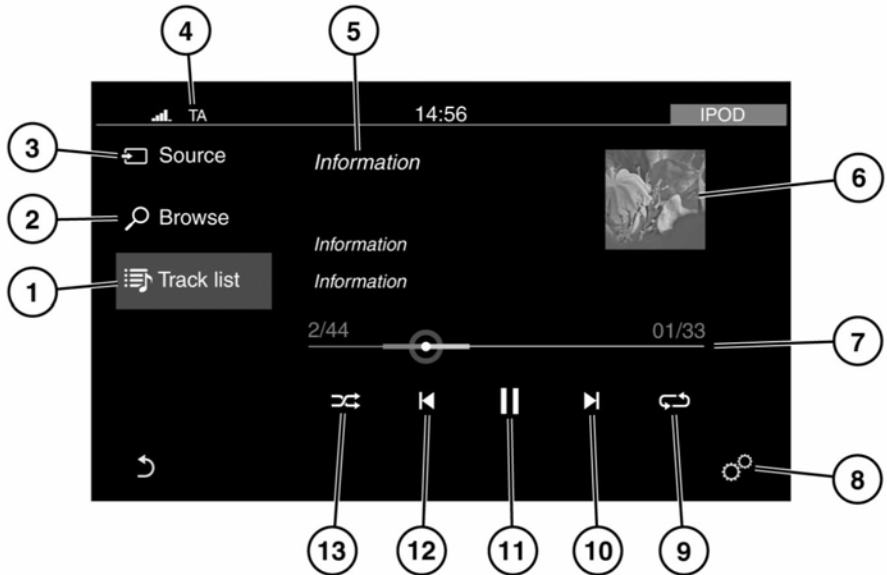

E171514

The following portable devices can be used on the Media system: **iPod**, **USB**, **AUX**, and **Bluetooth**® wireless technology devices.

Note: Auxiliary devices have no Touch screen controls.

- 1. Track list:** Touch to select the list of tracks from the connected device.
- 2. Browse:** Touch to select the menu screen for the required music or audio source subject list for the connected device: **Playlists**, **Artists**, **Albums**, **Songs**, etc.
- 3. Source:** Touch to select the media source menu screen.

Note: The media source has to be connected to the vehicle before it will appear in the media source list.

- 4. Status icons:** When a phone is connected, the battery level and network signal strength is displayed. Also, when selected, **TA** (Traffic announcements) is displayed.
- 5. Information** relating to the music or audio being played.
- 6. Image display:**
 - If available, the album art for the current track being played will be displayed.
 - When a video (from a connected USB source only) is about to be played, an image from the video is displayed.
- 7. Progress bar:** Drag the spot or touch the line to move forwards or backwards through the track.

8. Touch to select the **SETTINGS** pop-up menu. Select **Media** or **Bluetooth**, via the **Settings** option.
9. Continuous play: Touch to play the current track continuously.
10. Skip/scan forwards: Touch to skip forwards to the start of the next track, or touch and hold to scan forwards through the current track being played. Playback resumes when released.
11. Pause/play: Touch to pause playback; touch again to resume playback.
12. Skip/scan backwards: Touch to skip back to the beginning of the current track being played, or touch and hold to scan backwards through the current track being played. Playback resumes when released.
13. Shuffle: Touch to play random tracks from the current MP3 folder, USB folder, or iPod playlist.

PLAYING A PORTABLE DEVICE

If you are using a USB mass storage device or an approved iPod, you can control playback using the Touch screen controls.

If you are using a **Bluetooth®** wireless technology device, you can control playback using the Touch screen, but some controls are unavailable.

If you are using any portable media device via the AUX socket, then you must control playback from the device itself.



Land Rover does not recommend the use of a Hard Disc Drive via the USB link while the vehicle is in motion. These devices are not designed for in-car use and may be damaged.

CONNECTING MULTIPLE DEVICES



Do not plug non-audio devices into the USB port.

You can connect multiple devices simultaneously to the portable media interface and switch between them via the **Source** selector. Select **iPod**, **USB**, **Bluetooth**, or **AUX**, to switch between modes.

The device docked first will remain the active device until you choose to change.

If, after changing to the newly-docked device, you change back to the first device, play will resume at the point you left it (USB and iPod only).

Note: You cannot use a USB hub to connect more than one USB device to the audio unit.

Note: Devices connected to the iPod and USB ports will be charged, but devices that are fully discharged will not play.

PAIRING AND CONNECTING A BLUETOOTH DEVICE

For information on pairing and connecting a **Bluetooth®** device, see **182, BLUETOOTH® INFORMATION, 182, PAIRING AND CONNECTING A BLUETOOTH® PHONE OR DEVICE.**

For further information on **Bluetooth®** wireless technology, see **182, BLUETOOTH® INFORMATION.**

LICENSING



E135227



E132539

Manufactured under licence from Dolby Laboratories.

Dolby, Pro Logic, and the double-D symbol are registered trademarks of Dolby Laboratories.



E132541



E132542

Manufactured under licence, under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.