


## RADIO CONTROLS

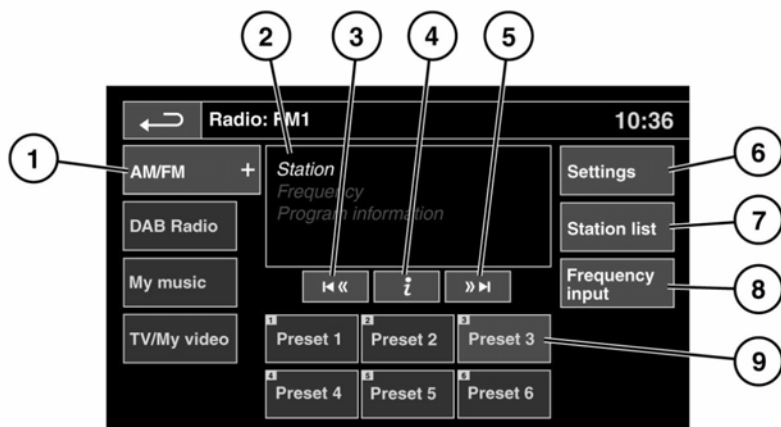

E155096



**In the interest of safety, only operate or adjust the system when it is safe to do so.**



**Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.**

**Note:** Some electronic equipment being used within the vehicle, or within close proximity to the vehicle, may affect the performance of this system (e.g., charging a device, etc.).

Press the Media menu button, or touch the Media menu soft key from the Touch screen **Home menu** and then select the **Radio** soft key. See **86, TOUCH SCREEN HOME MENU**.

1. **AM/FM:** Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.
2. Displays information about the current station.

3. Seek down:

- Short touch to auto-seek down the frequency to the next radio station.
- Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.

**Note:** When manual seek is selected, auto-seek cannot be selected for approximately 10 seconds.

4. Information: Touch to display more information from the broadcasting station.
5. Seek up:

- Short touch to auto-seek up the frequency to the next radio station.

- Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
6. **Settings:** Touch to view and activate/deactivate the following features: **RDS**, **Traffic**, **News**, **AF**, and **REG**. See 175, **RADIO DATA SYSTEM (RDS)**.
  7. **Station list** (FM only): Select to view a list of available stations on the waveband. The list can be sorted by **Frequency**, **Name**, or **PTY** (pop, news, sport, etc.) by selecting the appropriate soft key. Touch to select the chosen station.  
If the stations are sorted by category, touch the chosen category to view and select a corresponding station.
  8. **Frequency input:** Select to enter a known frequency of a station on the current waveband, using the numeric keypad that appears. Select **OK** or wait for 2 seconds to tune to the entered frequency.
  9. **Presets:** Each waveband has 6 preset positions.
    - Touch and release to tune to the station stored on that preset.
    - Touch and hold to store the current station on that preset (the radio will mute while the station is stored, and then beep).
    - Use the seek buttons on the steering wheel to change to the next or previous preset station.

## RADIO DATA SYSTEM (RDS)

The radio is equipped with an RDS, which enables the Media system to receive extra information with normal FM radio signals.

**Note:** *Not all FM radio stations broadcast RDS information.*

Select **Settings** from the **Radio** menu, to view or alter the RDS settings:

- **Traffic/News:** Provides local travel or news information.
- **Regionalisation (REG):** Select to prevent the radio tuning into an alternative local station that has a stronger signal.
- **Alternative Frequency (AF):** Select to allow the radio to automatically retune to a stronger AF for the current station. This is useful on a journey where the vehicle travels through different transmitter areas.