


REAR MEDIA CONTROL FROM THE TOUCH SCREEN

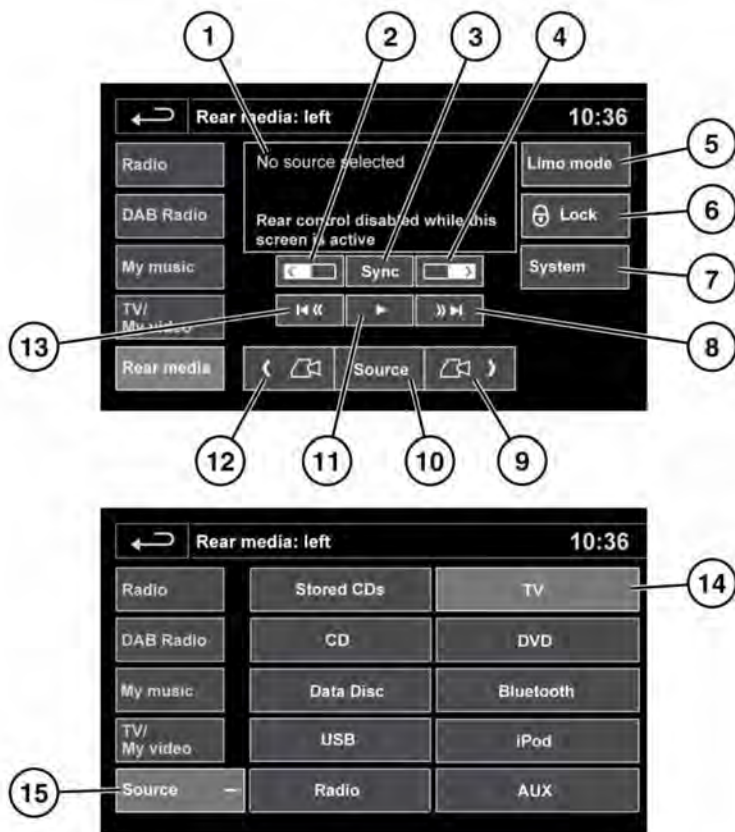

Press the Media menu button, or touch the Media menu soft key from the Touch screen **Home menu** and then select the **Rear media** soft key.

Note: When the main Rear media control screen is displayed on the Touch screen, the Rear media remote control will be locked out.

1. Information display.
2. Touch to select the left rear screen.

3. **Sync:** After selecting a source (see items 2 and 4), touch **Sync** to synchronise both screens. Both screens will then display the selected source.

Note: If both screens are already synchronised, the **Sync** button will be greyed-out.

4. Touch to select the right rear screen.
5. **Limo Mode:** Touch to switch Limousine mode **On** and **Off**.

When Limousine mode is switched on, the rear passengers will have control of the total cabin's Media system, and any shared sources via the remote control.

6. **Lock:** Touch to lock or unlock the Rear media remote control.
7. **System:** Touch to switch the selected Rear media system on or off.
8. Forward/Skip for the selected screen.
9. Touch to play the right rear screen's audio through the vehicle's speaker system.



Note: Only available when the Rear media system is in **Limo mode**.

10. **Source:** Touch to select the Rear media source selection menu.
11. Play/Pause for the selected screen.
12. Touch to play the left rear screen's audio through the vehicle's speaker system.

Note: Only available when the Rear media system is in **Limo mode**.

13. Rewind/Skip for the selected screen.
14. Rear media source selection menu: Touch the required media button.
15. **Source:** Touch to return to the **Rear media** control screen.

REAR MEDIA REMOTE CONTROL

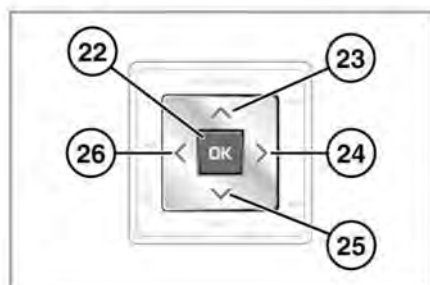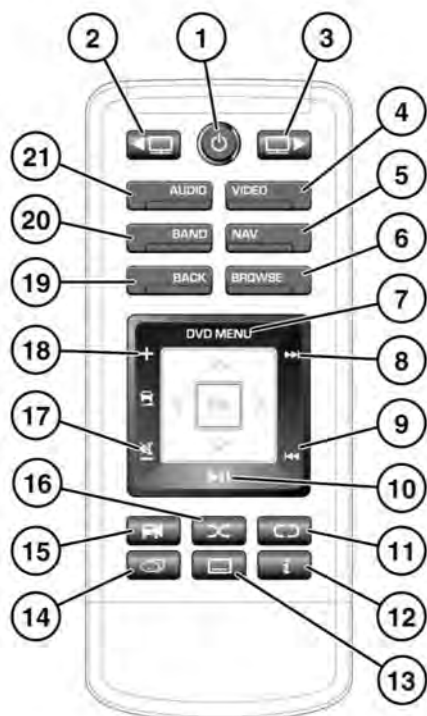

1. Press and release to switch off the screen.

Press and hold to switch off the rear media system.

2. Left screen select/switch on.
3. Right screen select/switch on.
4. Video source select.
5. Navigation summary.
6. Browse/TV channel list.
7. DVD menu.
8. Next track/file/channel/station.
9. Previous track/file/channel/station.
10. Play/Pause.
11. Repeat.
12. Information.
13. Subtitles on/off.
14. Press to select any available TV streams.
15. Take control of cabin audio.
16. Shuffle.
17. Cabin audio volume decrease/mute.
18. Cabin audio volume increase.
19. **Back**: Press to go back to previous menu.
20. Radio band select.
21. Audio source select.
22. **OK**: Press to confirm selection.
23. Cursor control: Up*.
24. Cursor control: Right*.
25. Cursor control: Down*.
26. Cursor control: Left*.

*These are multi-function keys depending on the source selected.

USING REAR MEDIA

To make sure the system responds to your selections, the upper end of the remote control should be pointed towards the appropriate rear screen.


To activate the system, press the Rear media on/off button on the remote control, followed by the appropriate screen selection button.

Next, select the desired audio or video function button. Subsequent selections on the remote control will operate the last selected user system.

To avoid accidental operation of the wrong user system, it is advisable to always select the required user system before making any other selection.

Note: To prevent accidental damage, always store the remote control in the stowage area provided, when not in use.

REAR MEDIA HEADPHONES

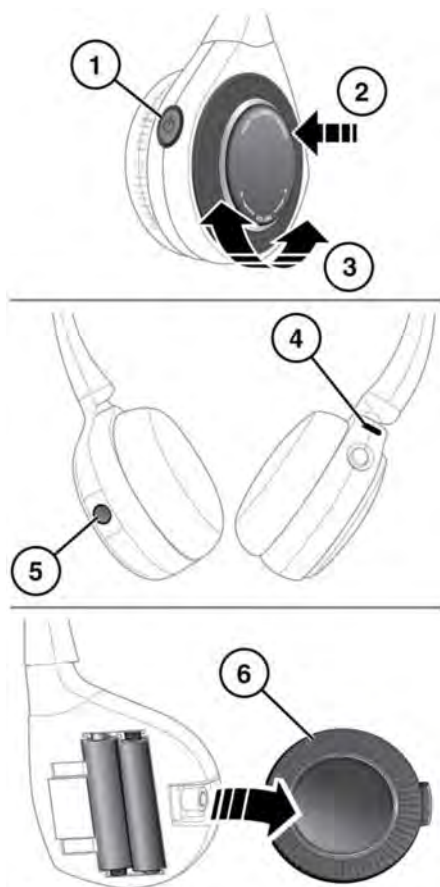

E170640

1. Press to switch the headphones on/off.
 2. Press to change the audio channel.
 3. Rotate to adjust the headphone volume.
 4. The status LED indicator lamp:
 - When a signal is being received, the lamp will illuminate continuously.
 - When a signal is not being received, the lamp will flash.
 - When the battery power is low, the lamp will flash and then go out after a short delay.
 5. The battery cover retaining screw.
 6. The battery access cover.
- When the battery power is low, the headphones will emit a beeping sound every 90 seconds.
- To replace the batteries, use the following the procedure:
1. Remove the battery access cover retaining screw (5).
 2. Pull the cover (6) away from the headphones.
 3. Install the new AAA batteries.
- Note:** Make sure that the polarity of the batteries matches that shown inside the headphone's battery compartment.
4. Replace the battery access cover.
- Note:** The headphones will not operate if the batteries are fitted incorrectly.
- Note:** Under normal usage, the expected battery life is 6 months.
- Note:** Always use good quality batteries of the same type.



Used batteries must be disposed of correctly, as they contain harmful substances. Seek advice on battery disposal from a Retailer/Authorised Repairer and/or the local authority.

REAR MEDIA REMOTE CONTROL BATTERY



E152905



Battery disposal: Used batteries must be disposed of correctly, as they contain harmful substances. Seek advice on disposal from your Retailer/ Authorised Repairer and/or your local authority.

Low battery power is indicated by the remote control's power button flashing 3 times when pressed.

To renew the batteries:

- Remove the chrome battery cover.
- Install 2 AAA batteries. Make sure the polarity of the batteries matches that shown inside the remote control's battery compartment.

Note: The remote control will not operate if the batteries are fitted incorrectly.

Note: Always use good quality batteries of the same type.

- Replace the chrome battery cover.