


FUSE BOX LOCATIONS

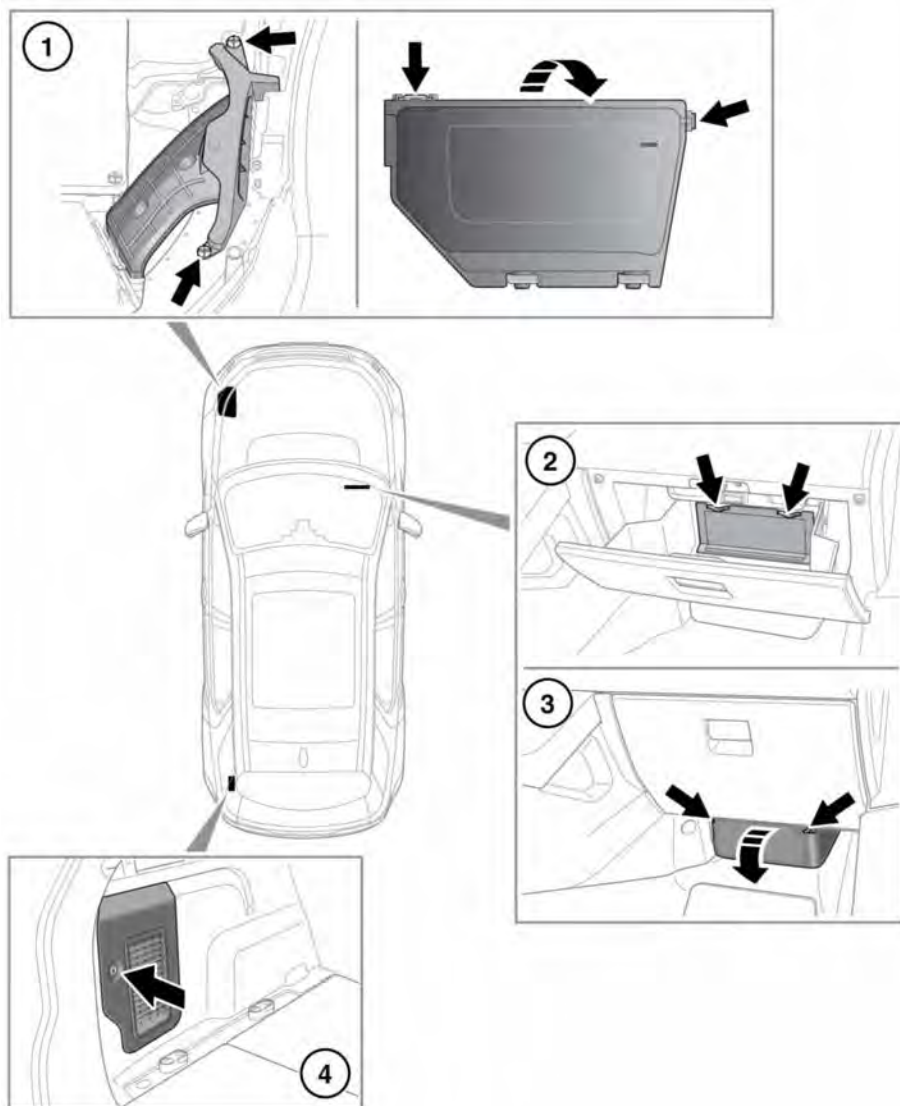

E166370

- ❗ When a fuse box lid is removed, take care to protect the box from moisture, and refit the lid at the earliest opportunity.

Access can be gained to the fuses, as follows:

1. Engine compartment fuse box.
 - To gain access to the fuse box: Remove the 2 plastic fixings (see illustration) and pull the tube up to release it from the air box.
 - Unlatch the tabs (arrowed) to release the fuse box cover.
The engine compartment fuse numbers and positions are shown on the inside of the fuse box cover.
2. Passenger compartment fuse box (upper): Open the glovebox and remove the panel from the glovebox liner. A label on the panel shows the circuits protected and the fuse locations.
3. Passenger compartment fuse box (lower): Remove the lower access panel.
4. Luggage compartment (loadspace) fuse boxes: Rotate the latch and remove the panel from the left side trim of the luggage compartment. A label on the panel shows the circuits protected and the fuse locations.

CHANGING A FUSE

- ❗ Always switch off the ignition system, and the affected electrical circuit, before replacing a fuse.

- ❗ Fit Land Rover approved replacement fuses of the same rating and type, or fuses of a matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.

- ❗ If the replacement fuse blows after fitment, the system should be checked by your Retailer/ Authorised Repairer.

Note: *It is recommended that relays should only be renewed by qualified persons.*

The fuse removal tweezers are located in the passenger compartment fuse box. Press the tweezers onto the head of a fuse and pull to remove. A break in the wire inside the fuse indicates that the fuse has blown and must be renewed.

There are some spare replacement fuses in the passenger compartment fuse box. See the fuse box label for details.

ENGINE COMPARTMENT FUSE BOX

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
1	5	Tan	Starter motor (2.0L petrol).
	30	Green	Engine management system (2.0L diesel).
2	5	Tan	Electrical power management (diesel).
3*	80	-	Power steering.
4*	60	-	Glow plugs (diesel).
5*	100	-	Engine cooling.
6	15	Blue	Engine management system (2.0L petrol. 2.2L diesel).
	10	Red	Engine management system (2.0L diesel).
7	-	-	-
8	20	Yellow	Engine management system (2.0L petrol. 2.2L diesel).
	15	Blue	Engine management system (2.0L diesel).
9	10	Red	Engine management system (2.2L diesel). Diesel Exhaust Fluid (DEF) (2.0L diesel).
10	-	-	-
11	10	Red	Engine management system.
12	15	Blue	Engine management system (2.0L petrol. 2.2L diesel).
	10	Red	Engine management system (2.0L diesel).
13	-	-	-
14	15	Blue	Engine management system (2.0L petrol. 2.2L diesel).
	10	Red	Engine management system (2.0L diesel).
15*	40	Orange	Starter motor.
16*	100	-	Auxiliary heater.
17*	60	-	Passenger compartment fuse box.
18*	60	-	Passenger compartment fuse box.
19*	60	-	Luggage compartment fuse box.
20*	60	-	Luggage compartment fuse box.
21*	60	-	Electrical power management.
22*	30	Green	Front wipers.

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
23*	40	Orange	Passenger compartment fuse box.
24*	30	Green	Starter motor (diesel).
25*	40	Orange	Anti-lock Braking System (ABS).
26*	40	Orange	ABS.
27*	40	Orange	Passenger compartment fuse box.
28*	40	Orange	Heater blower motor.
29*	30	Green	Electric trailer brake (Australia).
30	15	Blue	Headlamp washers.
31	15	Blue	Horns.
32	10	Red	Air conditioning.
33	5	Tan	Horn. Heated front screen. Fuel pump.
34*	40	Orange	Heated front screen - left side.
35*	40	Orange	Heated front screen - right side.
36	5	Tan	Engine management system. Air conditioning.
37	20	Yellow	Fuel system.
38	-	-	-
39	-	-	-
40	5	Tan	Adaptive Front Lighting System (AFS) - right headlamp.
41	5	Tan	AFS - left headlamp.
42	5	Tan	Headlamps. Dynamic headlamp levelling.
43	-	-	-
44	10	Red	Heated steering wheel.
45	5	Tan	Steering wheel.

*It is recommended that these fuses should only be serviced by a Retailer/ Authorised Repairer.


PASSENGER COMPARTMENT FUSE BOX

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
1	5	Tan	Smart key receiver. Alarm sensor. Tyre Pressure Monitoring System (TPMS).
2	-	-	-
3	10	Red	Front fog lamps.
4	-	-	-
5	5	Tan	Anti-lock Braking System (ABS).
6	5	Tan	Adaptive dynamics. Electric differential.
7	-	-	-
8	25	Clear	Passenger door module.
9	-	-	-
10	5	Tan	Heated washer jets.
11	10	Red	Trailer reverse lights.
12	5	Tan	Reverse lights.
13	-	-	-
14	5	Tan	Brake pedal switch.
15	30	Green	Heated rear screen.
16	5	Tan	Power steering.
17	5	Tan	Keyless entry.
18	-	-	-
19	5	Tan	Engine management.
20	5	Tan	Adaptive Cruise Control (ACC).
21	5	Tan	Centre console switches. Outboard fascia switches.
22	5	Tan	Automatic transmission.
23	-	-	-
24	-	-	-
25	-	-	-
26	-	-	-
27	-	-	-

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
28	-	-	-
29	-	-	-
30	-	-	-
31	5	Tan	Rain sensor. Auxiliary lamp switch. Electrical power management. Humidity sensor.
32	25	Clear	Driver door module.
33	-	-	-
34	10	Red	Fuel flap.
35	-	-	-
36	5	Tan	Battery backed sounder.
37	20	Yellow	Keyless entry.
38	15	Blue	Front screen washer.
39	25	Clear	Left rear door module.
40	5	Tan	Driver door window switch.
41	5	Tan	Gateway module.
42	30	Green	Driver's seat.
43	15	Blue	Rear screen washer.
44	25	Clear	Right rear door module.
45	30	Green	Front passenger seat.
46	-	-	-
47	20	Yellow	Sunblind.
48	15	Blue	Trailer connector power supply.
49	-	-	-
50	-	-	-
51	5	Tan	Steering wheel switches.
52	20	Yellow	Cigar lighter.
53	20	Yellow	Cubby box accessory power socket.
54	-	-	-
55	20	Yellow	Rear console accessory power socket.

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
56	10	Red	Supplementary Restraint system (SRS).
57	10	Red	Interior lamps.
58	-	-	-
59	-	-	-
60	5	Tan	Occupancy sensor. Passenger airbag disabling lamp.
61	5	Tan	Engine starting.
62	-	-	-
63	20	Yellow	Luggage compartment accessory power socket.
64	-	-	-
65	-	-	-
66	5	Tan	Diagnostics.
67	15	Blue	Trailer.
68	-	-	-
69	15	Blue	Automatic transmission.

LUGGAGE COMPARTMENT FUSE BOX

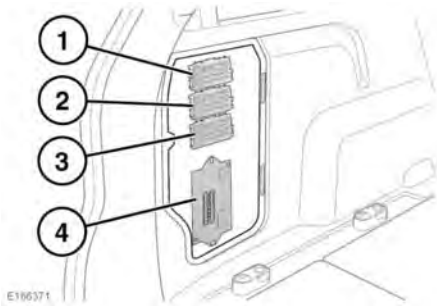

1. Fuse box 1
2. Fuse box 2
3. Fuse box 3
4. Fuse box 4

Fuse box 1

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
FA1	30	Green	Four-wheel drive systems.
FA2	15	Blue	Rear wiper.
FA3	5	Tan	Four-wheel drive systems.
FA4	10	Red	Telematics.
FA5	20	Yellow	Heated driver's seat.
FA6	20	Yellow	Rear heated seat - left side.
FA7	5	Tan	Wade sensing.
FA8	-	-	-
FA9	-	-	-
FA10	20	Yellow	Rear heating and ventilation.
FA11	30	Green	Deployable tow bar.
FA12	-	-	-

Fuse box 2

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
FB1	-	-	-
FB2	-	-	-
FB3	10	Red	Instrument panel.
FB4	5	Tan	Gateway module.
FB5	5	Tan	Auto high beam.
FB6	5	Tan	Camera.
FB7	5	Tan	Blind Spot Monitor (BSM).
FB8	10	Red	Head- Up Display (HUD)
FB9	-	-	-
FB10	5	Tan	Adaptive Cruise Control (ACC).
FB11	40	Orange	Audio amplifier.
FB12	20	Yellow	Audio amplifier

Fuse box 3

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
FD1	20	Yellow	Heated front passenger seat.
FD2	20	Yellow	Rear seat heater- right side.
FD3	10	Red	Glove box USB port. Rear USB port.
FD4	-	-	-
FD5	30	Green	Adaptive suspension.
FD6	25	White	Powered tailgate.
FD7	5	Tan	Auxiliary heater.
FD8	5	Tan	Auxiliary coolant pump.
FD9	5	Tan	Comfort relay.
FD10	-	-	-
FD11	40	Orange	Diesel Exhaust Fluid (DEF).
FD12	-	-	-

Fuse box 4

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
1	15	Blue	Touch screen. Front integrated control panel.
2	10	Red	Audio amplifier. Audio video input/output panel.
3	10	Red	Gesture tailgate.
4	10	Red	Navigation. Telephone.
5	15	Blue	Audio head unit.
6	15	Blue	Rear seat actuators. Rear seat entertainment.
7	-	-	-
8	-	-	-
9	-	-	-
10	-	-	-
11	-	-	-
12	-	-	-

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
13	-	-	-
14	-	-	-
15	15	Blue	Front and rear integrated control panels - heating and ventilation.
16	20	Yellow	Fuel fired booster heater.