


TOUCH SCREEN HOME MENU

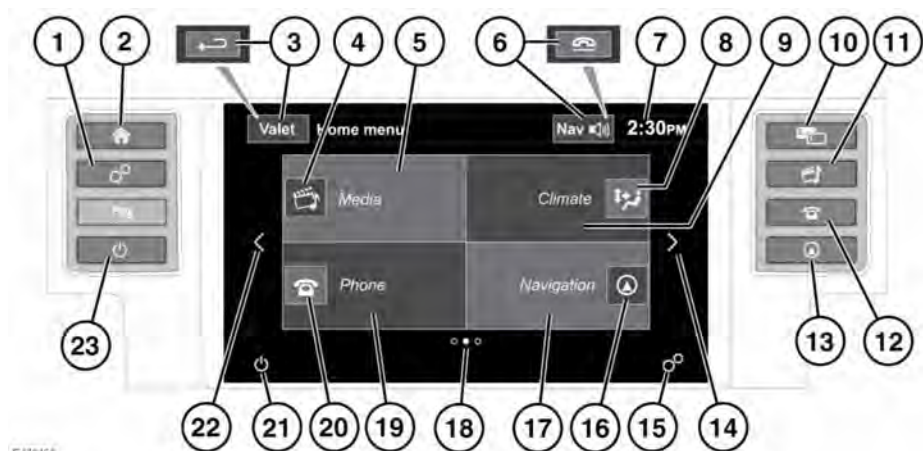

E170455



Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving.



Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery; preventing the engine from starting.



Avoid spilling or splashing liquids onto the Touch screen.

Note: The Touch screen display and the number of pages will vary, depending on the specification of the vehicle.

Note: The Touch screen will remain active until the ignition is switched off and the driver's door is opened.

The **Shortcuts Menu** is the next screen to the left of the **Home menu** screen. Use the **System settings** menu to enable/disable, select, or change which vehicle features are displayed on the **Shortcuts Menu** screen. See **88, SYSTEM SETTINGS**.

The **Extra features** menu is the next screen to the right of the **Home menu** screen. See **89, EXTRA FEATURES**.

1. Press to select the Touch screen **Setup** menu. Or if Park assist is fitted, see **139, PARK ASSIST**.
2. Press to select the **Home menu**.
3. Touch to select the **Valet mode**. During menu mode, the icon is changed to the back soft key, touch to return to the previous screen displayed.
4. Touch to carry out the following operations:
 - CD, Bluetooth, and USB: Alternate between play and pause.

- DVD in normal play: Short press to pause, or long press to activate slow play.
 - DVD in slow play or paused: Activate normal play.
5. Touch to display the Media menu screen. See **168, AUDIO/VIDEO CONTROLS**.
Dependent on the status of the current media selections, this may also display:
 - File and status information for the current media selection.
 - Audio icon/information (e.g., news, AM/FM, album/song title, etc.).
 6. While the Navigation system is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed to a phone icon; touch to end a call.
 7. Time display: Touch to adjust the time/date.
 8. Displays the current heating and ventilation distribution settings.
 9. Touch to display the Climate menu screen.
This will also display the following:
 - The system status.
 - The external temperature.
 10. Press to scroll through Media sources. When Dual view is fitted, this icon is changed and the button should be pressed to access the Dual view screen display.
 11. Touch the screen or press the button, to select the Media system; or if the Media system is already switched on, touch to select the current media source menu.

Note: When the system is active, current information for the media being played is displayed.

12. Press to display the **Phone** screen. See **200, TELEPHONE SYSTEM OVERVIEW**.
13. Press to select the Navigation system. The current destination route, or the **Nav menu** screen will be displayed. See **213, USING THE NAVIGATION SYSTEM**
14. Touch to navigate to the right of the currently displayed screen.
15. Touch to display the **Setup** menu. See **88, TOUCH SCREEN SETUP**.
16. Touch to carry out the following operations:
 - When no route guidance is selected: Access the Destination entry menu.
 - When route guidance is selected: Cancel guidance.
17. Touch to display the **Nav menu** screen. See **215, MAIN MENU**. This may also display the following:
 - When no route guidance is selected: The vehicle's current location is shown.
 - When route guidance is selected: The location of the current destination, the destination/waypoint icon, Expected Time of Arrival (ETA), and the time and distance to the current destination/waypoint are shown.
 - Navigation icons (e.g., destination entry, cancel guidance, etc.).
18. Number of pages indicator: A solid dot indicates the screen selected.

19. Touch to display the **Phone** screen.

See **200, TELEPHONE SYSTEM OVERVIEW**.

This may also display the following:

- The currently connected phone's name and network, or the phone's pairing status.
- Phone icons (e.g., do not disturb, battery status, signal strength, Bluetooth, voicemail).

20. Touch to carry out the following operations:

- When a phone is paired: Access the phonebook.
- When a phone is not paired: Access the phone connection screen.

21. Touch to switch the Touch screen off.
Press the Home menu button to switch the Touch screen back on.

22. Touch to navigate to the left of the currently displayed screen.

23. Press to switch the Touch screen on/off.

TOUCH SCREEN USE



Do not use excessive pressure when selecting items on the Touch screen.

TOUCH SCREEN CARE



Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact a Retailer/Authorised Repairer.

TOUCH SCREEN SETUP

Touch the Setup icon on the **Home menu** screen. See **86, TOUCH SCREEN HOME MENU**.

Note: If previously enabled, the **Setup** menu may also be accessed from the **Shortcuts Menu** screen.

The **Setup** menu screen is divided into 4 categories:

- **Screen**
- **System**
- **Voice**
- **Audio:** See **169, AUDIO SETTINGS**.

SCREEN SETTINGS

Volume pop-up: Displays the volume pop-up on/off icon.

Screensaver: Changes the screensaver.

Time out to home menu: The sub-menu selection screens can be set to revert to the **Home menu** screen after a predetermined length of time.

Theme: Changes the appearance of the Touch screen soft keys.

SYSTEM SETTINGS

Button feedback: Select to switch the soft key confirmation tone **on/off**.

Clock adjust: Select the **12** or **24** hour clock. Set the current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store the new settings.

Note: The clock can also be adjusted by touching the time display on the Touch screen.

Home menu shortcuts: Touch to select the vehicle's feature items, from the displayed list, to appear as shortcuts on the **Shortcuts Menu** screen.

Select **Clear all** to deselect all the previously highlighted (currently displayed) shortcuts and disable them from appearing on the **Shortcuts Menu** screen. Alternatively, touch each highlighted item to deselect individual features from the displayed list.

Select **Default** to enable the vehicle's predetermined shortcuts to be displayed.

Language: Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

Note: *Some languages are not yet available for both the System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.*

Volume presets: Adjust the volume for the available system's announcements (e.g., Parking aid, Phone, Voice, etc.).

SELECTING VALET MODE

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the loadspace. Valet mode also prevents operation of the Touch screen, to prevent access to telephone numbers or navigation addresses.

Each time Valet mode is used, a Personal Identification Number (PIN) must be entered.

To select Valet mode:

1. From the **Home menu** screen, select **Valet**.

2. Enter a memorable 4 digit PIN. You will be prompted to confirm the PIN. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.

3. **Valet mode activated** is displayed to indicate that a PIN has been accepted.

The loadspace is now securely locked in Valet mode and the **Valet mode On** screen is displayed.

DESELECTING VALET MODE

To deselect Valet mode:

1. When you re-enter the vehicle, select **Valet**.
2. Enter your memorable 4 digit PIN and touch the **OK** button.

Valet mode deactivated is displayed, to indicate that a PIN has been accepted.

- The loadspace will return to the previously set security requirement.
- The Touch screen will be enabled.

Note: *If the PIN is forgotten, Valet mode can only be deactivated by a Retailer/ Authorised Repairer.*

EXTRA FEATURES

Note: *The amount of available extra features is dependent on the vehicle's specification.*

From the **Home menu** screen, navigate to the right to display the **Extra features** screen. This menu allows the vehicle's Extra features to be displayed for adjustment, switching on/off, or for information.