








FOLDING THE REAR SEATS

-  Always make sure that objects carried in the vehicle are secured properly.
-  Never allow passengers to travel in the loadspace under any circumstances.
-  Make sure that when the seatback is raised, the locking mechanism is fully engaged.
-  When raising the rear seatbacks, make sure the seat belts are correctly routed and not trapped behind the seats.
-  Make sure the head restraints are raised to the correct position before the seats are used by a passenger.

FOLDING AND RAISING THE FIXED SEATS

-  When raising the rear seats, make sure that seat belts are correctly routed and not trapped behind the seats.

The split folding rear seats can be folded completely to accommodate large loads, or partially to accommodate large loads and still retain seating for passengers.

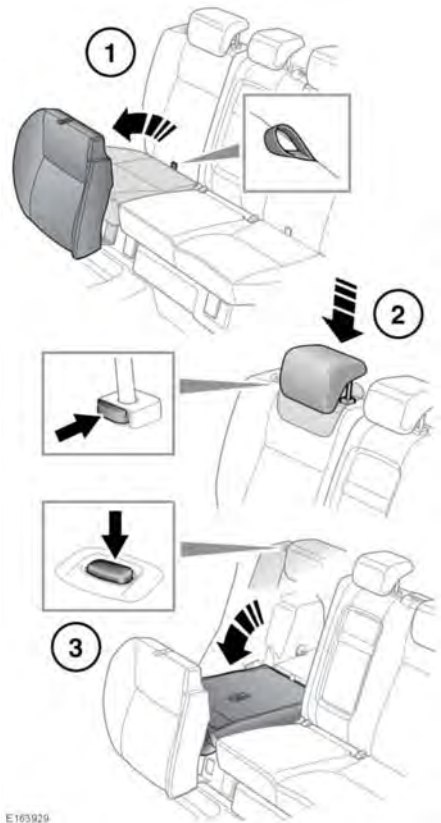

E163929

Fold part or all of the seat, as follows:

1. Pull the strap on the required cushion(s), to raise to the vertical position.
2. Fully lower the head restraints.
3. Press the seatback release button(s), then lower the seatback(s) until locked in place.

To raise the rear seat(s), follow the lowering process in reverse.

Rear seats

⚠ Make sure that when the seatback(s) is raised, the locking mechanism is fully engaged. If the seatback(s) is not fully locked in place, red markers will be visible around the seatback buttons.

Adjust the head restraint(s).

FOLDING AND RAISING THE SLIDING SEATS


⚠ When raising the rear seats, make sure that seat belts are correctly routed and not trapped behind the seats.

The split folding rear seats can be folded completely to accommodate large loads, or partially to accommodate large loads and still retain seating for passengers.



To fold a second row seatback: Lift the lever on the side of the seat and pull the seatback forwards until it locks into the lowered position.

To raise the seatback: Lift the lever to unlock the seatback and then lift until it is locked firmly in the upright position.

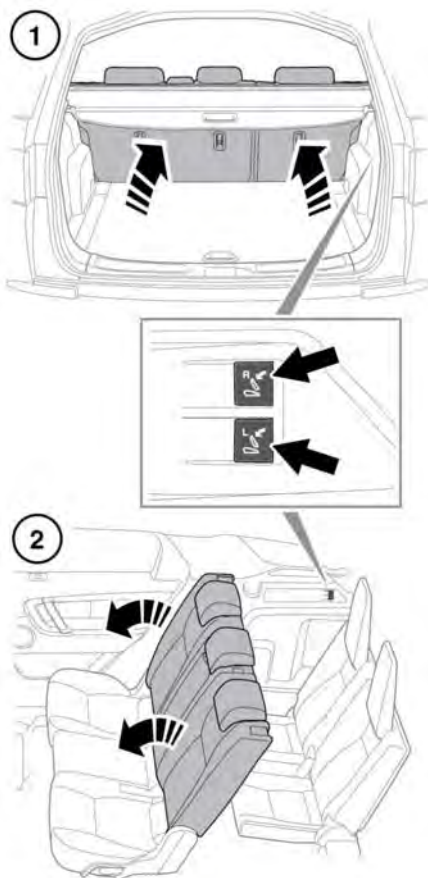

The second row seatbacks can be folded from inside the loadspace (1), or by the passengers occupying the third row seats (2):

- Pull back on the switch to release the seatback locking mechanism for the Right (R) or Left (L) side seatback.

Note: The switches will only operate when the vehicle is stationary and the tailgate is open.

- Push forward on the unlocked seatback to lower it into the folded position.

To reset: Lift the seatback into the upright locked position using the lever on the side of the seat. Make sure the seatback locks firmly into the upright position.



E164250

To recline the second row seatback: Lift the lever on the side of the seat and push the seatback into the recline position.

To reset the seatback into the upright position: Lift the lever and pull the seatback forward into the upright position. Make sure the seatback locks firmly into the upright position.



E164260

To fold the centre of the seatback: Press the release button on the top of the seatback, then fold the centre of the seatback forwards into the lowered position.

To reset into the upright position: Lift the centre of the seatback until it locks firmly into the upright position.

Note: The second row centre seatbelt incorporates a locking feature to prevent the seatbelt from being pulled out too far when the seatback is folded flat. To reset this feature after folding the seat and returning to the upright position, pull the belt twice, the seatbelt will then operate as normal.



E164261



To move a rear seat forward or back:

- Lift the bar at the front of the rear seat. Then slide the rear seat into the required position.
- Release the bar and make sure the rear seat is locked firmly in position.

ACCESS POSITION (7 seat vehicle)



The vehicle must not be driven with the rear seats in the access position. Motion of the vehicle could cause the seatback to fall forwards suddenly, causing injury.

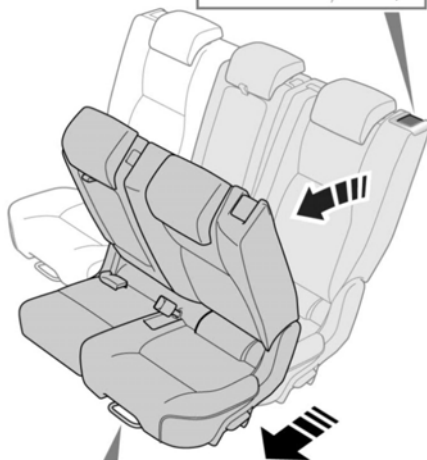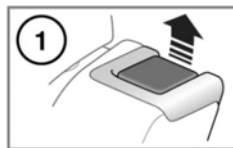

E163645

To tilt the seatback forwards: Pull the lever on the top of the seatback upwards (1) to release the locking mechanism, and then move the seatback forwards into the tilt position.

To move the seat forwards: Pull the lever on the front of the seat upwards (2) to release the locking mechanism, and then move the seat forwards.

⚠ When returning the seat from the access position, make sure nothing is trapped beneath the returning seat.


⚠ Make sure that when the seatback and seat are returned to the pre-access position, the locking mechanisms are fully engaged. Physically test to make sure that the seat and seatback is secure before driving.

FOLDING AND RAISING THE THIRD ROW SEATS

⚠ The head restraint must always be raised when using the third row seats.

⚠ When raising the rear seats, make sure that seat belts are correctly routed and not trapped behind the seats.

⚠ Beware of trapping fingers when raising and lowering the third row seat.

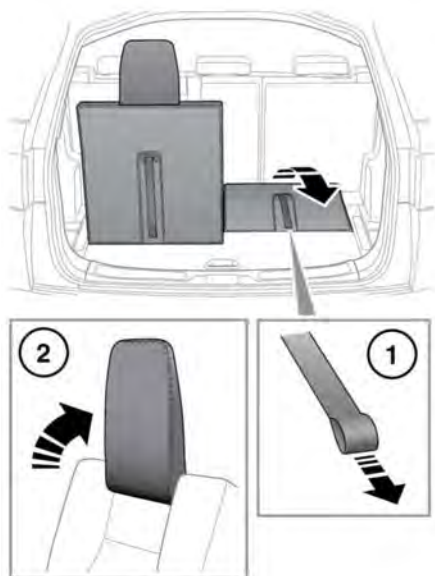



E163563

To raise a third row seat:

1. From inside the loadspace: On the seat to be raised, pull the strap on the rear of the seat, to lift the seat into the raised position.

Note: The seat is heavy, so care should be taken when raising the seat.

2. From inside the vehicle: Lift the head restraint, until it locks into the upright position.

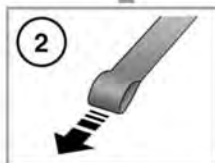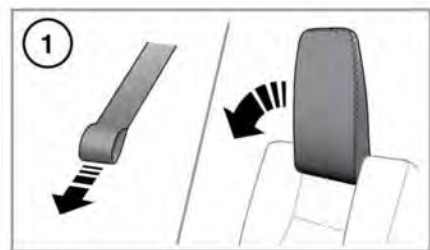

E163594

INSTRUCTIONAL VIDEO



E166650

To fold a third row seat:

1. From inside the loadspace: Pull the strap on the rear of the seat to be folded, to release the head restraint locking mechanism and then manually fold the head restraint forward.
2. To fold the seat: Pull the strap again to release the seat locking mechanism, and then fold the seat forwards into the stowed position.

Note: The seat is heavy, so care should be taken when lowering the seat.