


PORTABLE MEDIA CONTROLS

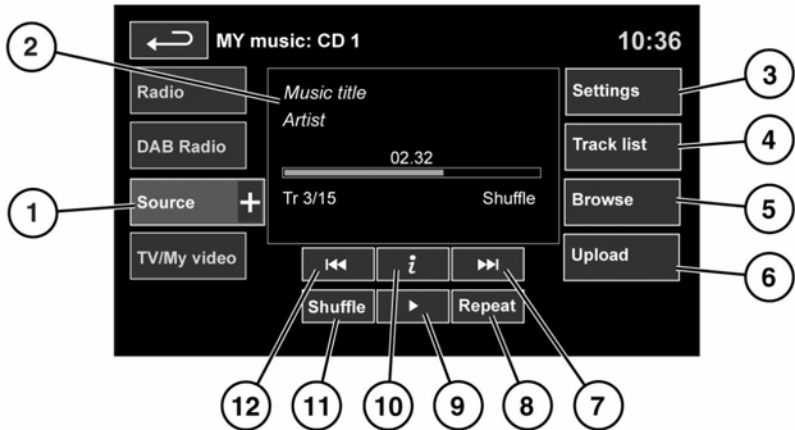

E155698



Do not adjust the main Media system's controls, or allow the system to distract the driver while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.



Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

Note: Some electronic equipment being used within the vehicle, or within close proximity to the vehicle, may affect the performance of this system (e.g., charging a device, etc.).

Press the Media menu button, or touch the Media menu soft key from the Touch screen **Home menu** and then select the **My music** soft key. See **86, TOUCH SCREEN HOME MENU** and also see **168, AUDIO/VIDEO CONTROLS**.

My music includes CD, iPod, USB, AUX and **Bluetooth®** wireless technology devices. The full infotainment system also includes a **Stored CD** menu.

Note: iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

1. Touch the **Source** soft key to display and select an option.
Note: The sound quality and volume levels, available from devices connected to the auxiliary input, may vary widely.
2. A display of information about the current track, including elapsed run-time. Some of this information is also displayed in the Instrument panel.
Note: Only connected devices, that support ID3, shall have the information displayed.

3. **Settings:** Select to switch traffic and news announcements on or off. Additionally, for MP3 recorded media, you can select the number of list entries that are skipped, when you use the page up/down arrows when navigating a list.

4. **Track list:** Select to view the current CD or the **Stored CD** menu track list. Select a track to start playback.

5. **Browse:** (iPod, USB, and the **Stored CD** menu files).

- Select to view the contents of the connected device, which are displayed as dictated by the file structure.
- Select a file to start playback (Browse view will remain). Select a folder or subfolder to view their contents.
- To return to the Controls menu, select the Back soft key.

Note: *If the iPhone is connected via a USB cable, so that audio can be played or for phone charging, Bluetooth wireless technology devices audio is disconnected.*

6. **Upload:** Applicable to the **Stored CD** menu only.

Select to view and manage the CDs loaded onto the CD store.

- Select **Upload**, alongside an empty slot, to upload the current CD. There are 10 slots available.
- If the CD store is full, select **Replace** to overwrite an existing CD.

In each case, a confirmation pop-up will appear. Select **Yes** to continue.

Note: *Loading time is dependent on the content type. A % count up is displayed. Other features can be selected while the upload is in progress.*

7. **Skip/Scan forward:**

- Touch and release to skip to the next track.
- Touch and hold to scan forwards through the current track. Play will resume when the soft key is released.

8. **Repeat**, in **CD** mode:

- Touch and release to repeat the current track continuously until Repeat mode is cancelled. **Repeat track** is displayed.
- Touch and release again to repeat the current Stored CD (or folder for MP3 discs) continuously until Repeat mode is cancelled. **Repeat disc** or **Repeat folder** is displayed.
- Touch and release a third time to cancel Repeat mode.

Note: *Selecting **Shuffle** will cancel Repeat mode, but **Repeat track** can be selected while Shuffle mode is active (this cancels the previously selected Shuffle mode).*

Repeat, in **USB** or **iPod** mode:

- Select to repeat the current track.
- Select again to repeat the current folder (USB), or to cancel Repeat mode (iPod). Select again to cancel Repeat mode for USB devices.

Note: *Repeat mode is not available for Bluetooth wireless technology devices.*

Note: *Selecting **Shuffle** will cancel Repeat mode.*

9. Pause/Play: Select to pause playback. Select again to resume playback.

10. Information: Touch to view more information about the current track.

11. Shuffle:

- Touch and release once to play random tracks from the current CD, MP3 folder, USB folder, or iPod playlist. A **Shuffle** message is displayed.
- Touch and release again to play random tracks from CD, MP3 disc, USB folders, or tracks on the media device, or tracks loaded onto the CD store. **Shuffle all** is displayed.
- Touch and release again to cancel Shuffle mode.

Note: *Shuffle mode is not available for **Bluetooth** wireless technology devices.*

12. Skip/Scan backward:

- Touch and release within 3 seconds of track playback to skip to the previous track.
- Touch and release after 3 seconds of track playback to skip to the beginning of the current track.
- Touch and hold to scan backwards through the current track. Playback will resume when the soft key is released.

PORTABLE MEDIA CONNECTIONS

Compatible portable devices include:

- USB mass storage devices (e.g., a memory stick). Devices must use FAT or FAT32 file format.

- iPod (iPod Classic, iPod Touch, iPhone, and iPod Nano are supported - full functionality for older devices cannot be guaranteed). iPod Shuffle functionality cannot be guaranteed.

Note: *iPod and iPhone are trademarks of Apple Inc., registered in the US and other countries.*

- Auxiliary device (personal audio, MP3 players, all iPods).

Note: *Auxiliary devices have no Touch screen control.*

If you are connecting an iPod, mass storage, or a **Bluetooth®** wireless technology device, use the Touch screen to operate and search the device. Many of the controls are similar to those available for CD player.



Disconnect your iPod when leaving the vehicle. Failure to do so may result in the iPod battery discharging.

Note: *The Media system will play MP3, WMA, and AAC files.*

To maximise playback quality, it is recommended that lossless compression is used for any media files on USB or iPod. Failing this, it is recommended that compressed files utilise a minimum bit-rate of 192 kb/s (a higher bit-rate is strongly recommended).

Note: *Some MP3 players have their own file system that is not supported by this system. To use your MP3 player, you must set it to **USB Removable Device** or **Mass Storage Device** mode. Only music that has been added to the device in this mode can be played.*

For a list of compatible **Bluetooth** wireless technology devices, please refer to the Land Rover website at:
www.landrover.com.

The **Bluetooth** wireless technology devices listed have been tested for compatibility with these vehicles. Performance will vary, based on the device's software version and battery condition. Devices are warranted by their manufacturer, not by the vehicle's warranty.

CONNECTING A DEVICE

⚠ Always refit the rubber cover when a portable device is not plugged in. This prevents damage to the sockets. The cover is not waterproof.

⚠ Read the manufacturer's instructions for any device, before it is connected to the audio system. Make sure the device is suitable and complies with any instructions regarding connection and operation. Failure to do so may result in damage to the vehicle's audio system or the auxiliary device.

Connect the device into the appropriate socket.

The following sockets are located in the front centre cubby box, between the front seats:

- USB/iPod socket.
- 3.5 mm AUX socket.

The following sockets are located in the rear centre console, between the front seats:

- Rear media USB/iPod socket.
- Rear media AV sockets.

⚠ Do not plug non-audio devices into the USB port.

Note: Use the cable supplied with your media device to connect to the USB socket.

Note: A USB hub cannot be used to connect more than 1 USB device to the audio unit.

Note: Devices connected to the USB ports will be charged, but devices that are fully discharged will not play.

Note: In some cases, if an iPhone is connected via a USB cable for music and also to a **Bluetooth**® wireless technology device for other phone functions, the audio will stream through only the last connected port. For example, if a **Bluetooth**® wireless technology device is the last connection made to the iPhone and the iPod lead is connected, no audio will be heard through the speakers via the iPod lead. Track title and time information will still be shown on the display. Audio output from the speakers will only be obtained if the user chooses audio mode on the **Bluetooth**® wireless technology device. To address this issue, disconnect and reconnect your device's USB cable or open the iPod application on the iPhone, select the **Bluetooth** icon and select Dock Connector on the pop-up.

When an iPod is connected, playback will continue from the point at which it was last playing, provided the iPod battery is in a good state of charge.

Note: Options, such as **Repeat** and **Mix**, relate to the device currently playing; they will not apply to any subsequent device.

The 3.5mm AUX socket allows extra equipment (e.g., personal stereos MP3 player, hand-held navigation unit, etc.) to be connected to the audio system.

Note: *iPod shuffle may be connected via the AUX socket.*

Note: *On vehicles fitted with Rear Seat Entertainment (RSE), extra Audio/Visual sockets are provided. This allows auxiliary equipment to be linked to the rear DVD screens. For fitment information, please refer to the manufacturer's instructions.*

PLAYING A PORTABLE DEVICE

If you are using a USB mass storage device, or an approved iPod, playback can be controlled using the Touch screen.

Note: *iPod is a trademark of Apple Inc., registered in the US and other countries.*

If you are using a **Bluetooth®** wireless technology device, you can control playback using the Touch screen, but some controls are unavailable.

If you are using any portable media device via the AUX socket, then you must control playback from the device itself.



It is not recommend the use of an external Hard Disc Drive (HDD), connected via the USB link, while the vehicle is in motion. These devices are not designed for in-car use and may be damaged.

CONNECTING MULTIPLE DEVICES



Do not plug non-audio devices into the USB port.

You can connect multiple devices simultaneously to the portable media interface and switch between them using the Touch screen. Select **iPod**, **USB**, **Bluetooth**, or **AUX**, to switch between modes.

The device docked first will remain the active device until you choose to change. If, after changing to the newly-docked device, you change back to the first device, play will resume at the point you left it (USB and iPod only).

Note: *You cannot use a USB hub to connect more than one USB device to the Media unit.*

Note: *Devices connected to the iPod and USB ports will be charged, but devices that are fully discharged will not play.*

Note: *Options, such as Repeat and Shuffle, relate to the device currently playing; they will not apply to any subsequent device.*

PAIRING AND CONNECTING USING THE MEDIA PLAYER

For further information on **Bluetooth®** wireless technology, see **200, BLUETOOTH® INFORMATION**.

Note: *The process of pairing and connecting a media device with the vehicle, using the media device, will vary depending on the type of media device.*

1. Switch on the ignition and make sure the Touch screen is active.
2. From the **Home** menu, select the Media soft key, then select the **My music** and **Source +** soft keys.
3. Select **Bluetooth**.
4. A menu will appear. Select **Change device**.

5. Select the **Device to vehicle** option.

Note: The vehicle's **Bluetooth** wireless technology system is only discoverable for 3 minutes.

6. Using the media device, search for **Bluetooth** wireless technology devices. On some media devices, this is referred to as a new paired device. See the media device's operating instructions for further information.
7. When the vehicle's **Bluetooth** wireless technology system is discovered, follow the on-screen instructions. Select **Yes**, when prompted, to confirm the pairing.
Either the device, or the vehicle's system will ask for a PIN (Personal Identification Number). When prompted, enter a PIN of your choice and select **OK** to confirm.
8. Enter the same PIN into the other device.
9. Once the device is paired and connected to the system, a confirmation message will be displayed, before switching back to the **Bluetooth** screen.

Note: Some media devices do not automatically connect and need to be manually connected via the device or by using the **Change device** option.

PORTABLE MEDIA PAIRING AND CONNECTING USING THE TOUCH SCREEN

1. Switch on the device's **Bluetooth®** wireless technology device connection. Make sure that it is in **Bluetooth** wireless technology device discoverable mode, sometimes referred to as 'find me' mode (see the device's operating instructions for more information).
2. Switch on the ignition and make sure the Touch screen is active. See **86, TOUCH SCREEN HOME MENU**.
3. From the **Home menu**, select the Media menu and then select **My Music**. See **179, PORTABLE MEDIA CONTROLS**.
4. Touch the **Bluetooth** soft key.
5. A menu will appear. Select the **Change device** soft key.
6. Select the **Vehicle to device** soft key.
7. Identify the device from the displayed list and select the corresponding **Pair and connect** option.

Note: If more than 5 devices are detected, it may be necessary to use the scroll bar to see the entire list.

8. When prompted, enter the Personal Identification Number (PIN) code into the device. See the device's operating instructions for more information.
9. Once the device is paired and connected to the system, a confirmation message will be displayed before switching to the **My music, Bluetooth** view.

Note: Due to the duration of a **Bluetooth** wireless technology device search, it is advised that the time out to home screen feature is switched off before attempting to search for **Bluetooth** wireless technology devices. This setting can be changed by selecting **Screen** from the **Setup** menu, and then selecting **Time out to home menu**.

CHANGING/DISCONNECTING A DEVICE

1. Switch on the ignition and make sure the Touch screen is active. See **86, TOUCH SCREEN HOME MENU**.
2. From the **Home menu**, select the Media menu, and then select **My Music**. See **179, PORTABLE MEDIA CONTROLS**.
3. Touch the **Bluetooth** soft key.
4. From the **Bluetooth** menu, select **Change device**.
5. Select **Disconnect**. A confirmation pop-up will appear and then you will be given the option to **Search new** or select a different device from the list of paired devices.