

## WARNING LAMPS AND INDICATORS



**Do not ignore warning lamps or indicators. Take appropriate action as soon as possible. Failure to do so may result in death or serious injury, or serious damage to the vehicle.**

RED warning lamps are for primary warnings. A primary warning must be investigated immediately by the driver or qualified assistance, before continuing.

AMBER and YELLOW warning lamps are for secondary warnings. Some indicate that a vehicle system is in operation, others indicate that the driver must take action and then seek qualified assistance as soon as possible.

GREEN and BLUE lamps within the Instrument panel indicate a system's status.

## LAMP CHECK

A warning lamp bulb check is initiated when the ignition system is switched on and lasts for 3 seconds (except for the airbag warning lamp, which will remain on for 6 seconds). If any warning lamp remains on after this period, investigate the cause before driving.

Some warning lamps have associated messages displayed in the Message centre.

**Note:** Not all warning lamps are included in the check (e.g., high beam headlamps and direction indicators).

**Note:** If a trailer with LED lights is connected to the trailer socket, the bulb check may not be performed.

## BATTERY CHARGE (RED)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp remains on or illuminates while driving, there is a fault with the battery charging system and a message will be displayed in the Message centre. Seek qualified assistance urgently.

## BRAKE (RED)



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp illuminates while driving, suspect low brake fluid level or a fault with the Electronic Brake Distribution (EBD) system.

Stop the vehicle as soon as safety permits and check and top up the brake fluid, if necessary. If the lamp remains illuminated, seek qualified assistance before continuing.

## CRITICAL WARNING MESSAGE (RED)



Illuminates when a critical warning message is available in the Message centre.

## ENGINE TEMPERATURE (RED)



Illuminates when the engine temperature is too high. The Message centre will also display the message **ENGINE OVERHEATING**.

Stop the vehicle as soon as safety permits and seek qualified assistance before continuing.

## LANE DEPARTURE WARNING (RED)



If the Lane Departure Warning (LDW) system detects that the vehicle has crossed either of the lane markings that it is travelling within, without activation of the appropriate direction indicator, then the relevant lane will illuminate red. This will also be accompanied by a vibration felt through the steering wheel.

## LOW OIL PRESSURE (RED)



If the lamp flashes or illuminates while driving, stop the vehicle as soon as safety permits and switch off the engine immediately.

Check and top up the oil level, if necessary. Start the engine; if the lamp remains illuminated, switch the engine off immediately and seek qualified assistance before continuing.

## PARKING BRAKE (RED)



Illuminates when the Electric Parking Brake (EPB) is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.

## SEAT BELT (RED)



Illuminates, accompanied by a chime, when the vehicle is in motion and an occupied front seat belt is unbuckled. The lamp will extinguish when the relevant seat belt is buckled.

**Note:** Objects on the front passenger seat may activate the Seat belt reminder feature. It is recommended that any objects placed on the front passenger seat are secured using the seat belt. See **36, USING THE SEAT BELTS**.

## ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

## AIRBAG (AMBER)



Illuminates as a bulb check, when the ignition is switched on, and extinguishes after 6 seconds.

If the lamp illuminates again, after the bulb check or when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

## ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on.

## Warning lamps

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

### AUTOMATIC SPEED LIMITER (AMBER)



Illuminates when the Automatic Speed Limiter (ASL) is active.

### BRAKE (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on. If the lamp illuminates after starting the engine or while driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system.

The vehicle can still be driven with care, but seek qualified assistance urgently.

### DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Flashes when DSC is active.

If there is a fault, it will remain illuminated and the Message centre will display **DSC NOT AVAILABLE**. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.

### DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off. A chime will sound and a confirmation message will be displayed in the Message centre.

### ENGINE/TRANSMISSION (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on. If the lamp illuminates when the engine is running, there is an emissions related fault with the engine or transmission.

The vehicle can be driven, but may enter Limp-home mode with the possibility of reduced performance. Seek qualified assistance as soon as possible.

If the warning lamp flashes while the engine is running, reduce speed and seek qualified assistance urgently.

### EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

### FOLLOW MODE (AMBER)



Illuminates when the Adaptive Cruise Control (ACC) system is in Follow mode.

## GENERAL WARNING/ INFORMATION MESSAGE (AMBER)



Illuminates when a non-critical warning message or an information message is available in the Message centre.

## GLOW PLUGS (AMBER)



Illuminates when the ignition is switched on, to indicate that the glow plugs are active.

## LOW FUEL WARNING (AMBER)



Illuminates when the fuel level is low. Refuel at the earliest opportunity.

The arrow shows which side of the vehicle to locate the fuel filler flap.

## PROGRESS CONTROL SYSTEM (AMBER)



Illuminates to confirm that the Progress control system is enabled.

## REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

## TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message centre, to warn that 1 or more tyres are significantly under-inflated.

Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

## AUTO HIGH BEAM (GREEN)



Illuminates when the Auto high beam feature has switched on the high beam headlamps.

## CRUISE CONTROL (GREEN)



Illuminates when Cruise control or Adaptive Cruise Control (ACC) is active.

## DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

## FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

## FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

## GEAR SHIFT (GREEN)



The gear shift indicator illuminates briefly at the recommended gear change point (up-shift).

## Warning lamps

The shift indicator will not illuminate while Cruise control is active and not being overridden by pressing the throttle pedal.

**Note:** This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.

### HILL DESCENT CONTROL (GREEN)



Illuminates continuously when Hill Descent Control (HDC) is selected and HDC operating conditions are met.

If the lamp flashes, HDC has been selected, but the operating conditions are not being met or HDC fade-out is occurring.

### INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent stop/start system.

**Note:** Other warnings normally associated with an engine shutdown, for example, the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent stop/start system.

### LANE DEPARTURE WARNING (GREEN)



Recognised lane markings will illuminate green, otherwise they will illuminate grey. The lamp illuminates grey to confirm the Lane Departure Warning (LDW) system is enabled.

### SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

### TRAILER DIRECTION INDICATORS (GREEN)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the direction indicator warning lamp. If the lamp fails to flash, the direction indicator bulb on the trailer may be faulty.

**Note:** If the attached and connected trailer is fitted with LED lights, the bulb check may not be performed.

### HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

### FOLLOW MODE OFF (GREY)



Illuminates when the Adaptive Cruise Control (ACC) system is disabled.