


## MANUAL CLIMATE CONTROL

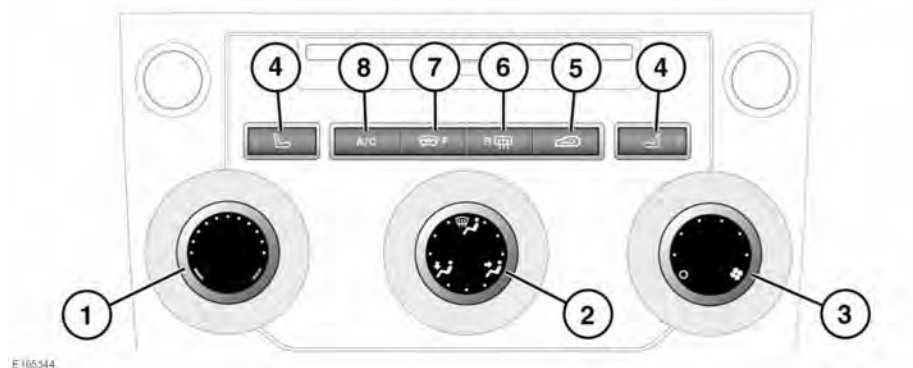

**Note:** When the ECO program is selected, heating and ventilation settings are automatically adjusted to reduce energy consumption. See **158, ECO PROGRAM**.

1. Temperature control, rotate to adjust.
2. Air distribution: Rotate to direct air flow to the required areas.
3. Blower speed: Rotate to adjust air flow speed through the vents.
4. Seat heaters: Press once to switch on to the high setting, twice to switch on to medium, and a third time to switch on to low. Press a fourth time to switch off.
5. Recirculation:

- Press briefly to switch on recirculation.

**Note:** The recirculation operation time will vary depending upon the ambient temperature.


- Press and hold to switch on continuous recirculation.
- When recirculation is in operation, press briefly to switch off.

6. Heated rear screen: Press to switch on/off.
7. Heated windscreen: Press to switch on/off.
8. Air Conditioning (A/C): Press to switch on/off.

**Note:** The amber tell-tale indicators in the switches will illuminate when the function is selected.

**Note:** In low temperatures, it is advisable to close the centre face-level vents, and direct air flow from the outer face-level vents towards the side windows. This will help to keep the windows clear of ice.

## AUTOMATIC CLIMATE CONTROL

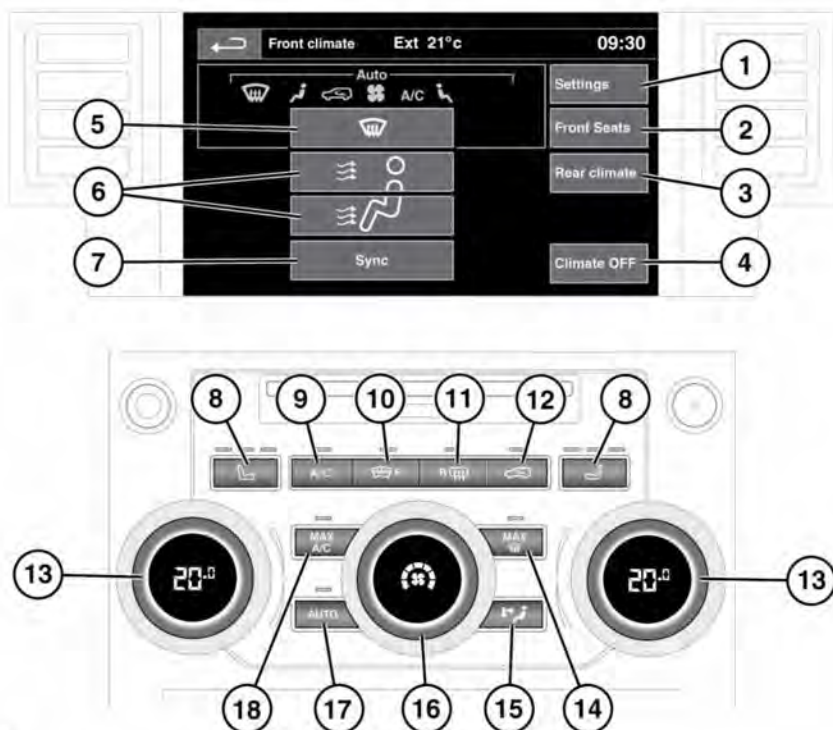

E162148

**Note:** When the ECO program is selected, heating and ventilation settings are automatically adjusted to reduce energy consumption. See **158, ECO PROGRAM**.

1. Touch to select the Climate control settings menu. The following options can be set:

- Recirculation sensitivity, select Off, Low, Medium or High.
- Auto power, select Low, Medium or High.

- Auto heated screens, the front or rear heated screens can be selected or deselected to operate when AUTO mode is in operation.

**Note:** When the ECO program is selected, auto power will adjust to the low setting and Auto heated screens will be deselected. These settings can then be adjusted if required.

2. **Front seats:** Touch to select the front Heated seats or front Climate seats settings screen.

3. **Rear climate:** Touch to select the Rear climate settings screen. The following options can be set:

- Switch rear Climate control on/off.
- Control the rear climate fan speed.
- Rear panel lock, switch on/off.

4. **Climate OFF:** Touch to switch off the Climate control system.

5. Windscreen air distribution: Touch to switch on/off.

6. Air distribution: Touch the upper (face distribution) or lower (body/feet distribution) area to select.

7. Touch to synchronise the driver and front passenger climate zone settings.

8. Front Heated seats or Climate seats:

- If front Heated seats are fitted: Press once to switch on high, twice to switch on low and a third time to switch off. An indicator in the switch will illuminate to indicate that the seat heater is switched on.
- If Climate seats are fitted: Press the switch to select the Climate seats settings menu screen. See **93, CLIMATE SEATS.**

9. Air Conditioning (A/C): Press to switch on/off.

10. Heated windscreen: Press to switch on/off.

11. Heated rear screen: Press to switch on/off.

12. Recirculation:

- Press briefly to switch on recirculation.

**Note:** The recirculation operation time will vary depending upon the ambient temperature.

- Press and hold to switch continuous recirculation on.
- When recirculation is in operation, press briefly to switch off.

13. Left and right temperature controls: Rotate either control to adjust the temperature.

**Note:** It is not possible to achieve a temperature differential of more than 4°C between the left and right sides.

14. Maximum defrost program: Press to switch on/off. The system will automatically adjust the blower output for maximum clearing. In addition, the windscreen and rear screen heaters will be activated.

15. Press to switch the Climate control system on/off.

16. Blower speed: Rotate to adjust air flow speed through the vents. In manual mode, the current speed selection is indicated by an illuminated LED.


17. AUTO mode: Press to switch fully automatic mode on/off. Depending on the specification of the vehicle, the various options for AUTO mode can be set via the Climate settings menu.

18. MAX A/C: Press to switch the maximum air conditioning (A/C) mode on/off.

**Note:** The amber tell-tale lights above the switches will illuminate when the function is selected.

**Note:** In low temperatures, it is advisable to close the centre face-level vents, and direct air flow from the outer face-level vents towards the side windows. This will help to keep the windows clear of ice.

## AIR VENT OPERATION

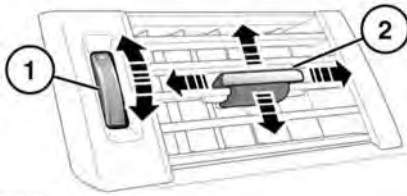

The vents can be opened using the following procedure:

1. To open the vent, rotate the thumb wheel fully upwards, from the bottom (closed) position to the (top) open position.
2. After the vent has been opened using the thumb wheel, the direction control can be used to adjust the direction of air flow.

**Note:** The vent can only be fully closed again using the thumbwheel. The vent can be closed regardless of the position of the directional control.

- ❗ Do not insert or attach items to the vents, for example, pens, air fresheners, etc.
- ❗ Do not use excessive force while operating the vent control or the thumb wheel.

## HEATED SEATS

**Note:** Heated seats consume a great amount of battery power. They will operate only when the engine is running. If the Heated seat/s are operating when the ECO program is selected, the Heated seat/s will switch off automatically. The Heated seat/s can be switched on again, but this may affect the fuel economy of the vehicle. See **158, ECO PROGRAM**.

### Front Heated Seats

Press the relevant front Heated seat button to enable. A pop-up menu will appear in the Touch screen.

- Touch the up arrow icon to switch on at the maximum setting (3 red bars).
- Touch the down arrow icon once or twice to reduce the setting (2 and 1 red bars).
- Touch the down arrow icon a third time to switch off the Heated seat.

### Rear Heated Seats

**Note:** If fitted, the rear Heated seats (non-climate) can only be operated using the switches located on the rear of the centre console.

Press the relevant rear Heated seat button to switch the required seat heater on at the maximum setting; the 3 LED indicators in the button will illuminate.

Press a second time to set the Heated seat at the medium setting; 2 LED indicators will illuminate.

Press a third time to set the Heated seat at the lowest setting; 1 LED indicator will illuminate.

Press a fourth time to switch off.

## CLIMATE SEATS

**Note:** The Climate seats will only operate when the engine is running.

If the Climate seat/s are operating when the ECO program is selected, the Climate seat/s will switch off automatically. The Climate seat/s can be switched on again, but this may affect the fuel economy of the vehicle. See **158, ECO PROGRAM**.

Press the relevant front Climate seat button to enable. A pop-up menu will appear in the Touch screen.

## Heated ventilation

- Touch the up arrow icon to switch heated ventilation on at the maximum setting (3 red bars).
- Touch the down arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the down arrow icon a third time to switch off the seat ventilation.

## Cooled ventilation

- Touch the down arrow icon to switch cooled ventilation on at the maximum setting (3 blue bars).
- Touch the up arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the up arrow icon a third time to switch off seat ventilation.

## Seat zone selection

Constant selection of the **Seat zone** soft key will scroll through 3 choices of seat zone; full seat, cushion, or seatback only.

## TIMED CLIMATE

The Timed climate system, when in operation, provides a comfortable temperature inside the cabin, in advance of using the vehicle or maintaining a temperature when leaving the vehicle for a short period.

The Timed climate system has control options for either timed or manual setting via the Touch screen, or it can be operated remotely by using the Timed climate remote.

Dependent on the external ambient temperature, the Timed climate system will automatically choose to draw in fresh air to cool the cabin, or to operate the Auxiliary heater to warm it.

Also, in low ambient temperatures, the Auxiliary heater helps to boost the temperature of the engine's coolant for improved heater and starting performance.

**Note:** *When the heater is operating, exhaust fumes from the heater may be visible exiting from under the front of the vehicle. This is normal and is not a cause for concern.*



**Do not operate the Timed climate system when refuelling the vehicle. Doing so may cause fuel vapours to combust, causing a fire/explosion.**



**Do not operate the Timed climate system while the vehicle is in an enclosed space. Doing so can cause a build up of highly toxic fumes which may cause unconsciousness or death.**

Timed climate may not operate or will switch off automatically in the following scenarios:


- If the fuel level is low.
- If the vehicle's battery charge is low.
- If the coolant temperature is at or above its required temperature.

## TIMED CLIMATE TOUCH SCREEN CONTROLS

The Touch screen can be used to either preset activation times or to operate the system manually.

When the system is operating, the LED in the Climate control **AUTO** button will flash.

**Note:** *The system will cease operation if the engine is started.*

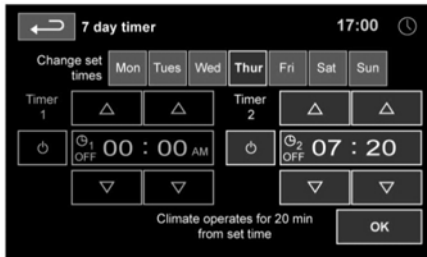

E140084


To set a Timed climate program:

1. Touch the **Timed Climate** soft key on the **Extra features** screen, see **86, TOUCH SCREEN HOME MENU**. Select the day for which you want to set a program, or select **All Week** to select the same start time for every day.
2. Touch the **Timer 1** or **Timer 2** icon. The timers can be toggled between on and off using the power soft key.
3. Touch the up or down arrows to set the start time. Hours and minutes are adjusted separately.
4. Touch **OK**. The screen will display the activation time. If required, set the time for the other timer using the same process.

**Note:** The time format, 12/24 hour clock, is determined by the time settings currently selected in the **System settings** menu.

## TIMED CLIMATE REMOTE CONTROLS

The Timed climate remote control has an approximate range of 100 metres. There is no need to point the antenna at the vehicle.

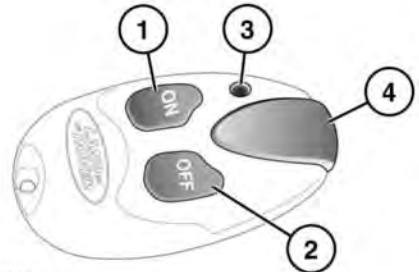

E155970

1. **ON** button.
2. **OFF** button.
3. LED (operation indicator).
4. Antenna.

**Note:** Avoid touching the antenna when operating the **ON** or **OFF** buttons.

Press and hold the **ON** button for approximately 2 seconds. The LED will illuminate to confirm that an automatic heating program has been initiated. The LED flashes once every 2 seconds to indicate that the heater is active.

The heating program will continue for 20-30 minutes, when it will switch off automatically to prevent the vehicle's battery from discharging. It also switches off automatically if the engine is started.

The LED indicator signals various states and conditions for the heater, as follows:

# Heating and ventilation

- Illuminates red for 2 seconds when the **OFF** button is pressed, to indicate that the program has stopped.
- Flashes green or red for 2 seconds then stops when the **ON** or **OFF** buttons are pressed, to indicate that no action has been taken.
- Illuminates orange for 2 seconds before showing green or red, to indicate that the remote battery is low.
- Flashes orange for 5 seconds to indicate that no action has been taken and the remote battery should be replaced.

## Additional remotes

Extra remote controls can be programmed to operate the heater. A maximum of 3 remote controls can be programmed to each vehicle. Contact a Retailer/ Authorised Repairer to purchase extra remote controls and have them programmed to the vehicle.

## REPLACING THE REMOTE BATTERIES



E155971

With the back of the remote control facing upwards, use a coin or a similar implement to rotate the battery cover. Lift the cover off to reveal the battery compartment. Remove the old battery and, making sure the correct polarity is maintained, insert a replacement 3.3 volt, CR1/3N battery. Replace the cover and rotate it to lock.

**Note:** Avoid touching the new battery. Moisture/oil from fingers can reduce battery life and corrode the contacts.

## CLIMATE CONTROL FOR THIRD ROW SEATS

The third row seat climate control system provides fan controlled chilled air through the rear side vents.



E164877

Rotate the control to adjust the fan speed.

The third row seats climate settings can also be controlled and switched on/off via the Front climate touch screen menu. Press the Rear climate soft key to view the options.