

FOLDING THE REAR SEATS

⚠WARNING

Never allow passengers to ride in the cargo area. In a collision, people riding in these areas are more likely to be seriously injured or killed. Do not allow anyone to ride in any area of your vehicle that is not equipped for passengers. Be sure everyone in your vehicle is in a seat and using their seat belt properly.

⚠WARNING

In a collision or sudden stop, unsecured objects could be thrown inside the vehicle striking and injuring occupants. Always properly store and secure cargo and other objects in the vehicle. All items carried in the vehicle should be properly secured.

⚠WARNING

Make sure that when the seatback is raised, the locking mechanism is fully engaged.

FOLDING AND RAISING THE SLIDING SEATS

⚠WARNING

When raising the rear seats, make sure that seat belts are correctly routed and not trapped behind the seats.

The split-fold rear seat/s can be folded completely to accommodate large loads, or partially to accommodate large loads and still retain seating for passengers.




E164333

To fold a second row seatback: Lift the lever on the side of the seat and pull the seatback forwards until it locks into the lowered position.

To raise the seatback: Lift the lever to unlock the seatback, then lift the seatback until it locks firmly into the upright position.

Rear seats

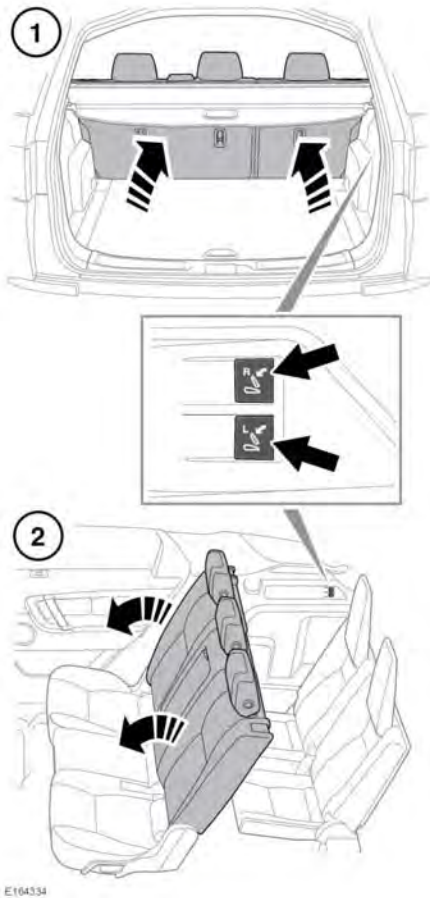

E164334

The second row seatbacks can be folded from inside the loadspace (1), or by the passengers occupying the third row seats (2):

- Pull back on the switch to release the seatback locking mechanism for the Right (R) or Left (L) side seatback.

Note: The switches will only operate when the vehicle is stationary and the tailgate is open.

- Push forward on the unlocked seatback to lower it into the folded position.

To reset: Lift the seatback into the upright locked position, using the lever on the side of the seat. Make sure the seatback locks firmly in the upright position.



E164335

Note: Before reclining the seat: If the loadspace cover is fitted, either slide the seat forwards or remove the loadspace cover.

To recline the second row seatback: Lift the lever on the side of the seat and push the seatback into the recline position.

To reset the seatback into the upright position: Lift the lever and pull the seatback forward into the upright position. Make sure the seatback locks firmly into the upright position.



E164345

To fold the center of the seatback: Press the release button on the top of the seatback, then fold the center of the seatback forwards into the lowered position.

To reset into the upright position: Lift the center of the seatback until it locks firmly into the upright position.

Note: The second row center seatbelt incorporates a locking feature to prevent the seatbelt from being pulled out too far when the seatback is folded flat. To reset this feature after folding the seat and returning to the upright position, pull the belt twice, the seatbelt will then operate as normal.



E164336

To move a rear seat forwards or back:

- Lift the bar at the front of the rear seat, then slide the rear seat into the required position.
- Release the bar and make sure the rear seat is locked firmly in position.

ACCESS POSITION (7 seat vehicle)

⚠WARNING

The vehicle must not be driven with the rear seats in the access position. Motion of the vehicle could cause the seatback to fall forwards suddenly, causing injury.



E104537

To tilt the seatback forwards: Pull the lever on the top of the seatback upwards (1) to release the locking mechanism, and then move the seatback forwards into the tilt position.

To move the seat forwards: Pull the lever on the front of the seat upwards (2) to release the locking mechanism, and then move the seat forwards.

⚠WARNING

When returning the seat from the access position, make sure the area under the seat is clear from obstructions that may prevent the seat from locking securely in place.

⚠WARNING

Make sure that when the seatback and seat are returned to the pre access position, the locking mechanisms are fully engaged. Physically test to make sure that the seat and seatback is secure before driving. Unsecured seats and seatbacks may not properly restrain an occupant during a collision or sudden stop.

FOLDING AND RAISING THE THIRD ROW SEATS

⚠WARNING


To reduce the risk of neck injury in the event of a collision or sudden stop, the head restraint must always be raised when a third row seat is occupied.

⚠WARNING

When raising the rear seats, make sure that the seat belts are correctly routed and not trapped behind the seats.

⚠WARNING

Beware of trapping fingers when raising and lowering the third row seat.

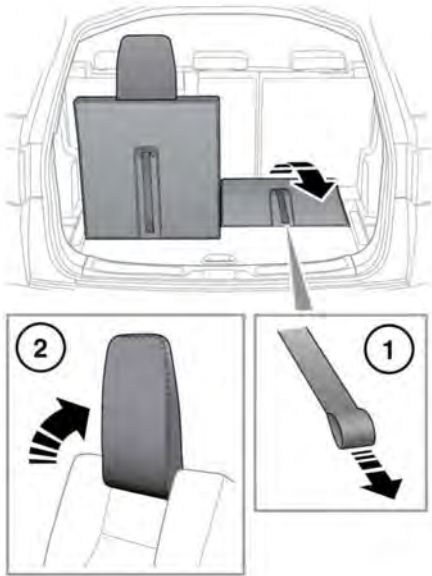



E163563

To raise a third row seat:

1. From inside the loadspace: On the seat to be raised, pull the strap on the rear of the seat to lift the seat into the raised position.

Note: The seat is heavy, so care should be taken when raising the seat.

2. From inside the vehicle: Lift the head restraint, until it locks into the upright position.

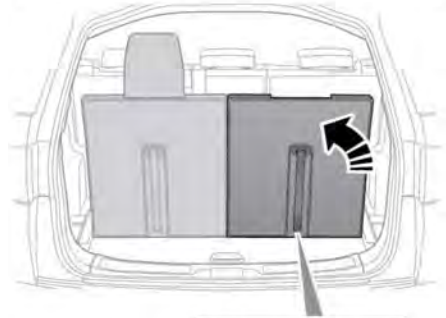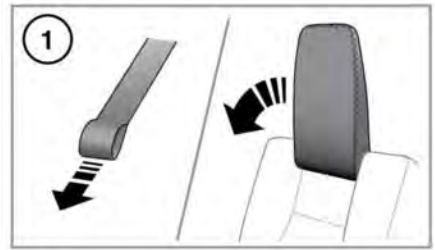

E163564

To fold a third row seat:

1. From inside the load space: Pull the strap on the rear of the seat to be folded, to release the head restraint locking mechanism. Then manually fold the head restraint forward.
2. To fold the seat: Pull the strap again, to release the seat locking mechanism, then fold the seat forwards into the stowed position.

Note: The seat is heavy, so care should be taken when lowering the seat.



INSTRUCTIONAL VIDEO



E166650