

NOTE: Should the vehicle have a high proportion of short journeys or operate in severe conditions, Land Rover recommends that the maintenance intervals be cut in half. Contact your Land Rover retailer for additional information and recommendations.

Maintenance Interval – whichever occurs first (based on expected vehicle display).													
	Type	A		B		A		B		A		B	
		Miles x 1000	Months	Kilometers x 1000	●	●	●	●	●	●	●	●	●
SERVICE													
Change engine oil and replace filter		15	30	45	60	75	90	105	120	135	150	●	●
VEHICLE INTERIOR													
Reset the Service Interval Indicator		●	●	●	●	●	●	●	●	●	●	●	●
Reset engine oil level indicator		●	●	●	●	●	●	●	●	●	●	●	●
Check operation of all lights, warning indicators and horn		●	●	●	●	●	●	●	●	●	●	●	●
Check operation of front/rear wiper washer systems		●	●	●	●	●	●	●	●	●	●	●	●
Check condition and security of seats and seat belts		●	●	●	●	●	●	●	●	●	●	●	●
VEHICLE EXTERIOR													
Check condition of wiper blades		●	●	●	●	●	●	●	●	●	●	●	●
Check operation of all door/flap/hood checks and catches; lubricate door checks		●	●	●	●	●	●	●	●	●	●	●	●
Lubricate all door edge seals		●	●	●	●	●	●	●	●	●	●	●	●
Conduct corrosion warranty inspection		●	●	●	●	●	●	●	●	●	●	●	●
ENGINE COMPARTMENT													
Check battery condition; check / top up electrolyte level		●	●	●	●	●	●	●	●	●	●	●	●
Check / top up fluid levels (brake, power steering, windshield washer)		●	●	●	●	●	●	●	●	●	●	●	●
Check / top up coolant level; check specific gravity		●	●	●	●	●	●	●	●	●	●	●	●
Check condition of accessory drive belt(s) and, if fitted, supercharger drive belt		●	●	●	●	●	●	●	●	●	●	●	●
Replace pollen filter		●	●	●	●	●	●	●	●	●	●	●	●
Change brake fluid: every 3 years													●
Change engine coolant: every 10 years													●

SERVICE	Maintenance Interval – whichever occurs first (based on expected vehicle display).														
	Type		A		B		A		B		A		B		
	Miles x 1000	Months	15	30	45	60	75	90	105	120	135	150	165	180	216
		Kilometers x 1000	24	48	72	96	120	144	168	192	216	240			
ENGINE COMPARTMENT (CONTINUED)															
Replace spark plugs									●						
Replace fuel filter															
Replace air cleaner elements: normally aspirated vehicles						●									
Replace air cleaner elements: supercharged vehicles						●				●					
Replace accessory drive belt(s)															●
Replace supercharger drive belt (supercharged vehicles)									●						
VEHICLE UNDERBODY															
NOTE: Remove all road wheels before inspecting brake components.															
Inspect brake pads for wear, calipers for leaks, and discs for condition			●	●	●	●	●	●	●	●	●	●	●	●	●
Lubricate wheel centers			●	●	●	●	●	●	●	●	●	●	●	●	●
Check adjustment of electronic parking brake			●	●	●	●	●	●	●	●	●	●	●	●	●
Inspect tire pressures, condition, and tread depth			●	●	●	●	●	●	●	●	●	●	●	●	●
NOTE: Refit wheels to opposite sides of the same axle, unless vehicle is fitted with unidirectional tires.															
Inspect exhaust system for leaks, security and damage			●	●	●	●	●	●	●	●	●	●	●	●	●
Inspect for fluid leaks			●	●	●	●	●	●	●	●	●	●	●	●	●
Inspect condition and operation of suspension and steering components			●	●	●	●	●	●	●	●	●	●	●	●	●
Inspect fuel, hydraulic and fluid pipes, hoses and unions			●	●	●	●	●	●	●	●	●	●	●	●	●
Inspect electrical harnesses, routing and connections			●	●	●	●	●	●	●	●	●	●	●	●	●
Replace all flexible brake hoses: every 6 years															●
Change transmission fluid and filter: every 10 years															●
Change rear locking differential oil															●
Change front and rear axle oil (non-locking differential): every 10 years															●
Change transfer box oil; replace drain and fill plugs and washers								●							●
Conduct road test; select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears			●	●	●	●	●	●	●	●	●	●	●	●	●