

**NOTE:** Should the vehicle have a high proportion of short journeys or operate in severe conditions, Land Rover recommends that the maintenance intervals be cut in half. Contact your Land Rover retailer for additional information and recommendations.

		Maintenance interval – whichever occurs first (based on expected vehicle display).									
	Type	A	B	A	B	A	B	A	B	A	B
Miles x 1000	15	30	45	60	75	90	105	120	135	150	
Months	12	24	36	48	60	72	84	96	108	120	
Kilometers x 1000	24	48	72	96	120	144	168	192	216	240	
<b>SERVICE</b>		●	●	●	●	●	●	●	●	●	●
Change engine oil and replace filter											
<b>VEHICLE INTERIOR</b>											
Reset the Service Interval Indicator		●		●		●		●		●	
Reset engine oil level indicator		●	●	●	●	●	●	●	●	●	
Check operation of all lights, warning indicators and horn		●	●	●	●	●	●	●	●	●	
Check operation of front/rear wiper/washer systems		●	●	●	●	●	●	●	●	●	
Check condition and security of seats and seat belts		●	●	●	●	●	●	●	●	●	
<b>VEHICLE EXTERIOR</b>											
Check condition of wiper blades		●		●		●		●		●	
Check operation of all door/flap/hood checks and catches; lubricate door checks		●	●	●	●	●	●	●	●	●	
Lubricate all door edge seals		●	●	●	●	●	●	●	●	●	
Conduct corrosion warranty inspection		●	●	●	●	●	●	●	●	●	
<b>ENGINE COMPARTMENT</b>											
Check battery condition; check/ top up electrolyte level		●	●	●	●	●	●	●	●	●	
Check / top up fluid levels (brake, power steering, windshield washer)		●	●	●	●	●	●	●	●	●	
Check condition of accessory drive belt(s) and, if fitted, supercharger drive belt		●	●	●	●	●	●	●	●	●	
Replace pollen filter		●	●	●	●	●	●	●	●	●	
Change brake fluid: every 3 years											●
Change engine coolant: every 10 years											

		Maintenance Interval – whichever occurs first (based on expected vehicle display).									
SERVICE	Type	A	B	A	B	A	B	A	B	A	B
	Miles x 1000	15	30	45	60	75	90	105	120	135	150
	Months	12	24	36	48	60	72	84	96	108	120
Kilometers x 1000											
24      48      72      96      120      144      168      192      216      240											
<b>ENGINE COMPARTMENT (CONTINUED)</b>											
Replace spark plugs											
Replace fuel filter											
Replace air cleaner elements; normally aspirated vehicles											
Replace air cleaner elements; supercharged vehicles											
Replace accessory drive belt(s)											
Replace supercharger drive belt (supercharged vehicles)											
<b>VEHICLE UNDERBODY</b>											
<b>NOTE:</b> Remove all road wheels before inspecting brake components.											
Inspect brake pads for wear, calipers for leaks, and discs for condition											
Lubricate wheel centers											
Check adjustment of electronic parking brake											
Inspect tire pressures, condition, and tread depth											
<b>NOTE:</b> Retfit wheels to opposite sides of the same axle, unless vehicle is fitted with unidirectional tires.											
Inspect exhaust system for leaks, security and damage											
Inspect for fluid leaks											
Inspect condition and operation of suspension and steering components											
Inspect fuel, hydraulic and fluid pipes, hoses and unions											
Inspect electrical harnesses, routing and connections											
Replace all flexible brake hoses: <b>every 6 years</b>											
Change transmission fluid and filter: <b>every 10 years</b>											
Change rear locking differential oil											
Change front and rear axle oil (non-locking differential): <b>every 10 years</b>											
Change transfer box oil; replace drain and fill plugs and washers											
Conduct road test; select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears											