

NOTE: Should the vehicle have a high proportion of short journeys or operate in severe conditions, Land Rover recommends that the maintenance intervals be cut in half. Contact your Land Rover retailer for additional information and recommendations.

		Maintenance Interval – whichever occurs first (based on expected vehicle display).																			
Type	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B					
Miles x 1000	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	
Months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	
Kilometers x 1000	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
Change engine oil and replace filter	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
VEHICLE INTERIOR																					
Reset the Service Interval Indicator	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Check operation of all lights, warning indicators and horn	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Check operation of front/rear wiper washer systems	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Check condition and security of seats and seat belts	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Replace pollen filter	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
VEHICLE EXTERIOR																					
Check condition of wiper blades	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Check operation of all door/flap/hood checks and catches; lubricate door checks	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Conduct corrosion warranty inspection	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
ENGINE COMPARTMENT																					
Check battery condition; check / top up electrolyte level	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Check / top up fluid levels (brake, power steering, windshield washer)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Check / top up coolant level; check specific gravity	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Check condition of accessory drive belt(s)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Change brake fluid: every 3 years																					
Change engine coolant: every 10 years																					

Maintenance Interval – whichever occurs first (based on expected vehicle display).																					
Type	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B	OIL A	OIL B					
Miles x 1000	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	
Months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	
Kilometers x 1000	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
ENGINE COMPARTMENT (CONTINUED)																					
Replace spark plugs										•											
Replace air cleaner element				•																	•
Replace accessory drive belt															•						
VEHICLE UNDERBODY																					
NOTE: Remove all road wheels before inspecting brake components.																					
Inspect brake pads for wear, calipers for leaks, and discs for condition					•																•
Lubricate wheel centers					•																•
Check operation of parking brake					•																•
Inspect tire pressures, condition, and tread depth					•																•
NOTE: Refit wheels to opposite sides of the same axle, unless vehicle is fitted with unidirectional tires.																					
Inspect exhaust system					•																•
Inspect for fluid leaks					•																•
Inspect condition and operation of suspension and steering components					•																•
Inspect fuel, hydraulic and fluid pipes, hoses and unions					•																•
Inspect electrical harnesses, routing and connections					•																•
Replace all flexible brake hoses: every 6 years																					
Change transmission fluid and filter: every 10 years																					
Change rear differential oil: every 10 years																					
Change transfer box oil: every 10 years																					
Conduct road test					•																•