

2010 MY Maintenance Schedule Range Rover Sport

NOTE: Should the vehicle have a high proportion of short journeys or operate in severe conditions, Land Rover recommends that the maintenance intervals be cut in half. Contact your Land Rover retailer for additional information and recommendations.

		Maintenance interval – whichever occurs first (based on expected vehicle display).							
	Type	A	B	A	B	A	B	A	B
SERVICE	Miles x 1000	15	30	45	60	75	90	105	120
	Months	12	24	36	48	60	72	84	96
	Kilometers x 1000	24	48	72	96	120	144	168	192
Charge engine oil and replace filter		●	●	●	●	●	●	●	●
VEHICLE INTERIOR									
Reset the Service Interval Indicator		●	●	●	●	●	●	●	●
Reset engine oil level indicator		●	●	●	●	●	●	●	●
Check operation of all lights, warning indicators and horn		●	●	●	●	●	●	●	●
Check operation of front/rear wiper/washer systems		●	●	●	●	●	●	●	●
Check condition and security of seats and seat belts		●	●	●	●	●	●	●	●
Replace pollen filter		●	●	●	●	●	●	●	●
VEHICLE EXTERIOR									
Check condition of wiper blades		●	●	●	●	●	●	●	●
Check operation of all door/flap/hood checks and catches; lubricate door checks		●	●	●	●	●	●	●	●
Conduct corrosion warranty inspection		●	●	●	●	●	●	●	●
ENGINE COMPARTMENT									
Check battery condition; check/ top up electrolyte level		●	●	●	●	●	●	●	●
Check / top up fluid levels (brake, power steering, windshield washer)		●	●	●	●	●	●	●	●
Check / top up coolant level; check specific gravity		●	●	●	●	●	●	●	●
Check condition of accessory drive belt(s) and, if fitted, supercharger drive belt		●	●	●	●	●	●	●	●
Change brake fluid: every 3 years									
Change engine coolant: every 10 years									
Clean debris from auxiliary oil cooler (supercharged vehicles)									
Replace spark plugs									
Replace fuel filter									

2010 MY Maintenance Schedule Range Rover Sport

		Maintenance Interval – whichever occurs first (based on expected vehicle display).									
		Type	A	B	A	B	A	B	A	B	A
SERVICE	Miles x 1000	15	30	45	60	75	90	105	120	135	150
	Months	12	24	36	48	60	72	84	96	108	120
Kilometers x 1000		24	48	72	96	120	144	168	192	216	240
ENGINE COMPARTMENT (CONTINUED)											
Replace air cleaner elements											●
Replace accessory drive belt(s)											●
Replace supercharger drive belt(s) (supercharged vehicles); every 7 years			●								
VEHICLE UNDERBODY											
NOTE: Remove all road wheels before inspecting brake components.											
Inspect brake pads for wear; calipers for leaks, and discs for condition		●	●	●	●	●	●	●	●	●	
Lubricate wheel centers		●	●	●	●	●	●	●	●	●	
Check adjustment of electronic parking brake		●	●	●	●	●	●	●	●	●	
Inspect tire pressures, condition, and tread depth		●	●	●	●	●	●	●	●	●	
NOTE: Refit wheels to opposite sides of the same axle, unless vehicle is fitted with unidirectional tires.											
Inspect exhaust system for leaks, security and damage		●	●	●	●	●	●	●	●	●	
Inspect for fluid leaks		●	●	●	●	●	●	●	●	●	
Inspect condition and operation of suspension and steering components		●	●	●	●	●	●	●	●	●	
Inspect fuel, hydraulic and fluid pipes, hoses and unions		●	●	●	●	●	●	●	●	●	
Inspect electrical harnesses, routing and connections		●	●	●	●	●	●	●	●	●	
Replace all flexible brake hoses; every 6 years											
Change transmission fluid and filter; every 10 years											
Change rear locking differential oil											
Change front and rear axle oil (non-locking differential); every 10 years											
Change transfer box oil; replace drain and fill plugs and washers											
Remove debris from between Dynamic Response valve block and chassis											
Replace filter in Dynamic Response valve block; replace lost fluid											
Conduct road test; select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears											