

**NOTE: Should the vehicle have a high proportion of short journeys or operate in severe conditions, Land Rover recommends that the maintenance intervals be cut in half. Contact your Land Rover retailer for additional information and recommendations.**

		Maintenance Interval – whichever occurs first (based on expected vehicle display).											
		Type		A	B	A	B	A	B	A	B	A	B
SERVICE	Miles x 1000	A	B	15	30	45	60	75	90	105	120	135	150
	Months	12	24	36	48	60	72	84	96	108	120	135	150
	Kilometers x 1000	24	48	72	96	120	144	168	192	216	240	270	300
Change engine oil and replace filter		●	●	●	●	●	●	●	●	●	●	●	●
<b>VEHICLE INTERIOR</b>													
Reset the Service Interval Indicator		●	●	●	●	●	●	●	●	●	●	●	●
Reset engine oil level indicator		●	●	●	●	●	●	●	●	●	●	●	●
Check operation of all lights, warning indicators and horn		●	●	●	●	●	●	●	●	●	●	●	●
Check operation of front/rear wiper washer systems		●	●	●	●	●	●	●	●	●	●	●	●
Check condition and security of seats and seat belts		●	●	●	●	●	●	●	●	●	●	●	●
Replace pollen filter		●	●	●	●	●	●	●	●	●	●	●	●
<b>VEHICLE EXTERIOR</b>													
Check condition of wiper blades		●	●	●	●	●	●	●	●	●	●	●	●
Check operation of all door/flap/hood checks and catches; lubricate door checks		●	●	●	●	●	●	●	●	●	●	●	●
Conduct corrosion warranty inspection		●	●	●	●	●	●	●	●	●	●	●	●
<b>ENGINE COMPARTMENT</b>													
Check / top up fluid levels (brake, power steering, windshield washer)		●	●	●	●	●	●	●	●	●	●	●	●
Check / top up coolant level; check specific gravity		●	●	●	●	●	●	●	●	●	●	●	●
Check condition of accessory drive belt(s)		●	●	●	●	●	●	●	●	●	●	●	●
Change brake fluid: <b>every 3 years</b>						●			●			●	
Change engine coolant: <b>every 10 years</b>										●			●
Replace spark plugs										●			●
Replace air cleaner elements								●					●
Replace accessory drive belt													●

Maintenance Interval – whichever occurs first (based on expected vehicle display).													
SERVICE	Type	A		B		A		B		A		B	
		Miles x 1000	Months	Kilometers x 1000	30	45	60	75	90	105	120	135	150
<b>VEHICLE UNDERBODY</b>													
<b>NOTE:</b> Remove all road wheels before inspecting brake components.													
Inspect brake pads for wear, calipers for leaks, and discs for condition			●	●	●	●	●	●	●	●	●	●	●
Lubricate wheel centers		●	●	●	●	●	●	●	●	●	●	●	●
Check adjustment of electronic parking brake		●	●	●	●	●	●	●	●	●	●	●	●
Inspect tire pressures, condition, and tread depth		●	●	●	●	●	●	●	●	●	●	●	●
<b>NOTE:</b> Refit wheels to opposite sides of the same axle, unless vehicle is fitted with unidirectional tires.													
Inspect exhaust system		●	●	●	●	●	●	●	●	●	●	●	●
Inspect for fluid leaks		●	●	●	●	●	●	●	●	●	●	●	●
Inspect condition and operation of suspension and steering components		●	●	●	●	●	●	●	●	●	●	●	●
Inspect fuel, hydraulic and fluid pipes, hoses and unions		●	●	●	●	●	●	●	●	●	●	●	●
Inspect electrical harnesses, routing and connections		●	●	●	●	●	●	●	●	●	●	●	●
Replace all flexible brake hoses: <b>every 6 years</b>		●	●	●	●	●	●	●	●	●	●	●	●
Change transmission fluid and filter: <b>every 10 years</b>													
Change rear locking differential oil													
Change front and rear axle oil (non-locking differential): <b>every 10 years</b>							●						
Change transfer box oil; replace drain and fill plugs and washers								●					
Conduct road test; select LOW range gears and drive the vehicle 3 – 4 vehicle lengths; then reselect HIGH range gears		●	●	●	●	●	●	●	●	●	●	●	●