


Air suspension

PRINCIPLE OF OPERATION

Operation

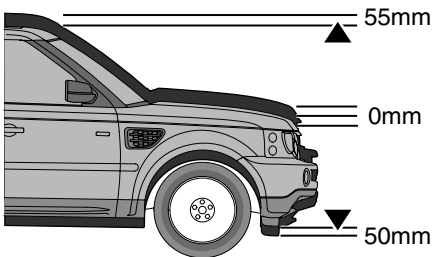

E90945

The air suspension system maintains the correct vehicle height by controlling the quantity of air in the vehicle's air springs.

Unless otherwise stated, height changes may only be made while the engine is running and the driver and passenger doors are closed.

When the air suspension system lifts the vehicle, it uses compressed air stored in its reservoir. The suspension will rise more slowly if this reservoir is depleted, usually due to repeated raising and lowering of the suspension.

Off-road height

This is 55 mm (2.2 in.) higher than the normal (on-road) height. It provides improved ground clearance and approach, departure and break-over angles. See **TECHNICAL SPECIFICATIONS** (page 243).

Off-road height can be selected at any speed up to 40 km/h (24 mph). When the system is at off-road height, the system selects on-road height if the vehicle speed exceeds 50 km/h (30 mph).

Note: If Terrain Response is in use, some of its programs/range combinations will adjust suspension height automatically

Note: If the trailer socket is in use, increased suspension height control is inhibited.

Extended mode

If the vehicle becomes grounded while at off-road height, and traction control is activated, the system automatically uses Extended mode to provide additional height. Extended mode cannot be selected manually.

Access height

WARNING



Ensure that the vehicle is clear of people and obstacles before lowering the suspension. The difference between off-road height and access height is 105 mm (4.1 in).

Access height is 50 mm (2.0 in.) lower than On-road height. It may ease entry, exit and loading of the vehicle.

The suspension rises from access height automatically when the vehicle speed exceeds 10 km/h (6 mph).

If you selected access height directly from off-road height, the system will return to off-road height when the vehicle speed exceeds 10 km/h (6 mph). Otherwise, the system will lift the suspension to on-road height.

High speed height

If the vehicle exceeds 160 km/h (100 mph) for longer than five seconds, the suspension ride height lowers by 20 mm (0.75 in). This action is automatic and cannot be over-ridden manually. Ride height will return to normal when vehicle speed remains below 130 km/h (80 mph) for at least 30 seconds.

Air suspension

Crawl mode

Crawl mode lock the vehicle at Access height and enables it to be driven at low speeds. This gives increased roof clearance, for example, in multi-storey car parks.

Crawl mode can only be selected when the vehicle speed is below 10 km/h (6 mph). When the vehicle is in this mode, On-road height will be selected automatically if the vehicle speed exceeds 40 km/h (24 mph).

Suspension warning indicator




The suspension warning lamp in the instrument pack illuminates both red and amber briefly as a bulb check when the starter is turned to position II.

If the lamp illuminates amber, a suspension fault has been detected, but the vehicle can still be driven normally.

If the lamp flashes red, a serious suspension fault has been detected and the vehicle should be driven carefully until qualified assistance can be obtained.

The warning lamp illumination is accompanied by a warning chime.

ADJUSTING THE SUSPENSION

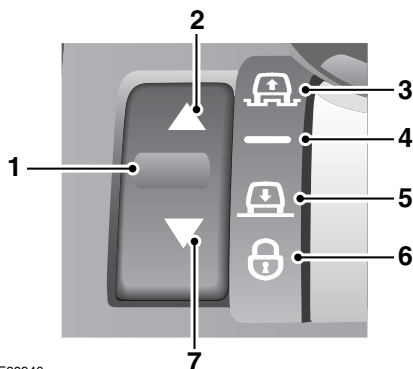

E90946

1. Raise/lower switch
2. Raising indicator
3. Off-road indicator
4. On-road indicator
5. Access indicator
6. Lock indicator
7. Lowering indicator

Suspension height indicators

Indicator lamps **2** or **7** illuminate to show the direction of movement. They will extinguish when the height change is complete.

If a height change is requested but disallowed, such as attempting to raise the height of the vehicle with the engine not running, indicator lamps **2** and **7** will flash twice and a chime sounds. A message is displayed on the message centre.

A flashing indicator lamp **2** or **7** indicates that the system is in a waiting state or that it will override the driver's choice if the speed criteria are exceeded.

Air suspension

Access height


If access height is selected while vehicle speed is above 20 km/h (12 mph), indicator lamps **5** and **7** flash while the system waits for the vehicle to slow. The access height request is cancelled if the vehicle does not slow sufficiently within one minute.

When the vehicle slows down to 20 km/h (12 mph), indicator lamp **4** will extinguish as the system goes to the part-lowered height. Indicator **5** will be lit and indicator lamp **7** will continue to flash.

The vehicle must slow down to 8 km/h (5 mph), within one minute to prevent access cancellation. Indicator lamps **5** and **7** will be lit. When access height is reached, indicator lamp **7** will extinguish.

Access height may be selected up to 40 seconds after the starter switch is turned off, if the driver's door has not been opened within this time.

Crawl mode (locked at Access height)

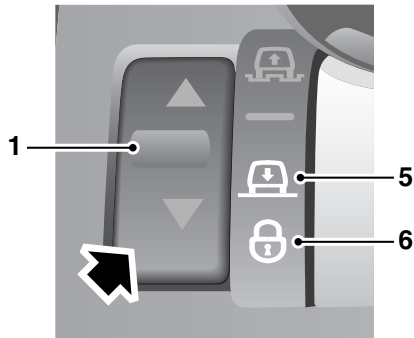

E90947

When the suspension is at on-road or access height and the vehicle speed is below 35 km/h (22 mph), press the raise/lower switch **1** in the down direction for one second. Indicator lamps **5** and **6** will illuminate to confirm the selection, and a chime will sound.

Locked at access height can be cancelled by pressing the raise/lower switch in the up direction for one second. Indicator **6** will extinguish.

Note: When locked at access height is cancelled, the suspension will rise to on-road height if the vehicle speed is greater than 10 km/h (6 mph).


Access height from off-road height

When the suspension is at off-road height, press switch **1** down, then press it again before indicator **7** goes out.

The system will return the suspension to off-road height automatically if the vehicle is driven above 10 km/h (6 mph).

Air suspension

Automatic height change warnings

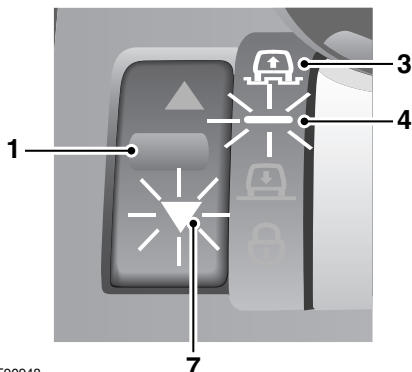

E90948


When the suspension is at off-road height, access or locked at access (crawl) height, the suspension height will change automatically when vehicle speed exceeds predetermined levels.

When the suspension is at off-road height or locked at access height, it warns the driver that the vehicle is approaching a speed threshold. A chime will sound, a message will be displayed on the message centre and the on-road indicator 4 and either 3 or 7 will flash.

The off-road height speed warning is shown above. If the vehicle slows down, the warning will disappear.

Door open override

If a door is opened during a height change while the vehicle is at rest, the height change will be restricted.

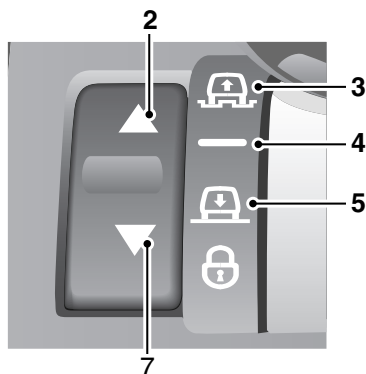

E90949

The indicator lamp for the target height 3, 4 or 5 will remain lit and the lifting indicator lamp 2 or the lowering indicator lamp 7 will flash.

The height change will resume if all of the doors are closed within 90 seconds.


If the doors are not closed within this time, the raising indicator 2 or the lowering indicator 7 will extinguish and the indicators showing the heights above and below the current position will be illuminated.

Selecting a new height using the raise/lower switch 1, or driving off will reset the system.

Air suspension

Extended mode

If the vehicle is grounded and traction control is activated, Extended mode is activated automatically to raise the vehicle clear.

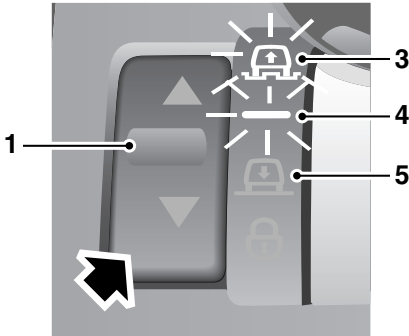

E90950

When extended mode is activated, indicator lamp **3** flashes. A message is displayed on the message centre. Indicators **3** and **4** will flash if the suspension is between Off-road and On-road heights.

To exit extended mode, either press the raise/lower switch **1** briefly up or down or drive the vehicle at a speed greater than 5 km/h (3 mph) for 30 seconds.

Note: *Extended mode cannot be selected manually.*

Additional lift whilst in extended mode

When extended mode is invoked and the automatic lifting of the vehicle has been completed, the driver can select an additional lift in order to clear the obstacle. This can be particularly useful when extended mode has been invoked on soft surfaces.

To request additional lifting, wait for the raising indicator **2** to extinguish then press and hold the switch **1** for three seconds whilst pressing the brake pedal. A chime will sound to confirm that the request has been accepted. Indicator **2** will be illuminated while the vehicle is being lifted.

To exit extended mode briefly press either the raise or lower switch. Alternatively, the vehicle will automatically lower if driven at a speed greater than 5 km/h (3 mph) for 30 seconds.

Suspension freeze

If the system is attempting to change the suspension height and it detects that the suspension is prevented from moving by an obstruction, all movements are frozen.

The indicators operate in the same way as described in extended mode and the same message will be displayed on the message centre. As in extended mode, to exit this freeze state, either press the switch **1** up or down, or drive the vehicle at a speed greater than 20 km/h (12 mph).

Air suspension

Remote operation

WARNING



The remote control will operate normally from inside the vehicle. It is therefore important to keep it out of reach of children at all times.

When operating the remote control from inside vehicle, ensure that a responsible adult checks for obstructions under the vehicle and supervises the lowering process.

Care should be taken with all suspension height changes when a trailer is attached to the vehicle.

The remote control can be programmed to operate the air suspension.

AIR SUSPENSION MESSAGES

When a message centre is fitted to the vehicle, messages relating to the air suspension system may be displayed.

Message	Meaning	What to do?
CAUTION! RISK OF GROUNDING WITH SUSPENSION AT NORMAL HEIGHT	When the Terrain Response system would normally have provided off-road height, but you have manually lowered the vehicle (or the system cannot raise the vehicle).	Raise suspension manually to off-road height if possible and appropriate.
RECOMMEND RAISING SUSPENSION TO OFF ROAD HEIGHT IN DEEP MUD-RUTS	In deep ruts you should raise the vehicle to off-road height. In low range, this is automatic. If mud/ruts program is used in high range, it must be done manually	Raise suspension manually to off-road height.
RESET SUSPENSION HEIGHT IF CLEAR OF OBSTACLE	Suspension still in extended mode.	If the vehicle is clear, select the required suspension.
SLOW DOWN OR VEHICLE WILL LOWER/RAISE	Vehicle will automatically lower/raise if vehicle speed increases.	Choose to slow down or accept height change.

Air suspension

Message	Meaning	What to do?
SUSPENSION CLOSE DOOR TO CHANGE HEIGHT	Air suspension height change is prevented because a door is open.	Close all doors.
SUSPENSION FAULT	A fault has been detected in the air suspension system. System operates normally.	Seek qualified assistance immediately.
SUSPENSION FAULT MAX SPEED 50 km/h (MAX SPEED 30 mph)	A major fault has been detected in the air suspension system and control lost.	Drive slowly until fault can be rectified.
SUSPENSION FAULT NORMAL HEIGHT ONLY	A fault has been detected in the air suspension system. Only normal height is available.	Seek qualified assistance immediately.
SUSPENSION FAULT STOP SAFELY STOP ENGINE	Major component failure.	Stop vehicle immediately and seek qualified assistance.
SUSPENSION SPEED TOO HIGH TO CHANGE HEIGHT	A height change has been requested but speed is too high to allow.	Reduce vehicle speed.
SUSPENSION START ENGINE TO RAISE VEHICLE	Vehicle height can only be raised with the engine running.	Start the engine.
SUSPENSION WILL RAISE WHEN SYSTEM COOLED	Air suspension compressor is cooling and lifting will resume at the correct temperature.	Wait for suspension to carry out lifting sequence.