

Note: A code number is stamped onto the underside of the adapter. If a replacement adapter is required, you will be asked to quote this number. Ensure that the number is recorded and kept safe, but should not be kept with the vehicle.

1. Insert the wheel nut adapter into the locking wheel nut, ensuring that it is fully engaged.
2. Locate the wheel brace over the adapter and unscrew the wheel nut half a turn counter clockwise.
3. After raising the vehicle on the jack, remove the locking wheel nut.

Note: After use store the wheel nut adapter correctly in the tool kit.

WHEEL CHANGING

Before raising the vehicle or changing a wheel, ensure that you read and comply with the following warnings.

- ⚠ Ensure that the jack is on firm level ground.**
- ⚠ Never place anything between the jack and the ground, or the jack and the vehicle.**
- ⚠ Position the jack from the side of the vehicle, in line with the appropriate jacking point.**
- ⚠ Do not attempt to raise the vehicle unless the jack head is fully engaged in the jacking point. Only jack the vehicle using the approved jacking points.**
- ⚠ WARNING - THAT NO PERSON SHOULD PLACE ANY PORTION OF THEIR BODY UNDER A VEHICLE THAT IS SUPPORTED BY A JACK.**

⚠ Take care when loosening the wheel nuts. The wheel brace may slip off if not properly attached and the wheel nuts may give way suddenly. Either unexpected movement, may cause an injury.

⚠ Take care when lifting the spare wheel and removing the punctured wheel. The wheels are heavy and can cause injuries if not handled correctly.



⚠ Do not start or run the engine while the vehicle is supported only by a jack.

⚠ Jack up the vehicle using only the jacking points described, or damage to the vehicle could occur.

Note: Your vehicle may be fitted with a tilt sensor which activates the alarm if the vehicle is tilted in any direction after it has been locked. To lock the doors while changing the wheel, and avoid the alarm activating, the tilt sensor can be temporarily disabled. See 59, VEHICLE INFORMATION AND SETTINGS MENU.

Before raising the vehicle, use the wheel nut brace to slacken the wheel nuts half a turn counter clockwise.

Wheel changing

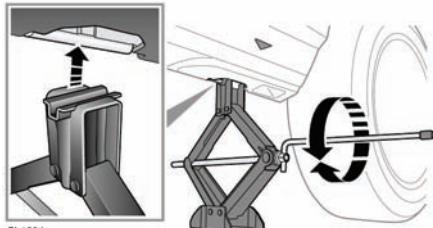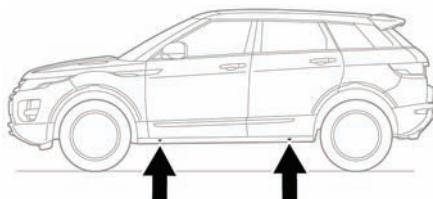

SL1884

1. Locate the jack under the relevant jacking point.


Note: Do not allow the jack to contact the sill at any other point as damage may result.

Note: The Sports pack sills include arrows to identify jacking points.

2. Attach the cranking lever to the jack using the adaptor. Fit the wheel nut brace to the end of the cranking lever.
3. Rotate clockwise to raise until the jack pin locates into the jacking point.
4. Continue raising the vehicle until the wheel is clear of the ground.
5. Remove the wheel nuts and place them together where they cannot roll away.
6. Remove the wheel and place to one side. Do not lay the wheel on its face, as this may damage the finish.
7. Fit the temporary spare wheel to the hub.
8. Re-fit the wheel nuts and lightly tighten them. Ensure that the wheel is making contact with the hub evenly.

9. Ensure that the space under the vehicle is clear of obstructions and lower the vehicle slowly and smoothly.

10. With all wheels on the ground and the jack removed, fully tighten the wheel nuts. The wheel nuts must be tightened in sequence (see illustration) to the correct torque of 133 Nm (98 lb.ft).

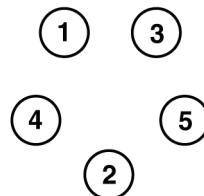

SL1140

Note: If it is not possible to torque the wheel nuts when a wheel is replaced, they should be set to the correct torque as soon as possible. Check and adjust the tyre pressure as soon as possible.