

REAR HEAD RESTRAINTS

⚠ WARNING

Adjust the head restraint so that the top of the head restraint is above the center line of the head. An incorrectly adjusted head restraint increases the risk of death or serious injury in the event of a collision or sudden stop.

⚠ WARNING

Do not drive or carry passengers with the head restraint removed from occupied seats. The absence of a correctly adjusted head restraint increases the risk of neck injury in the event of a collision or sudden stop.

⚠ WARNING


Head restraints are designed to support the head, not the back of the neck. The head restraint must be positioned correctly to restrain rearward movement of the head in a collision.

⚠ WARNING

Always store a removed restraint securely.

Head restraints may be removed, if required (e.g. to fit larger child seats). To remove a head restraint, first raise the head restraint to its uppermost position. With the adjusting collar pressed in, lift the restraint out of the seatback.

To refit a head restraint, ensure it is facing the correct direction, insert the stems of the head restraint into the sockets and push it downwards until at least the first click.

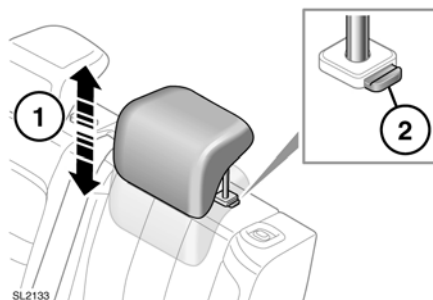

1. To raise, pull the restraint upwards.
2. To lower, press in the adjusting collar and push down on the restraint.