

⚠ WARNING

Switch off your telephone in areas with a high explosion risk. This includes filling stations, garages, fuel storage areas or chemical factories, as well as places where the air contains fuel vapor (such as an open vehicle hood), chemicals or metal dust. The telephone could trigger an explosion, or cause a fire.

⚠ WARNING


The functioning of cardiac pacemakers or hearing aids may be impaired when the phone is in use. Check with a doctor or manufacturer whether any such devices you or your passengers are using, are sufficiently protected against high-frequency energy.

⚠ WARNING

Always stow your cell phone securely. In an accident, loose items can cause injury.

The Health Industry Manufacturers' Association recommends that a minimum separation of 6in (15cm) is maintained between a wireless phone antenna and a pacemaker, to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by, and recommendations of, Wireless Technology Research.

STEERING WHEEL ICONS

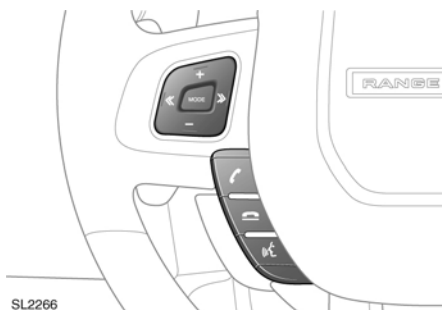

Connect. Press and release to send or accept a call or to access the last 10 dialed list. Press and hold to access the phonebook.



Disconnect. Use to end or reject a call.



Voice control talk button.



Press to increase call volume.



Press to decrease call volume.



Press to scroll up or down lists of calls or phonebook entries.

