


# Rear seats

## MANUAL SEATS

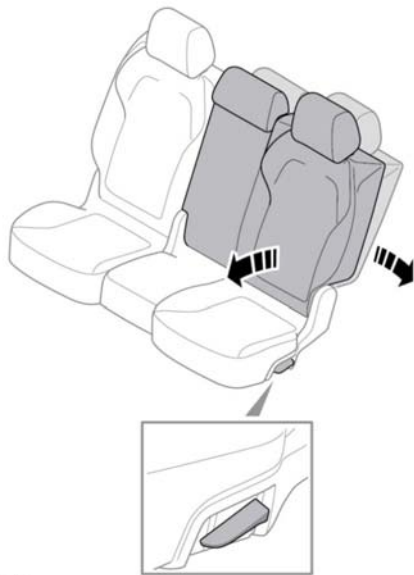

E149768

To adjust the angle of the seat back:

1. Lift the adjustment lever.
2. Adjust the seat back to the desired angle.
3. Release the adjustment lever.



E150342

Forward and back adjustment.

## PASSENGER SEAT AWAY




E150158





Use the switch for forward or rearward adjustment.

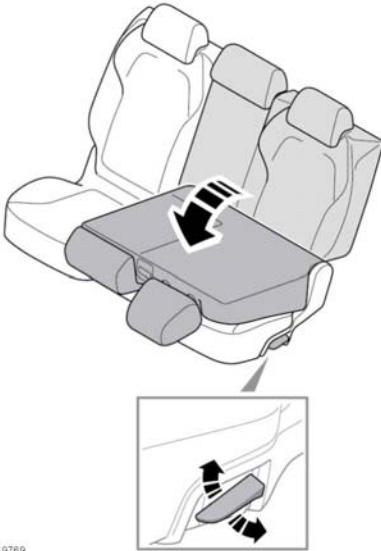The front passenger seat position can be adjusted to provide more space for rear seat occupants.

## FOLDING AND RAISING THE REAR SEATS



E149769

-  **Always make sure that objects carried in the vehicle are secured properly.**
-  **Never allow passengers to travel in the load space under any circumstances.**
-  **Make sure that when the seat back is raised, the locking mechanism is fully engaged.**
-  **When raising the rear seats, make sure the seat belts are correctly routed in the seat belt guides and not trapped behind the seats.**




**Make sure the head restraints are raised to the correct position before the seats are used by a passenger.**

Raise the release lever. The seat back will fold down against the seat cushion. Lift the seat back to raise to the upright position and make sure the seat back is locked firmly in position.

The split fold rear seat can be folded completely to accommodate large loads, or partially to accommodate large loads and still retain seating for passengers.

## REAR SEAT ACCESS

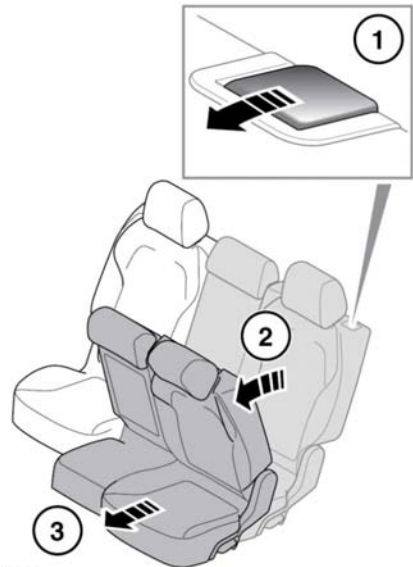

E150695

To access the third row seats.

1. Pull the seat back lever forwards.
2. Fold the seat back forward.
3. Slide the seat forwards.

## Rear seats

To return the seat to the upright position, slide the seat rearward and raise the seat back until the latching mechanism clicks into position.



**Make sure that when the seat back is raised, the locking mechanism is fully engaged.**




**When raising the rear seats, make sure that seat belts are correctly routed in the seat belt guides and not trapped behind the seats.**




**Make sure the head restraints are raised to the correct position before the seats are used by a passenger.**

## FOLDING AND RAISING THE THIRD ROW SEATS

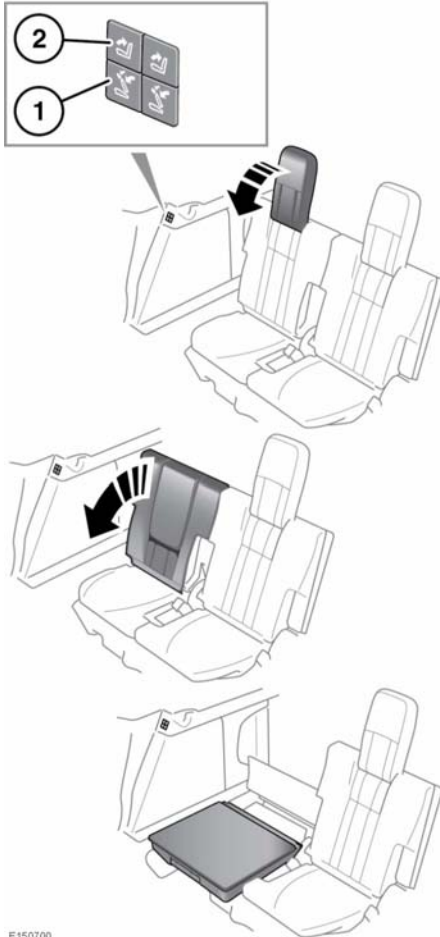


E150700

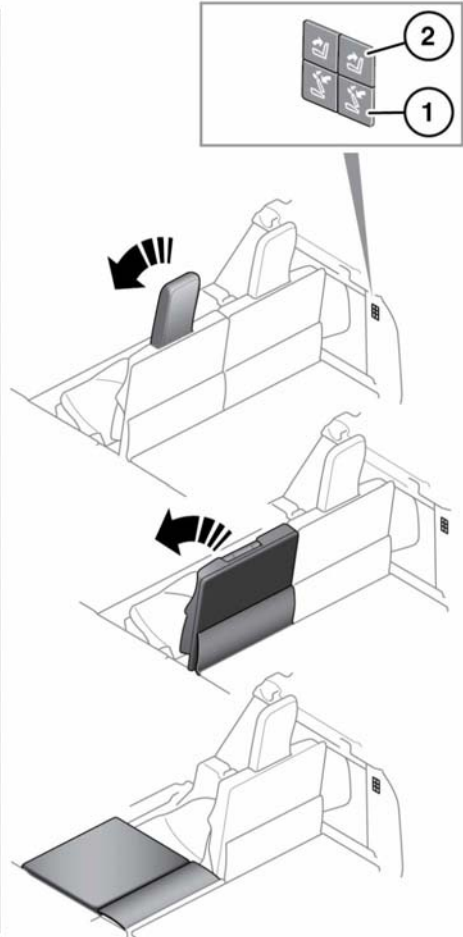


**⚠** To avoid injury, the loadspace cover must not be left in the installed position when the third row seats are occupied.

**⚠** Beware of trapping fingers when raising and lowering the third row seat.

**⚠** When raising the rear seats, make sure the seat belts are correctly routed into the seat belt guides and not trapped behind the seats.

 **Make sure nothing has been left under the third row seat, or in the footwell, when folding down the seat, as this could cause damage to the item or the seat.**

 **Always make sure that objects carried in the vehicle are secured properly.**

 **Never allow passengers to travel in the load space, under any circumstances.**


The third row seats can be folded or raised individually using the buttons located behind the second row seats or the side of the loadspace.


**Note:** *The loadspace cover must be removed before folding or raising the third row seats. This can be stored in the loadspace.*

- 1. To fold:** Press the button once, to fold the head restraint fully downwards. Press the button once again and the seat back will fold.
- 2. To raise:** Press to raise the seat back to the upright position.
- 3.** Manually raise the head restraint until it latches into position.


**Note:** *If the electric seats are operated more than 3 times through the full fold/raise sequence in quick succession, the system will be disabled for 2 minutes.*

 **The head restraint must always be raised when using the third row seats.**

 **Make sure that when the head restraint is raised, the locking mechanism is fully engaged.**

 The head restraint must always be folded down before folding the seat back.

### RESTRICTED REAR SEAT TRAVEL

 If electric seat movement stops unexpectedly during folding or raising, check for and remove any obstructions.

Once any obstructions have been removed, continue the seat movement by pressing the appropriate fold/raise button.

**Note:** *If no obstructions can be seen, and normal movement cannot be carried out, contact your Dealer/Authorised Repairer.*