

4. Position the seat belt so that it crosses your chest, midway between your neck and your shoulder. Fit the strap tightly across your hips; not across your stomach.

Make sure that your driving position is comfortable and enables you to maintain full control of the vehicle.

## **⚠ WARNING**


**Do not sit or lean unnecessarily close to the air bag. An inflating air bag can cause serious injury or even death. Always fasten your seat belt properly and position the seat so that you can sit as far back as possible from the air bag and still comfortably reach all of the controls.**

## **DRIVING POSITION MEMORY**

### **⚠ WARNING**

**Before activating the seat memory, make sure that the area immediately surrounding the seat is clear of obstructions and that all occupants are clear of moving parts.**

Once you have adjusted the power-operated driver's seat, steering column (see 27, **ADJUSTING THE STEERING WHEEL**), and exterior mirrors (see 61, **EXTERIOR MIRRORS**) for your ideal driving position, the vehicle can memorize these settings for future use.

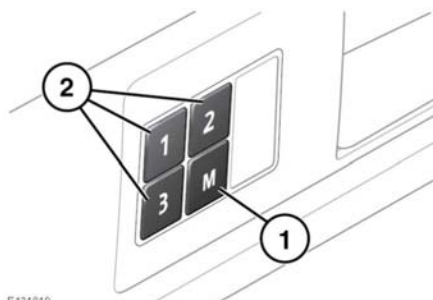

1. Press the Memory store (M) button to activate the memory function.
2. Press one of the preset buttons within 5 seconds to memorize the current settings. **MEMORY (1, 2 or 3) SETTINGS SAVED** will be displayed in the Message center, accompanied by an audible chime to confirm that the settings have been memorized.
3. To recall a stored position, press the relevant preset button. **MEMORY (1, 2 OR 3) RECALLED** will be displayed in the Message center.

A seat position will only be memorized during the 5 second active period.

Any existing settings will be over-written when programming a memory position.

## **FOLDING ARMREST**



If fitted, the folding armrest may be stowed by moving to the vertical position. Use the adjuster wheel (arrowed) to set the required height.