

⚠ When raising the rear seats, make sure that the seat belts are correctly routed into the seat belt guides and not trapped behind the seats.

⚠ Make sure that the head restraints are raised to the correct position before the seats are used by a passenger.

FOLDING AND RAISING THE THIRD ROW SEATS

⚠ To avoid injury, the loadspace cover must not be left in the installed position when the third row seats are occupied.

⚠ Beware of trapping fingers when raising and lowering the third row seat.

⚠ When raising the rear seats, make sure that the seat belts are correctly routed into the seat belt guides and not trapped behind the seats.


⚠ Make sure nothing has been left under the third row seat or in the foot-well, when folding down the seat, as this could cause damage to the item or the seat.

⚠ Always make sure that objects carried in the vehicle are secured properly.

⚠ Never allow passengers to travel in the loadspace, under any circumstances.

The third row seats can be folded or raised individually using the buttons located behind the second row seats, or inside the loadspace.

Note: The loadspace cover must be removed before folding or raising the third row seats. This can be stored in the loadspace.

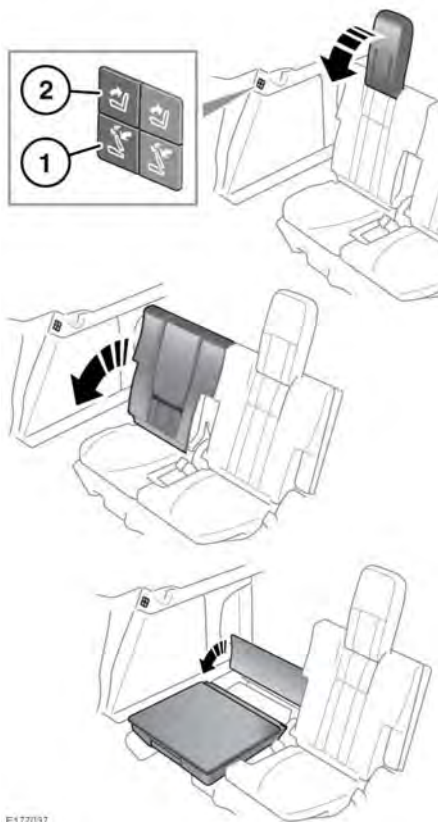

To fold and raise a third row seat from inside the vehicle:

1. To fold: Press the button once to fold the head restraint fully downwards. Press the button once again, and the seatback will fold.
2. To raise: Press to raise the seatback to the upright position.