
SETTING THE CLOCK AND DATE ON THE AUDIO UNIT


Setting the time format

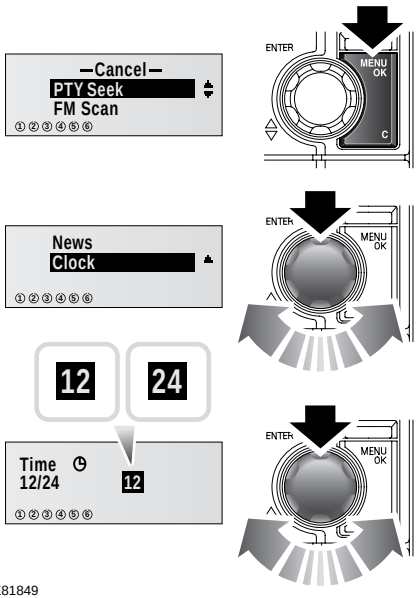

E81849

1. Press the **Menu/OK** button to access the clock menu.
2. Rotate the menu control to select **Clock**, then press the control to select.
3. Rotate the menu control to scroll between **12** and **24**, then press the control to select the required format.

Setting the time

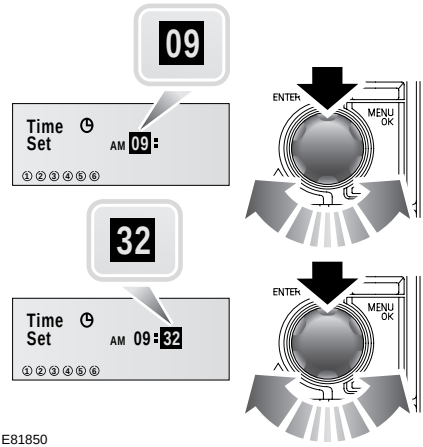

E81850

- Rotate the menu control until the correct hours setting is shown. Press the control to accept the setting.
- Rotate the menu control until the correct minutes setting is shown. Press the control to accept the setting.
- The display will return to the main menu.