
LOADING COMPACT DISCS

Inserting a disc - Standard audio

CAUTION

Do not force a disc into the slot.

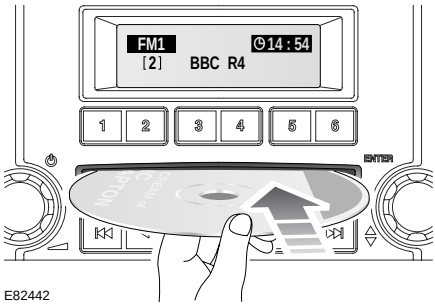

E82442


A compact disc can be loaded during any mode of play.

Ensure that the label side of the disc is facing upwards then partially insert the disc; the player mechanism will draw the disc in automatically.

Inserting a single disc - Premium audio

CAUTION

Do not force the disc into the slot.

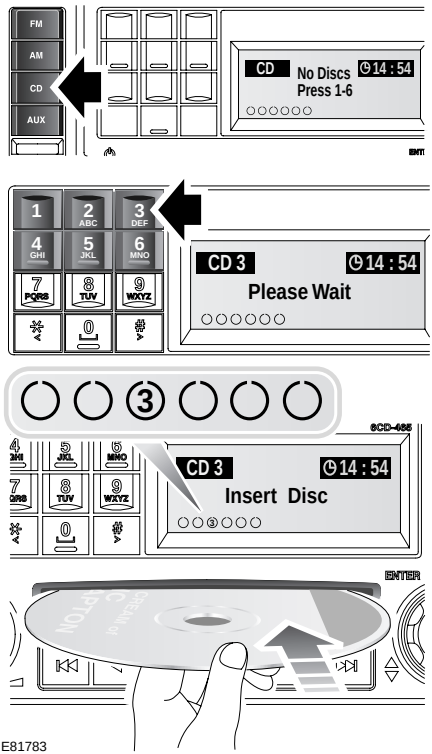


E81783

Press the **CD** mode button, then press the numbered button of the position in which the compact disc is to be stored. **Please Wait** will appear in the information display, followed by the instruction **Insert Disc**.

Note: *The six circles at the bottom left-hand side of the information display represent the six available CD positions. As soon as a CD is loaded, its number will appear in the circle.*

Ensure that the label side of the disc is facing upwards then partially insert the disc; the player mechanism will draw the disc in automatically.

Inserting multiple discs

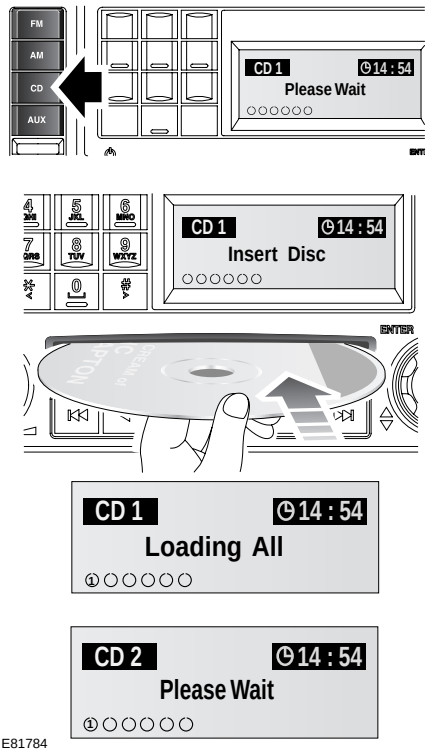

E81784

To insert more than one disc, briefly press the **CD** mode button. Then press and hold the **CD** mode button. The information display will show **Loading All**, followed by **Please Wait**.

When the message **Insert Disc** is displayed, the first disc can be inserted. The disc's position number will be highlighted on the information display screen both during and after loading.

Note: *If a compact disc fails to be drawn in, and the message* ***CD Error*** *is displayed, press the eject button to clear the error.*

If the error fails to clear contact your Land Rover Dealer/Authorised repairer.

This process is repeated until all six compact disc positions are occupied. If one or more of the disc positions is already occupied, that position will be skipped in the loading process.


Note: *To stop the loading process, either press and hold the* ***CD*** *mode button or press the* ***C*** *button.*

Note: *If there is a problem with a disc that has been loaded (inserted upside down, wrong format etc.),* ***Disc Error*** *will appear in the information display, and the disc in question will be ejected. If the problem can be corrected (disc upside down for example), then re-insert the disc in the correct manner. If the problem cannot be rectified, do not re-insert the disc.*

EJECTING COMPACT DISCS

CAUTION

Do not pull the disc from the player before it has stopped moving, this will damage the player mechanism.

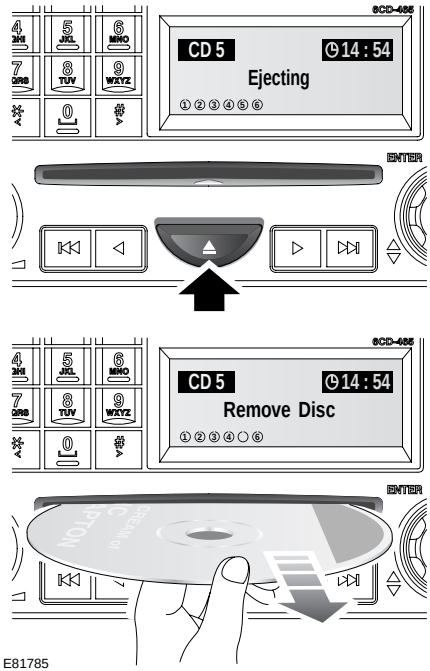


E81785

It is only possible to eject a single disc, if it is currently selected or playing.

To eject a disc, press the eject button briefly. **Ejecting** will be shown on the information display and, after a short pause, the disc will be presented. When the disc has stopped moving **Remove Disc** is displayed. The disc should now be removed.

Note: *If the disc is not removed from the slot within fifteen seconds, it will be drawn back into the player.*

EJECTING MULTIPLE COMPACT DISCS

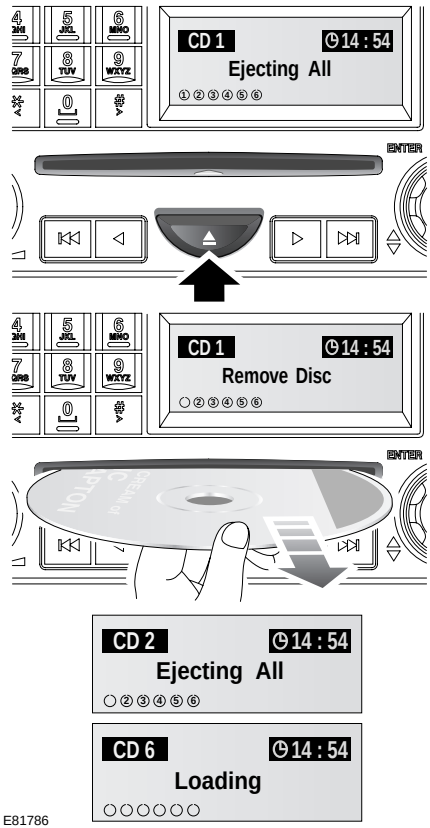

E81786


All the discs loaded in the player can be ejected in sequence. To eject all of the discs, press and hold the eject button. **Ejecting All** will be shown on the information display and, after a short pause, the first disc will be presented. When the disc has stopped moving **Remove Disc** is displayed. The disc should now be removed.

The discs will be ejected one at a time with a short pause in between each. Following the removal of the last disc, **Loading** will be shown in the information display.

To stop the process, press any number button.

Note: *If a disc is not removed from the slot within fifteen seconds, it will be drawn back into the player.*

COMPACT DISC SELECTION

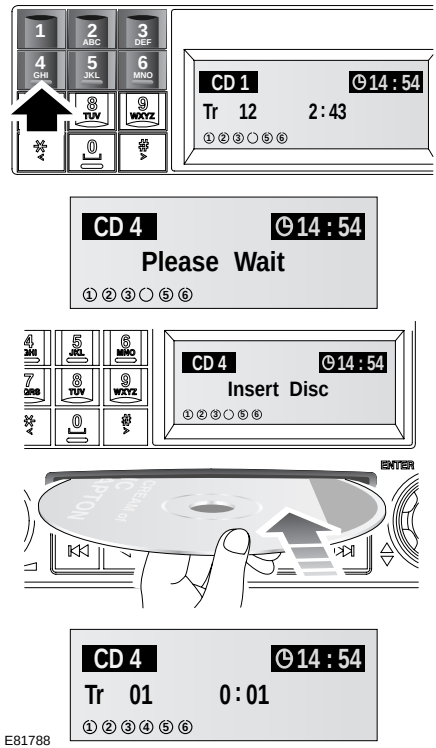


To start compact disc playback, briefly press the disc number required. If the position selected does not contain a disc, there will be a pause and the message **Insert Disc** will appear on the information display.

Once a disc has been inserted, there will be a pause whilst the player reads the disc information. Playback will then begin at the start of track one.

COMPACT DISC PLAYBACK


Standard audio

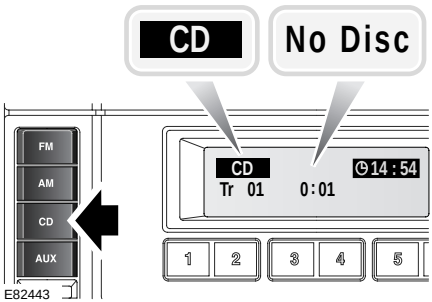


To start compact disc playback, briefly press the **CD** mode button.

Note: *If no disc is inserted, NO Disc will appear in the display. Playback will start as soon as a disc is inserted.*

Premium audio

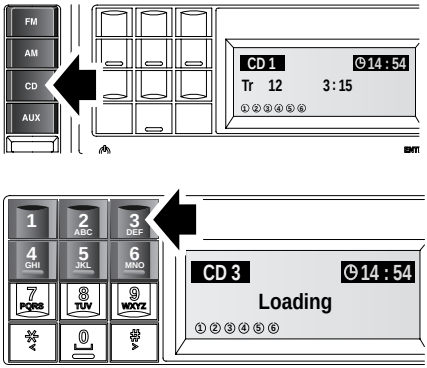

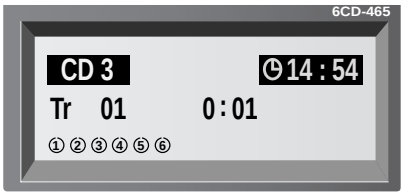


E81789

To start compact disc playback, briefly press the **CD** mode button, followed by the disc number required. If no disc number is selected, playback will begin at one of two places.

- If the discs have not been removed since their last use, playback will begin from the point at which it was stopped previously.
- If the discs have not been used since they were inserted, playback will begin at the start of disc one.

Compact disc player


TRACK SELECTION

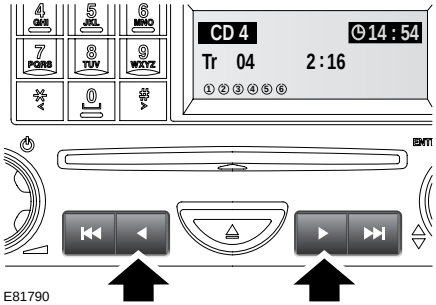

E81790

To search forwards or backwards through the current track, briefly press the relevant button.


COMPACT DISC PAUSE

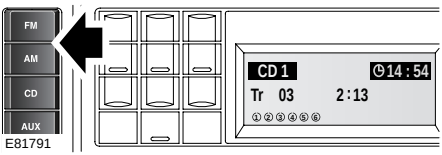

E81791


To pause or stop compact disc playback, briefly press one of the other mode buttons, **AM** or **FM** for example.

FAST FORWARD/REVERSE

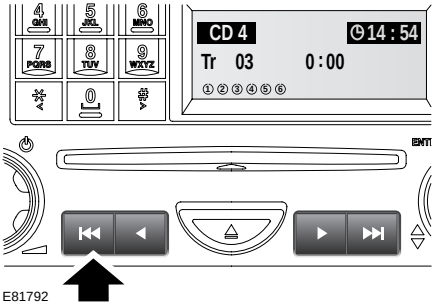

E81792


To return to the start of a track during playback, briefly press the button arrowed.

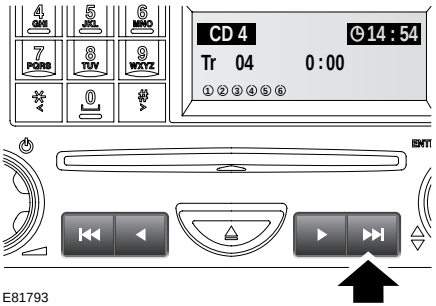

E81793

To fast forward to the beginning of the next track, briefly press the button arrowed.

COMPACT DISC FUNCTION MENU

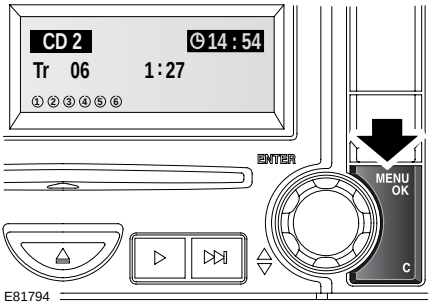


E81794


The following additional functions are available using the compact disc function menu:

- Random.
- CD scan.
- Repeat.

Select compact disc mode, then briefly press the **MENU/OK** button. Rotate the menu control to select the required function. Press the control to enable or disable the function.

SHUFFLE/RANDOM

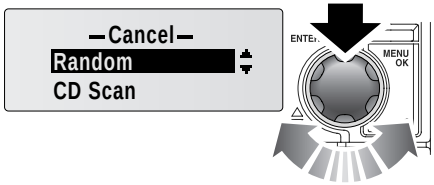

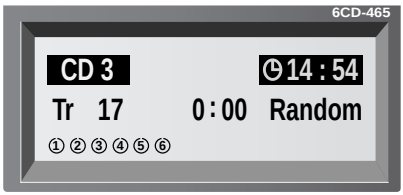


E81795


Shuffle/random alters the playback sequence for the current disc. The tracks are selected randomly by the player.

Rotate the menu control to select **Random** and press the control to enable the function.

To disable the function, rotate the menu control to select **Random** and press the control. Pressing the **C** button will also disable the function.

REPEAT COMPACT DISC TRACKS

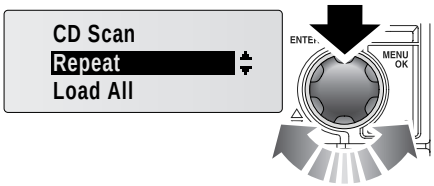

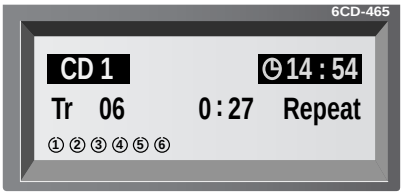

E81796


Repeat allows the current track to play repeatedly until it is stopped/ cancelled.


Rotate the menu control to select **Repeat** and press the control to enable the function.

To disable the function, rotate the menu control to select **Repeat** and press the control.

Pressing the **C** button, or the skip forward/next track or return to start/previous buttons, will also disable the function.

COMPACT DISC TRACK SCANNING

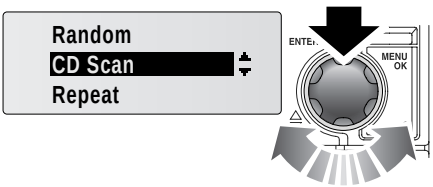

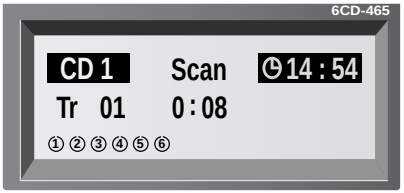

E81797


Compact disc track scan allows you to sample the music on a compact disc. This feature plays the first ten seconds of each track in numerical order. Play will then begin at the start of track one.

Rotate the menu control to select **CD scan** and press the control to enable the function.

To disable the function, rotate the menu control to select **CD scan** and press the control.

Pressing the **C** button, or the skip forward/next track or return to start/previous buttons, will also disable the function.

MP3 FILE PLAYBACK

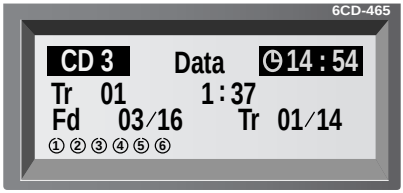

E81798

When a data disc (containing MP3 encrypted music data) is inserted into the compact disc slot, the information display will show additional folder and track information.

The first line of the information display shows that a data disc is inserted. The second line shows which track is being played and the play time of that track.

The third line shows which folder out of the total number of folders (**03/16**) and which track out of the total number of tracks available (**01/14**) is currently playing

A short press on the **#** or ***** keys selects the next or previous folder respectively. The number of that folder will change accordingly

When a new folder is selected, play will commence at the first track in that folder.

Within the current folder, track selection can be changed by use of the return to start/previous and skip forward/next track buttons. Track number in the display will change accordingly.

Note: *Blank or empty folders may be listed on screen, but they will be skipped when moving through the available folders.*

If an MP3 recording is made with a compression rate lower than 128k some Digital Signal Processing (DSP) functionality may be lost.

To ensure that the best sound quality is achieved the instructions/information provided with the recording software should be read carefully and adhered to.